

User's Guide for Nokia 6111

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION, declares that this product RM-82 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found from http://www.nokia.com/phones/declaration_of_conformity/.



Copyright © 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Visual Radio, Nokia Connecting People, Xpress-on, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software
Copyright © 1997-2006. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <<http://www.mpegla.com>>.

This Nokia device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to

the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Contents

For your safety	vii	Keypad lock (keyguard)	8
About your device	viii		
Network services	viii	3. Call functions	9
Shared memory	ix	Make a call	9
Enhancements	ix	Speed dialing	9
		Answer or reject a call	9
General information	x	Call waiting	10
Overview of functions	x	Options during a call	10
Access codes	x	4. Write text	11
Security code	x	Settings	11
PIN codes	x	Predictive text input	11
PUK codes	xi	Write compound words	11
Barring password	xi	Traditional text input	12
Configuration settings service	xi		
Download content and applications	xi	5. Menus	13
Nokia support and contact information	xii	6. Messaging	14
1. Get started	1	Text messages (SMS)	14
Open the slide phone	1	Write and send a SMS message ..	15
Install SIM card and battery	1	Read and reply to a SMS message	15
Install SIM card	1	Templates	15
Install battery	2	Multimedia messages (MMS)	16
Charge the battery	2	Write and send a MMS	16
Switch the phone on and off	3	Read a MMS and reply	17
Set the time, time zone, and date	3	Flash messages	17
Plug and play service	3	Write a flash message	18
Antenna	4	Receive a flash message	18
Wrist strap	4	Nokia Xpress audio messaging	18
2. Your phone	5	Create and send an audio message	18
Keys and parts	5	Receive an audio message	18
Standby mode	6	Memory full	18
Display	6	Folders	19
Active standby mode	6	E-mail application	19
Personal shortcut list	7	Write and send an e-mail	20
Shortcuts in the standby mode	7	Download e-mail	20
Power saving	7		
Indicators	7		

Read and reply to e-mail.....	20	Voice dialing.....	32
Inbox and other folders	20	Add and manage voice tags.....	32
Delete e-mail messages.....	21	Make a call by using a voice tag	33
Instant messaging (IM)	21	Speed dials	33
Access the IM menu	21	Info, service, and my numbers	33
Connect to the IM service.....	21		
Start an IM session	22	8. Log	34
Accept or reject an invitation.....	22	Recent calls lists.....	34
Read a received instant message	23	Counters and timers.....	34
Participate in a conversation	23	Positioning information	34
Edit your availability status.....	23		
Contacts for IM.....	23	9. Settings	35
Block and unblock messages.....	24	Profiles	35
Groups.....	24	Themes	35
Voice messages.....	24	Tones.....	35
Info messages	25	Display.....	36
Service commands	25	Standby mode settings	36
Delete messages.....	25	Other display settings	36
Message settings.....	25	Time and date	36
General settings.....	25	My shortcuts	37
Text messages and SMS		Left and right selection key.....	37
e-mail.....	25	Navigation key	37
Multimedia	26	Enabling standby.....	37
E-mail	27	Voice commands.....	37
		Connectivity	37
7. Contacts	28	Bluetooth wireless technology	38
Search for a contact.....	28	Infrared.....	39
Save names and phone numbers....	28	Packet data	40
Save details.....	28	Data transfer and	
Copy contacts	29	synchronization.....	41
Edit contact details	29	Data transfer with a compatible	
Delete contacts or contact details.	29	device.....	41
Business cards.....	29	Data transfer without SIM	
My presence.....	30	card.....	41
Subscribed names.....	30	Synchronize from a compatible	
Add contacts to the subscribed		PC.....	42
names.....	31	Synchronize from a server	42
View the subscribed names	31	USB data cable.....	42
Unsubscribe a contact	31	Call.....	43
Settings.....	31	Phone.....	43
Groups.....	32	Enhancements	44
		Configuration.....	44

Security	45	Add a one-to-one contact.....	60
Restore factory settings.....	46	PTT settings	60
10. Operator menu.....	47	Configuration settings.....	60
		Web	61
11. Gallery	48	14. Organizer.....	62
12. Media	49	Alarm clock	62
Camera	49	Stop the alarm	62
Camera modes and zoom	49	Calendar.....	62
Take a photo	49	Make a calendar note.....	63
Record a video clip.....	50	A note alarm.....	63
Camera settings.....	50	To-do list.....	63
Media player	50	Notes.....	63
Set up the phone for a streaming service	51	Calculator	64
Music player.....	51	Countdown timer	64
Play music tracks	51	Stopwatch	64
Music player options.....	52	15. Applications	66
Radio	52	Games	66
Listen to the radio	53	Launch a game	66
Tune a radio frequency.....	53	Game downloads.....	66
Basic radio functions	53	Game settings.....	66
Recorder.....	54	Collection.....	66
Record sound.....	54	Launch an application	66
Options after recording	55	Other application options.....	66
Equalizer.....	55	Download an application.....	67
13. Push to talk.....	56	16. Web	68
Push to talk channels.....	56	Set up browsing	68
Add a channel.....	56	Connect to a service.....	68
Receive an invitation	57	Browse pages.....	69
Switch PTT on and off	57	Browse with phone keys.....	69
Make and receive a PTT call	57	Options while browsing	69
Make a channel call	58	Direct calling.....	69
Make a one-to-one call	58	Appearance settings	69
Make a PTT call to multiple recipients.....	58	Cookies	70
Receive a PTT call.....	58	Scripts over secure connection	70
Callback requests.....	59	Bookmarks	70
Send a callback request	59	Receive a bookmark	71
Respond to a callback request	59	Download files.....	71
		Service inbox	71
		Service inbox settings.....	72

Cache memory	72
Browser security.....	72
Security module.....	72
Certificates	73
Digital signature	74

17. SIM services 75

18. PC connectivity..... 76

PC Suite	76
Packet data, HSCSD, and CSD	76
Data communication applications.	76

19. Battery information 77

Charging and discharging.....	77
Nokia battery authentication guidelines	78

20. Genuine Enhancements..... 80

Battery	80
Indoor	81
Nokia Travel Charger (AC-4)	81
Indoor and Vehicle.....	81
Nokia Classic Stereo Headset (HS-23)	81

21. Care and maintenance 82

22. Additional safety information 83

Operating environment.....	83
Medical devices.....	83
Vehicles.....	84
Potentially explosive environments	84
Emergency calls.....	85
Certification information (SAR).....	85

Index 87

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws.

Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions.

Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions.

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions.

Do not use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the EGSM 900 and GSM 1800 and 1900 networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect the privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as text messages, multimedia messages, audio messages, instant messaging service, e-mail, presence

enhanced contacts, mobile Internet services, content and application download, and synchronization with a remote Internet server, require network support for these technologies.

■ Shared memory

The phone has two memories. The following features may share the first memory: contacts, text messages, multimedia messages (but no attachments), instant messaging, groups, voice tags, calendar, and to-do notes. The second shared memory is used by files stored in *Gallery*, attachments of multimedia messages, e-mail, and Java™ applications. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java applications may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text messages, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

■ Enhancements

A few practical rules about accessories and enhancements.

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

General information

■ Overview of functions

Your phone provides many functions that are practical for daily use, such as a calendar, a clock, an alarm clock, a radio, and a built-in camera.

Your phone also supports the following functions:

- Enhanced data rates for GSM evolution (EDGE). See "[Packet data](#)", p. 40
- Extensible hypertext markup language (XHTML). See "[Web](#)", p. 61
- Audio messaging. See "[Nokia Xpress audio messaging](#)", p. 18
- Instant messaging. See "[Instant messaging \(IM\)](#)", p. 21
- E-mail application. See "[E-mail application](#)", p. 19
- Voice commands. See "[Voice dialing](#)", p. 32 and "[Voice commands](#)", p. 37
- Push to talk. See "[Push to talk](#)", p. 56
- Presence-enhanced contacts. See "[My presence](#)", p. 30
- Java 2 Platform, Micro Edition (J2ME™). See "[Applications](#)", p. 66

- Bluetooth technology. See "[Bluetooth wireless technology](#)", p. 38.

■ Access codes

Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. The preset code is 12345. To change the code, and to set the phone to request the code, see "[Security](#)", p. 45.

PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SIM card against unauthorized use. See "[Security](#)", p. 45.

The PIN2 code (4 to 8 digits) may be supplied with the SIM card and is required for some functions.

The module PIN is required to access the information in the security module. See "[Security module](#)", p. 72.

The signing PIN is required for the digital signature. See "[Digital signature](#)", p. 74.

PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) is required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact your local service provider for the codes.

Barring password

The barring password (4 digits) is required when using the *Call barring service*. See "Security", p. 45.

■ Configuration settings service

To use some of the network services, such as mobile Internet services, MMS, Push to talk, Nokia Xpress audio messaging, or remote Internet server synchronization, your phone needs the correct configuration settings. You may be able to receive the settings directly as a configuration message. After receiving the settings you need to save them on your phone. The service provider may provide a PIN that is needed to save the settings. For more information on availability, contact your network operator, service provider, nearest authorized Nokia dealer, or visit the support area on the Nokia Web site, www.nokia-asia.com/support.

When you have received a configuration message, *Configuration sett. received* is displayed.

To save the settings, select **Show > Save**. If the phone displays *Enter settings' PIN*, enter the PIN code for the settings, and select **OK**. To receive the PIN code, contact the service provider that supplies the settings. If no settings are saved yet, the received settings are saved and set as default configuration settings. Otherwise, the phone asks *Activate saved configuration settings?*

To discard the received settings, select **Exit** or **Show > Discard**.

To edit the settings, see "Configuration", p. 44.

■ Download content and applications

You may be able to download new content (for example, themes) to the phone (network service). Select the download function (for example, in the *Gallery* menu). To access the download function, see the respective menu descriptions. For the availability of different services, pricing, and tariffs, contact your service provider.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

■ **Nokia support and contact information**

For the latest version of this guide, downloads, services and additional information related to your Nokia product, please visit www.nokia-asia.com/support or your local Nokia web site. You may also download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at www.nokia-asia.com/phonesettings.

Should you still require assistance, please refer to www.nokia-asia.com/contactus.

To check for the nearest Nokia care center location for maintenance services, you may like to visit www.nokia-asia.com/repair.

1. Get started

■ Open the slide phone



To open the slide of the phone, push the upper part of the phone up.

■ Install SIM card and battery

Always switch the device off and disconnect the charger before removing the battery.

Keep all SIM cards out of the reach of small children.

 
For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

This device is intended for use with BL-4B battery.


The SIM card and its contacts can easily be damaged by scratches or bending. Be careful when handling, inserting, or removing the card.

Install SIM card


1. Make sure that the cover of the connector panel is closed.

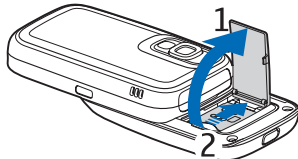

 
2. Slide the phone open.
3. Open the SIM card compartment (1) on the back of the slide.
4. Slide the metal SIM card holder towards the compartment lid to release it (2).
5. Open the SIM card holder.

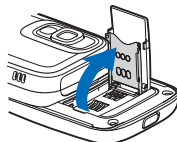

 
6. Insert the SIM card in the holder as shown (cut corner at the upper right).

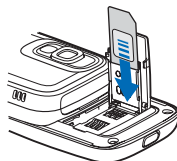

 7. Close the SIM card holder, and press it down slightly.

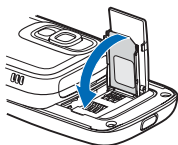

 8. To lock the SIM card holder, slide it away from the compartment lid (1).

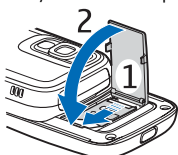


9. Close the SIM card compartment (2).

Install battery




Important: Always use original Nokia batteries. See "[Nokia battery authentication guidelines](#)", p. 78.

 1. Open the cover of the connector panel (1).




2. Press the red release button above the connector panel (2), and take off the back cover of the phone (3).

 3. Observe the battery contacts, and place the battery in the battery compartment.

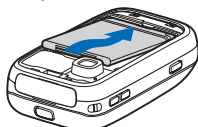

 4. Place the back cover in the double catch of the phone (1) and press it down slightly (2) to close the back cover.

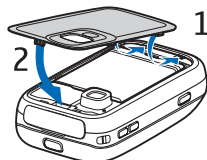

Charge the battery

 


Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

This device is intended for use when supplied with power from an AC-4 charger.

For availability of approved enhancements, please check with your dealer.

1. Connect the charger to a wall socket.

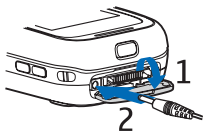

2. Open the cover of the connector panel (1).
3. Connect the lead from the charger to the socket on the bottom of your phone (2).

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger and the battery used. For example, charging a BL-4B battery with the AC-4 charger takes approximately 1 hour and 10 minutes while the phone is in standby mode.

■ Switch the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press the power key.



If the phone asks for a PIN or a UPIN code, enter the code (displayed as ****), and select **OK**.

Set the time, time zone, and date

 
Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date. See "[Time and date](#)", p. 36.

Plug and play service

When you switch on your phone for the first time, and the phone is in standby mode, you are asked to get the configuration settings from your service provider (network service). Confirm or decline the query. See "[Connect to service provider support](#)", p. 45, and "[Configuration settings service](#)", p. xi.


■ Antenna

Your device has an internal antenna.

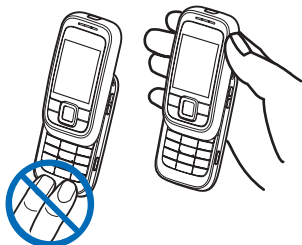

Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.

 
■ Wrist strap

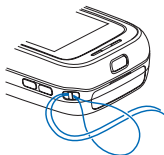

Apply the strap to the eyelet at the upper right corner of the phone as shown in the picture.


2. Your phone

 ■ Keys and parts

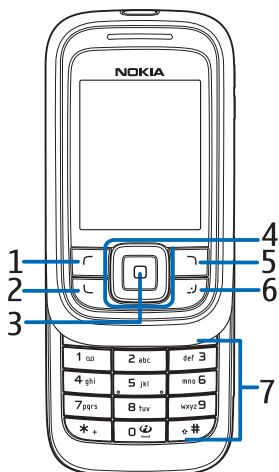


- 1 Left selection key
- 2 Call key
- 3 Middle selection key
- 4 4-way navigation key
- 5 Right selection key
- 6 End key
- 7 Keypad

 - 8 Volume up and PTT key and zoom in key

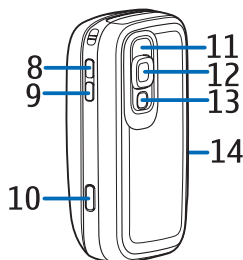

 - 9 Volume down key and zoom out key
- 10 Camera release key
- 11 Camera flash
- 12 Camera lens
- 13 Mirror for self-portraits
- 14 Infrared (IR) port
- 15 Power key

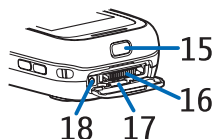


- 16 Pop-Port™ connector
- 17 Back cover release button
- 18 Charger connector

■ Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in standby mode.

Display

 1. Signal strength of the cellular network
2. Battery charge status

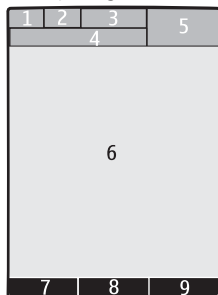

3. Indicators
4. Name of the network or the operator logo
5. Clock
6. Display area
7. Left selection key: **Go to** or another function that you selected.
8. Middle selection key: **Menu**
9. Right selection key: **Names**, or another function that you selected.

To set the left and right selection key function, see "[My shortcuts](#)", p. 37. Operator variants may have

an operator-specific name to access an operator-specific Web site.

Active standby mode

In standby mode, the main screen shows a list of selected phone features and information, that can be directly accessed: shortcut icons, audio functions, calendar, and notes. Scroll up or down to activate the navigation in the list. Select **Select** to start a feature or **View** to display information. Left and right arrows at the beginning and end of a line indicate that further information is available by scrolling left or right. To end the active standby navigation mode, press **Exit**.

To switch off the active standby mode select **Options** > **Active standby** > **Off** or **Menu** > **Settings** > **Display** > **Standby mode settings** > **Active standby** > **Off**.

To organize and change the active standby mode, activate the navigation mode, and select **Options** > **Active standby** > **My active standby** > **Options** and the following options:

Personalise – to assign or change phone features in standby mode

Organise – to move the position of features in standby mode

Enabling standby – select keys to enable the standby navigation mode

Personal shortcut list

The left selection key is **Go to**.

To view the functions in the personal shortcut list, select **Go to**. To activate a function select it.

To view a list with available functions, select **Go to** > **Options** > **Select options**. To add a function to the shortcut list, select **Mark**. To remove a function from the list, select **Unmark**.

To rearrange the functions on your personal shortcut list, select **Go to** > **Options** > **Organise**. Select the desired function, **Move**, and the place where you want to move the function.

Shortcuts in the standby mode

- To access the list of dialed numbers, press the call key once. Scroll to the number or name that you want; to call the number, press the call key.
- To open the web browser, press and hold **0**.
- To call your voice mailbox, press and hold **1**.
- Use the navigation key as a shortcut. See "**My shortcuts**", p. 37.

Power saving

The power saving mode is activated, when no function of the phone has been used for a certain period of time. Only a small area of the display stays visible and moves down the display. To activate the power saver, see **Power saver** in "**Display**", p. 36. To deactivate the screen saver, open the slide, or press any key.

Indicators



You received one or several text or picture messages. See "**Read and reply to a SMS message**", p. 15.



You received one or several multimedia messages. See "**Read a MMS and reply**", p. 17.



The phone registered a missed call. See "**Log**", p. 34.




The keypad is locked. See "**Keypad lock (keyguard)**", p. 8.





The phone does not ring for an incoming call or text message when **Incoming call alert** and **Message alert tone** are set to **Off**. See "**Tones**", p. 35.

 



The alarm clock is set to **On**. See "**Alarm clock**", p. 62.


 The phone is registered to the GPRS or EGPRS network.
See "[Packet data](#)", p. 40.

 A GPRS or EGPRS connection is established. See "[Packet data](#)", p. 40 and "[Browse pages](#)", p. 69.

 The GPRS or EGPRS connection is suspended (on hold), for example, if there is an incoming or outgoing call during an EGPRS dial-up connection.

 When the infrared connection is activated, the indicator is shown continuously.

 Bluetooth connection indicator. See "[Bluetooth wireless technology](#)", p. 38.

 Push to talk connection is active or suspended.
See "[Push to talk](#)", p. 56.

■ Keypad lock (keyguard)

To prevent the keys from being accidentally pressed, select **Menu**, and press * within 3.5 seconds to lock the keypad. In standby mode close the slide of the phone, and select **Lock** to lock the keys.

To unlock the keypad, slide the phone open, or select **Unlock**, and press * or **OK**, if slide is closed. If the *Security keyguard* is set *On*, enter the security code if requested.

To answer a call when the keyguard is on, press the call key, or slide the phone open. When you end or reject the call, the keypad automatically locks.

For *Automatic keyguard* and *Security keyguard*, see "[Phone](#)", p. 43.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

3. Call functions

■ Make a call

1. Enter the phone number, including the area code.

For international calls, press * twice for the international prefix (the + character replaces the international access code); then enter the country code, the area code without the leading 0, if necessary, and the phone number.

2. To call the number, press the call key.
3. To end the call or to cancel the call attempt, press the end key.

To accept or end a call by opening or closing the slide, see *Slide call handling* in "Call", p. 43.

To make a call using names, search for a name or phone number in *Contacts*. See "Search for a contact", p. 28. Press the call key to call the number.

To access the list of up to 20 numbers you last called or attempted to call, press the call key once in standby mode. To call the number, select a number or name, and press the call key.

Speed dialing

Assign a phone number to one of the speed-dialing keys, 2 to 9. See "Speed dials", p. 33. Call the number in either of the following ways:

- Press the speed-dialing key, then press the call key.
- If *Speed dialling* is set to *On*, press and hold a speed-dialing key until the call begins. See *Speed dialling* in "Call", p. 43.

■ Answer or reject a call

To answer an incoming call, press the call key. To end the call, press the end key, or close the slide. See *Slide call handling* in "Call", p. 43.

To reject an incoming call, press the end key, or if the phone is open, close the phone.

To mute the ringing tone, select *Silence*.



Tip: If *Divert if busy* is activated to divert the calls (for example, to your voice mailbox), rejecting an incoming call also diverts the call. See "Call", p. 43.

If a compatible headset supplied with a headset key is connected to the phone, to answer and end a call, press the headset key.

Call waiting

To answer the waiting call (network service) during an active call, press the call key. The first call is put on hold. To end the active call, press the end key.

To activate *Call waiting*, see "Call", p. 43.

■ Options during a call



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Many of the options that you can use during a call are network services. For availability, contact your service provider.

During a call, select *Options* and from the following options:

Call options are *Mute* or *Unmute*, *Contacts*, *Menu*, *Lock keypad*, *Record*, *Auto volume on*, *Loudspeaker* or *Handset*.

Network services options are *Answer* or *Reject*, *Hold* or *Unhold*, *New call*, *Add to conference*, *End call*, *End all calls* and the following:

Send DTMF — to send tone strings

Swap — to switch between the active call and the call on hold



Transfer — to connect a call on hold to an active call and disconnect yourself

Conference — to make a conference call that allows up to five persons to take part in a conference call

Private call — to discuss privately in a conference call

4. Write text

To enter text (for example, when writing messages), use traditional or predictive text input. When using traditional text input, press a number key, **1 to 9**, repeatedly until the desired character appears. In predictive text input you can enter a letter with a single keypress.

When you are writing text, predictive text input is indicated by  and traditional text input by  at the top of the display. **Abc**, **abc**, or **ABC** appear next to the text input indicator, indicating the character case.

To change the character case and the text input mode, press **#**. **123** indicates number mode. To change from the letter to number mode, press and hold **#**, and select *Number mode*.

■ Settings

To set the writing language, select **Options > Writing language**. Predictive text input is only available for the languages listed.

Select **Options > Dictionary on** to set the predictive text input or **Dictionary off** to set traditional text input.

■ Predictive text input

Predictive text input is based on a built-in dictionary to which you can add new words.

1. To start writing a word, use the **2 to 9** keys. Press each key only once for a single letter. The word changes after each keypress.
2. When you have finished writing the word and it is correct, to confirm it, press **0** to add a space, or press any of the navigation keys. Scroll to move the cursor.

If the word is not correct, press ***** repeatedly, or select **Options > Matches**. When the word that you want appears, confirm it.

If **?** is displayed after the word, the word you intend to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word (traditional text input is used), and select **Save**.

3. Start writing the next word.

Write compound words

Enter the first part of the word, and scroll right to confirm it. Write the next part of the word, and confirm the word.

■ Traditional text input

Press a number key, **1** to **9**, repeatedly until the desired character appears.

Not all characters available under a number key are printed on the key.

The characters available depend on the writing language. See "[Settings](#)", p. [11](#).

If the next letter you want is located on the same key as the present one, wait until the cursor appears, or press any of the navigation keys, and enter the letter.

The most common punctuation marks and special characters are available under the **1** key.

5. Menus

The phone offers you an extensive range of functions, which are grouped into menus.

1. To access the menu, select **Menu**.
To change the menu view, select **Options** > *Main menu view* > *List* or *Grid*.
2. Scroll through the menu, and select a submenu (for example, *Settings*).
3. If the menu contains submenus, select the one that you want (for example, *Call*).
4. If the selected menu contains further submenus, select the one that you want (for example, *Anykey answer*).
5. Select the setting of your choice.
6. To return to the previous menu level, select **Back**. To exit the menu, select **Exit**.


To rearrange the menu, scroll to the menu you want to move, and select **Options** > *Organise* > **Move**. Scroll to where you want to move the menu, and select **OK**. To save the change, select **Done** > **Yes**.

6. Messaging



The message services can only be used if they are supported by your network or your service provider.



Note: When the phone is sending the message, the animated  is shown. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.



Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Only devices that have compatible features can receive and display messages. The appearance of a message may vary depending on the receiving device.

■ Text messages (SMS)

Using the short message service (SMS) you can send and receive multipart messages made of several ordinary text messages (network service).

Before you can send any text or e-mail message, you must save your message center number. See "[Message settings](#)", p. 25.

To check SMS e-mail service availability and to subscribe to the service, contact your service provider.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages are sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.



At the top of the display, you can see the message length indicator counting backwards from the maximum number of characters supported by the phone.

Write and send a SMS message


Use the navigation key to jump from one input field or button to the next.

1. Select **Menu** > **Messaging** > **Create message** > **Text message**.
2. Enter the recipients phone number in the input field **To**; or select **Add** to select the phone number from various lists.
3. Enter a message in the **Message**: input field. See "Write text", p. 11. To insert text templates, a contact, or other items into the message, select **Options**. Sending a multipart message may cost more than sending one text message, see "Templates", p. 15.
4. To send the message select **Send**.

Read and reply to a SMS message

 is shown when you receive an SMS message or an SMS e-mail. The blinking  indicates that the message memory is full. Before you can receive new messages, delete some of your old messages in the **Inbox** folder.

To view a new message, select **Show**.
To view it later, select **Exit**.


To read the message later, select **Menu** > **Messaging** > **Inbox**. If more than one message is received, select the message that you want to read.  indicates an unread message.

While reading a message, select **Options** to delete or forward the message; edit the message as a text message or an SMS e-mail, or move it to another folder; or view or extract message details. You can also copy text from the beginning of the message to your phone calendar as a reminder note.

To reply to a message, select **Reply** > **Text message**, **Multimedia** or **Audio message**. Enter the reply message. When replying to an e-mail, first confirm or edit the e-mail address and subject.

To send the message to the displayed number, select **Send** or press the call key.

Templates

Your phone has text templates  that you can use in text or SMS e-mail messages.

To access the template list, select **Menu** > **Messaging** > **Saved items** > **Templates**.

■ Multimedia messages (MMS)

A multimedia message can contain text, sound, a picture, a calendar note, a business card, or a video clip. If the message is too large, the phone may not be able to receive it.

Some networks allow text messages that include an Internet address where you can view the multimedia message.

To set the settings for multimedia messaging, see "Multimedia", p. 26.

To check availability and to subscribe to the multimedia messaging service, contact your service provider.

You cannot receive multimedia messages during a call, a game, another Java application, or an active browsing session over GSM data.

Because delivery of multimedia messages can fail for various reasons, do not rely solely upon them for essential communications.

Write and send a MMS

1. Select **Menu** > **Messaging** > **Create message** > **Multimedia**.
2. To compose your message, select an input window, **Insert**, and from the following options.
Text — to write a text


Image, **Sound clip** or **Video clip** — to insert a file from **Gallery**, or to take a new image or to record a new video or sound clip to be added to the message

Business card — to insert a contact from **Names**

Calendar note — to insert a note from **Calendar**

Slide — to insert a slide to the message. Your phone supports multimedia messages that contain several pages (slides). Each slide can contain text, one image, a calendar note, a business card, and one sound clip. To open a desired slide if the message contains several slides, select **Options** > **Previous slide** or **Next slide**. To set the interval between the slides, select **Options** > **Slide timing**. To move a slide component within the message, select **Options** > **Move slide**.

3. To send the message, select **Send**. Enter the recipient's phone number in the input field **To**; or select **Add** to select the phone number from various lists. Optionally enter a text in the input field **Subject**:. Select the field **Presentation**: and **Edit** to add or remove multimedia objects. Select **Send** to move the message to the **Outbox** folder for sending.

While the multimedia message is being sent, the animated indicator  is displayed and you can use other functions on the phone. If the sending fails, the phone tries to resend it a few times. If this fails, the message remains in the *Outbox* folder, and you can try to resend it later.

If you select *Save sent messages* > *Yes*, the sent message is saved in the *Sent items* folder.

See "*Multimedia*", p. 26. When the message is sent, it is not an indication that the message has been received at the intended destination.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

 
Read a MMS and reply



Important: Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

When a multimedia message has been received, the text *Multimedia message received* is shown.

1. To read the message, select **Show**.

To view it later, select **Exit**. To read the message later, select **Menu** > *Messaging* > *Inbox*. In the list of messages,  indicates an unread message. Select the message that you want to view.

2. The function of the middle selection key changes according to the currently displayed attachment in the message:

To view the whole message if the received message contains a presentation, a sound clip, or view a video clip, select **Play**.

To view a business card or calendar note or to open a theme object, select **Open**.

3. To reply to the message, select **Options** > *Reply* > *Text message*, *Multimedia*, or *Audio message*. Enter the reply message, and select **Send**. You can send the reply message only to the person who sent you the original message. Select **Options** to access available options.

Flash messages

Flash messages are text messages that are instantly displayed upon reception.

Write a flash message

Select **Menu** > *Messaging* > *Create message* > *Flash message*. Write your message. The maximum length of a flash message is 70 characters.

Receive a flash message

A received flash message is not automatically saved. To read the message, select **Read**. To extract phone numbers, e-mail addresses, and Web site addresses from the current message, select **Options** > *Use detail*. To save the message, select **Save** and the folder in which you want to save the message.

■ Nokia Xpress audio messaging

With this menu, use the multimedia message service to create and send a voice message in a convenient way. Multimedia messaging service must be activated before this service can be used.

Create and send an audio message

1. Select **Menu** > *Messaging* > *Create message* > *Audio message*. The recorder opens. To use the recorder, see "Recorder", p. 54.
2. When you have stopped the recording, enter the recipients

phone number in the input field *To*, or select **Add** to select the phone number from various lists.

3. Scroll down to the message field, and select **Play** to check the message before sending. Select **Options** > *Replace sound clip* to repeat the recording, *Save message*, *Save sound clip* to save the recording in *Gallery*, or *Add subject* to insert a subject to the message.
4. To send the message, select **Send**.

Receive an audio message

When your phone is receiving an audio message, *1 audio message received* is shown. Select **Play** to open the message or select **Show** > **Play** if there are more than one message received. Select **Options** to see the options available. To listen to the message later, select **Exit**.

To save the message, select **Options** > *Save sound clip* and the folder in which you want to save the message.

■ Memory full

When you are receiving a message, and the memory for the messages is full, *Memory full. Unable to receive msgs.* is shown. To first delete old messages, select **OK** > **Yes** and the folder. Scroll to the desired message, and select **Delete**. If one or more messages are


marked, select **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

■ Folders

The phone saves received text and multimedia messages in the *Inbox* folder.

Multimedia messages that have not yet been sent are moved to the *Outbox* folder.

If you select **Menu** > *Messaging* > *Message settings* > *General settings* > *Save sent messages* > *Yes*, the sent messages are saved in the *Sent items* folder.

To save the message that you create and wish to send later in the *Saved items* folder, select **Options** > *Save message* > *Saved messages*.  indicates unsent messages.

To organize your text messages, you can add new folders for your messages. Select *Messaging* > *Saved items*.

To add a folder, select **Options** > *Add folder*. To delete or rename a folder, scroll to the desired folder, and select **Options** > *Delete folder* or *Rename folder*.

To move a file to an other folder, highlight the file, and select **Options** > *Move*.

Delivery reports contains delivery information on messages you have sent.

■ E-mail application

The e-mail application allows you to access your compatible e-mail account from your phone when you are not in the office or at home. This e-mail application is different from the SMS and MMS e-mail function.

Your phone supports POP3 and IMAP4 e-mail servers. Before you can send and retrieve any e-mail, you may need to do the following:

- Obtain a new e-mail account or use the current one. For availability of your e-mail account contact your e-mail service provider.
- For the settings required for e-mail, contact your e-mail service provider. You may receive the e-mail configuration settings as a configuration message. See "*Configuration settings service*", p. xi. You can also enter the settings manually. See "*Configuration*", p. 44.

To activate the e-mail settings, select **Menu** > *Messaging* > *Message settings* > *E-mail messages*. See "*E-mail*", p. 27.

This application does not support keypad tones.

Write and send an e-mail

1. Select **Menu** > *Messaging* > *E-mail* > *Create e-mail*.
2. Enter the recipient's e-mail address, a subject, and the e-mail message.

To attach a file to the e-mail, select **Options** > *Attach* and the file in *Gallery*.


3. Select **Send** > *Send now*.

Download e-mail

1. To access the e-mail application, select **Menu** > *Messaging* > *E-mail*.
2. To download e-mail messages that have been sent to your e-mail account, select *Retrieve*.

To download new e-mail messages and to send e-mail that has been saved in the *Outbox* folder, select **Options** > *Retrieve and send*.

To download first the headings of the new e-mail messages that have been sent to your e-mail account, select **Options** > *Check new e-mail*. Then, to download the selected e-mail, mark the desired ones, and select **Options** > *Retrieve*.

3. Select the new message in *Inbox*. To view it later, select **Back**.
 indicates an unread message.

Read and reply to e-mail



Important: Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device or PC.

Select **Menu** > *Messaging* > *E-mail* > *Inbox* and the desired message.

While reading the message, select **Options** to view the available options.

To reply to an e-mail, select **Reply** > *Empty screen* or *Original text*. To reply to many, select **Options** > *Reply to all*. Confirm or edit the e-mail address and subject; then write your reply. To send the message, select **Send** > *Send now*.

Inbox and other folders

Your phone saves e-mail that you have downloaded from your e-mail account in *Inbox* folder. *Other folders* contains the following folders: *Drafts* for saving unfinished e-mail, *Archive* for organizing and saving your e-mail, *Outbox* for saving e-mail that has not been sent, and *Sent items* for saving e-mail that has been sent.

To manage the folders and their e-mail content, select **Options** > *Manage folder*.

Delete e-mail messages

Select **Menu > Messaging > E-mail > Options > Manage folder** and the desired folder. Mark the messages that you want to delete. To delete them, select **Options > Delete**.

Deleting an e-mail from your phone does not delete it from the e-mail server. To set the phone to delete the e-mail also from the e-mail server, select **Menu > Messaging > E-mail > Options > Extra settings > Leave copy: > Delete retr. msg.**

■ Instant messaging (IM)

Instant messaging (network service) is a way to send short, simple text messages to online users.

Before you can use instant messaging, you must subscribe to the service. To check the availability and costs, and to subscribe to the service, contact your network operator, from whom you also receive your unique ID, password, and settings.

To set the required settings for the instant messaging service, see **Connect. settings** in “**Access the IM menu**”, p. 21. The icons and texts on the display may vary, depending on the instant messaging service.

Depending on the network, the active instant messaging conversation may

consume the phone battery faster, and you may need to connect the phone to a charger.

Access the IM menu

To access the menu while still offline, select **Menu > Messaging > Instant messages**. If more than one set of connection settings for the instant messaging service is available, select the desired one. If there is only one set defined, it is selected automatically.

The following options are shown:

Login — to connect to the instant messaging service

Saved convers. — to view, erase or rename the instant messaging conversations that you have saved during the instant messaging session

Connect. settings — to edit the settings needed for messaging and presence connection

Connect to the IM service




 

To connect to the instant messaging service, enter the **Instant messages** menu, activate an instant messaging service, and select **Login**. When the phone has successfully connected, **Logged in** is displayed.

To disconnect from the instant messaging service, select **Logout**.

Start an IM session





Open the *Instant messages* menu, and connect to the service. Start the service in different ways.

Select *Conversations* to view the list of new and read instant messages or invitations for instant messaging during the active instant messaging session. Scroll to the message or invitation that you want, and select **Open** to read the message.

 indicates the new and  read group messages.  indicates the new and  the read instant messages.  indicates the invitations.

The icons and texts on the display may vary, depending on the instant messaging service.

Select *IM contacts* to view the contacts that you have added. Scroll to the contact with whom you would like to chat, and select **Chat** or **Open** if a new contact is shown in the list.

To add contacts see "[Contacts for IM](#)", p. 23.  indicates the online and  the offline contacts in the phone contacts memory.  indicates a blocked contact.  indicates a contact that has been sent a new message.

Select *Groups > Public groups* to display the list of bookmarks to public groups provided by the network operator. To start an instant messaging

session with a group, scroll to a group, and select **Join**. Enter your screen name that you want to use in the conversation. When you have successfully joined the group conversation, you can start a group conversation. To create a private group, see "[Groups](#)", p. 24.

Select *Search > Users* or *Groups* to search for other instant messaging users or public groups on the network by phone number, screen name, e-mail address, or name. If you select *Groups*, you can search for a group by a member in the group or by group name, topic, or ID.

To start the conversation when you have found the user or the group that you want, select **Options > Chat** or *Join group*.

Start a conversation from *Contacts*, see "[View the subscribed names](#)", p. 31.

Accept or reject an invitation

In standby mode, when you are connected to the instant messaging service and you receive a new invitation, *New invitation received* is displayed. To read it, select **Read**.

If more than one invitation is received, scroll to the invitation you want, and select **Open**. To join the private group conversation, select **Accept**, and enter

the screen name; or to reject or delete the invitation, select **Options** > *Reject* or *Delete*.

Read a received instant message

In standby mode, when you are connected to the instant messaging service, and you receive a new message that is not a message associated with an active conversation, *New instant message* is displayed. To read it, select **Read**. If you receive more than one message, scroll to the message, and select **Open**.

New messages received during an active conversation are held in *Instant messages* > *Conversations*. If you receive a message from someone who is not in *IM contacts*, the sender ID is displayed. To save a new contact that is not in the phone memory, select **Options** > *Save contact*.

Participate in a conversation



To join or start an instant messaging session, select **Write**. Write your message, and select *Send* or press the call key to send it. Select **Options** to access available options.

Edit your availability status

1. Open the *Instant messages* menu, and connect to the instant messaging service.
2. To view and edit your own availability information or screen name, select *My settings*.
3. To allow all the other instant messaging users to see you when you are online, select *Availability* > *Available for all*.

To allow only the contacts on your instant messaging contact list to see you when you are online, select *Availability* > *Avail. for contacts*.

To appear as being offline, select *Availability* > *Appear offline*.

When you are connected to the instant messaging service,  indicates that you are online, and  indicates that you are not visible to others.

Contacts for IM

To add contacts to the instant messaging contacts list, connect to the instant messaging service, and select *IM contacts*. To add a contact to the list, select **Options** > *Add contact* or **Add** (if you have no contacts added) > *Enter ID manually*, *Search from serv.*, *Copy from server*, or *By mobile number*.

Scroll to a contact. To start a conversation, select **Chat** or **Options** and from the available options.

Block and unblock messages

To block messages, connect to the instant messaging service, and select *Conversations > IM contacts*; or join or start a conversation. Scroll to the contact from whom you want to block incoming messages, and select *Options > Block contact > OK*.

To unblock the messages, connect to the instant messaging service, and select *Blocked list*. Scroll to the contact from whom you want to unblock the messages, and select *Unblock*.

Groups

You can create your own private groups for an instant messaging conversation, or use the public groups provided by the service provider. The private groups exist only during an instant messaging conversation. The groups are saved on the server of the service provider. If the server you are logged on to does not support group services, all group-related menus are dimmed.

Public groups

Groups — You can bookmark public groups that your service provider may maintain. Connect to the instant messaging service, and select *Public groups*. Scroll to a group with which you want to chat, and select *Join*. If you are not in the group, enter your screen name as your nickname for the

group. To delete a group from your group list, select *Options > Delete group*.

To search for a group, select *Groups > Public groups > Search groups*. You can search for a group by a member in the group, by group name, topic, or ID.


Create a private group

Connect to the instant messaging service, and select *Groups > Create group*. Enter the name for the group and the screen name that you want to use. Mark the private group members in the contacts list, and write an invitation.

Voice messages

The voice mailbox is a network service and you may need to subscribe to it. For details, contact your service provider.

To call your voice mailbox, select *Menu > Messaging > Voice messages > Listen to voice messages*. To enter, search for, or edit your voice mailbox number, select *Voice mailbox number*.

If supported by the network,  indicates that there are new voice messages. Select *Listen* to call your voice mailbox number.

■ Info messages

Select **Menu** > *Messaging* > *Info messages*. With the *Info messages* network service, you can receive messages on various topics from your service provider. To check availability, topics, and the relevant topic numbers, contact your service provider.

■ Service commands

Select **Menu** > *Messaging* > *Service commands*. Write and send service requests (also known as USSD commands) to your service provider, such as activation commands for network services.

■ Delete messages

To delete messages, select **Menu** > *Messaging* > *Delete messages* > *By message* to delete single messages, *By folder* to delete all messages from a folder, or *All messages*. If a folder contains unread messages, the phone asks whether you want to delete them also.

■ Message settings

General settings

Select **Menu** > *Messaging* > *Message settings* > *General settings* and from the following options:

Save sent messages > *Yes* — set the phone to save the sent messages in the *Sent items* folder

Font size — to change the font size for reading and writing messages. *Large font* is only available for Latin fonts.

Graphical smileys > *Yes* — to replace character-based smileys with graphical ones

Text messages and SMS e-mail

The message settings affect the sending, receiving, and viewing of messages.

Select **Menu** > *Messaging* > *Message settings* > *Text messages* and from the following options:

Delivery reports — to ask the network to send delivery reports about your messages (network service)

Message centres and *E-mail message centres* — to edit the name and number of the message and e-mail delivery centres. The number can be obtained from the network operator.

Message centre in use or *E-mail centre in use* — to select the message centre to be used

Message validity — to select the length of time for which the network attempts to deliver your message

Messages sent via — to select the format of the messages to be sent: *Text*, *Paging*, or *Fax* (network service)

Use packet data > *Yes* — to set GPRS as the preferred SMS bearer

Character support > *Full* — to select all characters in the messages to be sent as viewed. If you select *Reduced*, characters with accents and other marks may be converted to other characters. When writing a message, you can check how the message will look to the recipient by previewing the message. See “[Write and send a SMS message](#)”, p. 15.

Reply via same centre > *Yes* — to allow the recipient of your message to send you a reply using your message center (network service)

Multimedia

The message settings affect the sending, receiving, and viewing of multimedia messages.

Select **Menu** > *Messaging* > *Message settings* > *Multimedia msgs.* and from the following options:

Delivery reports — to ask the network to send delivery reports about your messages (network service)

Default slide timing — to define the default time between slides in multimedia messages

Allow multimedia reception > *Yes* or *No* — to receive or to block the multimedia message. If you select *In home network*, you cannot receive multimedia messages when outside your home network.

Incoming multi-media messages > *Retrieve*, *Retrieve manually*, or *Reject* — to allow the reception of multimedia messages automatically, manually after being prompted, or to reject the reception

Allow adverts — to receive or reject advertisements. This setting is not shown if *Allow multimedia reception* is set to *No*.

Configuration settings > Configuration

— Only the configurations that support multimedia messaging are shown.

Select a service provider, *Default*, or *Personal config.* for multimedia messaging. Select *Account* and select a multimedia messaging service account contained in the active configuration settings.

E-mail

The settings affect the sending, receiving, and viewing of e-mail.

You may receive the configuration settings for the e-mail application as a configuration message.

See "*Configuration settings service*", p. xi. You can also enter the settings manually. See "*Configuration*", p. 44.

Select **Menu > Messaging > Message settings > E-mail messages** and from the following options:

Configuration — Select the set that you would like to activate.

Account — Select an account provided by the service provider.

My name — Enter your name or nickname.

E-mail address — Enter the e-mail address.

Include signature — Define a signature that is automatically added to the end of your e-mail when you write your message.

Reply-to address — Enter the e-mail address to which you want the replies to be sent.

SMTP user name — Enter the name that you want to use for outgoing mail.

SMTP password — Enter the password that you want to use for outgoing mail.

Display terminal window > Yes — To perform manual user authentication for intranet connections.

Incoming server type > POP3 or IMAP4

— Identify the type of e-mail system that you want to use. If both types are supported, select *IMAP4*.


Incoming mail settings — Select available options for POP3 or IMAP4.

7. Contacts



You can save names and phone numbers (*Contacts*) in the phone memory and in the SIM card memory.

The phone memory may save contacts with numbers and text items. You can also save an image for a certain number of names.

Names and numbers saved in the SIM card memory, are indicated by .

■ Search for a contact


Select **Menu** > *Contacts* > *Names*.
Scroll through the list of contacts, or enter the first letter of the name for which you are searching.

■ Save names and phone numbers

Names and numbers are saved in the used memory. Select **Menu** > *Contacts* > *Names* > *Options* > *Add new contact*. Enter the name and the phone number.

■ Save details

In the phone memory for contacts, you can save different types of phone numbers and short text items per name.

The first number you save is automatically set as the default number. It is indicated with a frame around the number type indicator (for example, ). When you select a name (for example, to make a call), the default number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*. See "*Settings*", p. 31.
2. Scroll to the name to which you want to add a new number or text item, and select **Details** > *Options* > *Add detail*.
3. To add a number, select *Number* and one of the number types.

To add another detail, select a text type or an image from *Gallery*.

To search for an ID from the server of your service provider if you have connected to the presence service, select *User ID* > *Search*. See "*My presence*", p. 30. If only one ID is found, it is automatically saved.

Otherwise, to save the ID, select **Options** > **Save**. To enter the ID, select *Enter ID manually*.

To change the number type, scroll to the desired number, and select **Options** > *Change type*. To set the selected number as the default number, select *Set as default*.

4. Enter the number or text item; to save it, select **Save**.
5. To return to standby mode, select **Back** > **Exit**.

■ Copy contacts

Search for the contact you want to copy, and select **Options** > *Copy*. You can copy names and phone numbers from the phone contact memory to the SIM card memory, or vice versa. The SIM card memory can save names with one phone number attached to them.

■ Edit contact details

1. Search for the contact you want to edit, select **Details**, and scroll to the desired name, number, text item, or image.
2. To edit a name, number, or text item, or to change an image, select **Options** > *Edit*.

You cannot edit an ID when it is on the *IM contacts* or *Subscribed names* list.

■ Delete contacts or contact details

To delete all the contacts and the details attached to them from the phone or SIM card memory, select **Menu** > **Contacts** > *Delete all contacts* > *From phone mem.* or *From SIM card*. Confirm with the security code.

To delete a contact, search for the desired contact, and select **Options** > *Delete contact*.

To delete a number, text item, or an image attached to the contact, search for the contact, and select **Details**. Scroll to the desired detail, and select **Options** > *Delete* > *Delete number*, *Delete detail*, or *Delete image*. Deleting an image from contacts does not delete it from *Gallery*.

■ Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact whose information you want to send, and select **Details** > **Options** > *Send bus. card* > *Via multimedia*, *Via text message*, *Via infrared*, or *Via Bluetooth*.

When you have received a business card, select **Show** > **Save** to save the business card in the phone memory. To discard the business card, select **Exit** > **Yes**.

■ My presence

With the presence service (network service) you can share your presence status with other users with compatible devices and access to the service. Presence status includes your availability, status message, and personal logo. Other users who have access to the service and who request your information are able to see your status. The requested information is shown in *Subscribed names* in the viewers' **Contacts** menu. You can personalize the information that you want to share with others and control who can see your status.

Before you can use presence, you must subscribe to the service. To check the availability, and costs, and to subscribe to the service, contact your network operator, from whom you also receive your unique ID, password, and the settings for the service. See "**Configuration**", p. 44.

While you are connected to the presence service, you can use the other functions of the phone; the presence service is active in the background. If you disconnect from the service,

your presence status is shown for a certain amount of time to viewers, depending on the service provider.

Select **Menu** > **Contacts** > **My presence** and select from the following options:

Connect to 'My presence' service or *Disconnect from service* — to connect to or disconnect from the service

View my presence — to view the status in *Private pres.* and *Public presence*

Edit my presence > *My availability*, *My presence message*, *My presence logo*, or *Show to* — to change your presence status

My viewers > *Current viewers*, *Private list*, or *Blocked list*

Settings > *Show current presence in idle*, *Connection type*, or *Presence settings*

■ Subscribed names

You can create a list of contacts whose presence status information you want to be aware of. You can view the information if it is allowed by the contacts and the network. To view these subscribed names, scroll through the contacts or use the *Subscribed names* menu.

Make sure that the memory in use is either *Phone* or *Phone and SIM*. See "**Settings**", p. 31.

To connect to the Presence service, select **Menu** > **Contacts** > **My presence** > **Connect to 'My presence' service**.

Add contacts to the subscribed names




1. Select **Menu** > **Contacts** > **Subscribed names**.
2. If you have no contacts on your list, select **Add**. Otherwise, select **Options** > **Subscribe new**. The list of your contacts is shown.
3. Select a contact from the list and if the contact has an user ID saved, the contact is added to the subscribed names list.


View the subscribed names

To view the presence information, see "[Search for a contact](#)", p. 28.

1. Select **Menu** > **Contacts** > **Subscribed names**.

The status information of the first contact on the subscribed names list is displayed. The information that the person wants to give to the others may include text and some of the following icons:

, , or  indicates that the person is available, discreet, or not available.

 indicates that the person's presence information is not available.

2. Select **Details** to view the details of the selected contact; or select **Options** > **Subscribe new**, **Chat**, **Send message**, **Send bus. card**, or **Unsubscribe**.

Unsubscribe a contact

To unsubscribe a contact from the **Contacts** list, select the contact and **Details** > the user ID > **Options** > **Unsubscribe** > **OK**.

To unsubscribe, use the **Subscribed names** menu. See "[View the subscribed names](#)", p. 31.

Settings

Select **Menu** > **Contacts** > **Settings** and from the following options:

Memory in use — to select SIM card or phone memory for your contacts

Contacts view — to select how the names and numbers in contacts are displayed

Name display — to view the **Last name first** or the **First name first** in the contacts list

Font size — to change the font size for reading and writing messages.

Large font is only available for Latin fonts.

Memory status — to view the free and used memory capacity

■ Groups

Select **Menu** > **Contacts** > **Groups** to arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images.

■ Voice dialing

You can make a phone call by saying a voice tag that has been added to a phone number. Any spoken words, such as a name, can be a voice tag. The number of voice tags you can create is limited.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

Add and manage voice tags

Save or copy to the phone memory the contacts for which you want to add a voice tag. You can also add voice tags to the names in the SIM card, but if you replace your SIM card with a new one, you first must delete the old voice tags before you can add new ones.

1. Search for the contact to which you want to add a voice tag.
2. Select **Details**, scroll to the desired phone number, and select **Options** > **Add voice tag**.
3. Select **Start**, and say clearly the words you want to record as a voice tag. After recording, the phone plays the recorded tag.



appears after the phone number with a voice tag in **Contacts**.

To check the voice tags, select **Menu** > **Contacts** > **Voice tags**. Scroll to the contact with the voice tag that you want, and select an option to listen to, delete, or change the recorded voice tag.

Make a call by using a voice tag

If the phone has an application running that is sending or receiving data using a packet data connection, you must end the application before voice dialing.

1. In standby mode, press and hold the volume down key or the right selection key. A short tone is heard, and *Speak now* is displayed.
2. Say the voice tag clearly. The phone plays the recognized voice tag, and dials the phone number of the voice tag after 1.5 seconds.

If you are using a compatible headset with the headset key, press and hold the headset key to start the voice dialing.

Speed dials

To assign a number to a speed-dialing key, select **Menu** > *Contacts* > *Speed dials*, and scroll to the speed-dialing number that you want.

Select *Assign*, or if a number has already been assigned to the key, select **Options** > *Change*.

Select **Search**, the name, then the number you want to assign. If the *Speed dialling* function is off, the phone asks whether you want to activate it. See also *Speed dialling* in "Call", p. 43.

To make a call using the speed-dialing keys, see "Speed dialing", p. 9.

Info, service, and my numbers

Select **Menu** > *Contacts* and from one of these submenus:

Info numbers — to call the information numbers of your service provider if the numbers are included on your SIM card (network service)

Service numbers — to call the service numbers of your service provider if the numbers are included on your SIM card (network service)

My numbers — to view the phone numbers assigned to your SIM card, if the numbers are included on your SIM card

8. Log



The phone registers the phone numbers of identified missed, received, and dialed calls; the message recipients; and the approximate length of your calls.

The phone registers if it is switched on and within the network's service area, and the network supports these functions.

Recent calls lists

Select **Menu > Log > Call log**, *Missed calls*, *Received calls*, *Dialled numbers*, or *Message recipients* to view the call lists. Select **Options** to view the time of a call; edit, view, or call the registered phone number; add it to the memory; or delete it from the list. You can also send a text message. To delete the recent calls lists, select *Clear log lists*.

Counters and timers



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding off for billing, taxes and so forth. Some timers may be reset during service or software upgrades.

Select **Menu > Log > Call duration**, *Packet data counter*, or *Packet data conn. timer* for approximate information on your recent communications.

Positioning information

The network may send you a positioning request. You can ensure that the network delivers positioning information of your phone only if you approve it (network service).

Contact your network operator to subscribe and to agree upon the delivery of positioning information.

To accept or reject the positioning request, select **Accept** or **Reject**. If you miss the request, the phone automatically accepts or rejects it according to what you have agreed with your network operator. The phone displays *1 missed position request*. To view the missed positioning request, select **Show**.

To view the information on the 10 most recent privacy notifications and requests or to delete them, select **Menu > Log > Positioning > Position log > Open folder** or *Delete all*.

9. Settings



■ Profiles

Your phone has various setting groups, called profiles, for which you can customize the phone tones for different events and environments.

Select **Menu** > **Settings** > **Profiles**.
Scroll to a profile, and select it.

To activate the selected profile, select **Activate**.

To set the profile to be active until a certain time up to 24 hours, select **Timed**, and set the time the profile setting shall end. When the time set for the profile expires, the previous profile that was not timed, becomes active.

To personalize the profile, select **Personalise**. Select the setting you want to change, and make the changes.

■ Themes

A theme contains many elements for personalizing your phone, such as wallpaper, screen saver, color scheme, and a ringing tone.

Select **Menu** > **Settings** > **Themes** and from the following options:

Select theme — to set a theme in your phone. A list of folders in **Gallery** opens. Open the **Themes** folder, and select a theme.

Theme downloads — to open a list of links to download more themes.
See "**Download files**", p. 71.

■ Tones

You can change the settings of the selected active profile.

Select **Menu** > **Settings** > **Tones**.
Select and change the available tone options. You can find the same settings in the **Profiles** menu.
See "**Profiles**", p. 35.

To set the phone to ring only for calls from phone numbers that belong to a selected caller group, select **Alert for**.
Scroll to the caller group you want or **All calls**, and select **Mark**. Select **Save** to save the settings or **Cancel** to leave the settings unchanged.

If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

■ Display

Standby mode settings

Select **Menu** > *Settings* > *Display* > *Standby mode settings* and from the following options:

Active standby — to switch the active standby mode on or off and to organize and personalize the active standby mode. See “*Active standby mode*”, p. 6.

Wallpaper — to add the background image to the display in standby mode. To activate, or deactivate the wallpaper, select *On* or *Off*.

Select *Image* to select an image from the *Gallery* or *Slide set* and a folder in the *Gallery* to use the images in the folder as a slide set. To download more images for wallpaper, select *Graphic downloads*.

Idle state font colour — to select the color for the texts on the display in standby mode

Navigation key icons > *On* — to display the icons of the current navigation key shortcuts in standby mode when active standby is off

Operator logo — to set your phone to display or hide the operator logo. The menu is dimmed, if you have not saved the operator logo. For more information on availability of an operator logo, contact your network operator.

Cell info display > *On* — to display the cell identity, if available from the network

Other display settings

Select **Menu** > *Settings* > *Display* and from the following options:

Screen saver > *On* — to activate the screen saver for the main display. To set the time after which the screen saver is activated, select *Time-out*. Select *Screen savers* to choose an *Image*, a *Slide set*, or a *Video clip* from the *Gallery* or *Digital clock* to be used as screensaver. To download more images for the screen saver, select *Graphic downloads*.

Power saver > *On* — to save some battery power. A digital clock is displayed when no function of the phone is used for a certain time.

Font size > *Messaging*, *Contacts*, or *Web* — to set the font size.

■ Time and date

To change the time, time zone, and date settings, select **Menu** > *Settings* > *Time and date* > *Clock*, *Date*, or *Auto-update of date/time* (network service).

When traveling to a different time zone, select **Menu** > *Settings* > *Time and date* > *Clock* > *Time zone* and the time zone of your location in terms of

the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich/London (UK).

Use for India (New Delhi) GMT +5.5, for Thailand/Indonesia/Vietnam GMT +7, for Singapore/Malaysia/Philippines GMT +8, for Australia (Sydney) GMT +10, and for New Zealand GMT+12.

■ My shortcuts

With personal shortcuts you get quick access to often used functions of the phone.

Left and right selection key

To set one phone function from a predefined list to the left or right selection key, select **Menu** > **Settings** > **My shortcuts** > **Left selection key** or **Right selection key**. See "**Standby mode**", p. 6. These menus may not be shown, depending on your service provider.


Navigation key

To assign other phone functions from a predefined list to the navigation key, select **Menu** > **Settings** > **My shortcuts** > **Navigation key**.

Enabling standby

To select keys to enable the standby navigation mode, select **Menu** > **Settings** > **My shortcuts** > **Enabling standby**.

Voice commands

To activate phone functions by saying a voice tag, select **Menu** > **Settings** > **My shortcuts** > **Voice commands**. Select a folder, scroll to a function to which you want to add a voice tag, and select **Add**.  indicates a voice tag.

To add a voice command, see "**Add and manage voice tags**", p. 32. To activate a voice command, see "**Make a call by using a voice tag**", p. 33.

■ Connectivity

You can connect the phone to a compatible device using an infrared, Bluetooth wireless technology, or USB data cable connection. You can also define the settings for packet data dial-up connections.

Bluetooth wireless technology

This device is compliant with Bluetooth Specification 1.1 supporting the following profiles: SIM access profile, object push profile, file transfer profile, dial-up networking profile, headset profile, hands-free profile, service discovery application profile, generic access profile, serial port profile, and generic object exchange profile. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduces the battery life.


Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters. Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of-sight, although the connection

can be subject to interference from obstructions such as walls or from other electronic devices.

Set up a Bluetooth connection

Select **Menu > Settings > Connectivity > Bluetooth**. Select from the following options:

Bluetooth > On or Off — to activate or deactivate the Bluetooth function.

 indicates an active Bluetooth connection.

Search for audio enhancements — to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.

Paired devices — to search for any Bluetooth device in range. Select **New** to list any Bluetooth device in range. Scroll to a device, and select **Pair**. Enter the Bluetooth passcode of the device to associate (pair) the device to your phone. You only must give this passcode when you connect to the device for the first time. Your phone connects to the device, and you can start data transfer.

Bluetooth wireless connection

Select **Menu** > *Settings* > *Connectivity* > *Bluetooth*. To check which Bluetooth connections are currently active, select *Active device*. To view a list of Bluetooth devices that are currently paired with the phone, select *Paired devices*.

Select **Options** to access some of the following functions depending on the status of the device and the Bluetooth connection. Select *Assign short name*, *Auto-conn. without confirmation*, *Delete pairing* or *Pair new device*.

Bluetooth settings

To define how your phone is shown to other Bluetooth devices, select **Menu** > *Settings* > *Connectivity* > *Bluetooth* > *Bluetooth settings* > *My phone's visibility* or *My phone's name*.

If you are concerned about security, turn off Bluetooth or set **My phone's visibility** to **Hidden**. Always accept only Bluetooth communication from others with whom you agree.

Infrared

You can set up the phone to send and receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data to or from a compatible phone or data device (for example, a computer) through the IR port of your phone.

Do not point the IR (infrared) beam at anyone's eyes or allow it to interfere with other IR devices. Infrared devices are Class 1 laser products.


When sending or receiving data, ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.

 
To activate the IR port of your phone to receive data using IR, select **Menu** > *Settings* > *Connectivity* > *Infrared*.

To deactivate the IR connection, select **Menu** > *Settings* > *Connectivity* > *Infrared*. When the phone displays *Deactivate infrared?*, select **Yes**.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is cancelled and must be started again.

IR connection indicator

When  is shown continuously, the IR connection is activated, and your phone is ready to send or receive data through its IR port.

When  blinks, your phone is trying to connect to the other device, or a connection has been lost.

Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an Internet protocol (IP) based network. GPRS is a data bearer that enables wireless access to data networks such as the Internet.

Enhanced GPRS (EGPRS) is similar to GPRS but enables faster connections. For more information on availability of EGPRS and data transfer speed, contact your network operator.

The applications that may use EGPRS are MMS, video streaming, Push to talk, browsing sessions, email, remote SyncML, Java application downloading, and the PC dial-up.

When you have selected GPRS as a data bearer, the phone uses EGPRS instead of GPRS if this is available in the network. You cannot select between EGPRS and GPRS, but for some applications you may be able to select GPRS or *GSM data* (circuit switched data, CSD).

Packet data settings

You can connect the phone using Bluetooth wireless technology, infrared, or USB data cable connection to a compatible PC and use the phone as a modem to enable EGPRS for packet data connectivity from the PC.

To define the settings for packet data connections from your PC, select *Menu > Settings > Connectivity > Packet data > Packet data settings > Active access point*, activate the access point you want to use, and select *Edit active access point*. Select *Alias for access point*, enter a name to change the access point settings, and select *OK*. Select *Packet data access point*, enter the access point name (APN) to establish a connection to an packet data network, and select *OK*.

You can also set the packet data dial-up service settings (access point name) on your PC using the Nokia Modem Options software. See "*PC Suite*", p. 76. If you have set the settings both on your PC and on your phone, the PC settings are used.

Data transfer and synchronization

Synchronize your calendar, contacts data, and notes with another compatible device (for example, a mobile phone, a compatible PC, or a remote Internet server (network service))

Partner list

To copy or synchronize data from your phone, the name of the device and the settings must be in the list of partners in transfer contacts. If you receive data from another device (for example, a compatible mobile phone), the partner is automatically added to the list, using the contact data from the other device. *Server sync* and *PC sync* are the original items in the list.

To add a new partner to the list (for example a new device), select **Menu** > *Settings* > *Connectivity* > *Data transfer* > **Options** > *Add contact* > *Phone sync* or *Phone copy*, and enter the settings according to the transfer type.

To edit the copy and synchronize settings, select a contact from the partner list and **Options** > *Edit*.

To delete a partner, select a contact from the partner list and **Options** > *Delete*, and confirm *Delete transfer contact?*. You cannot delete *Server sync* or *PC sync*.

Data transfer with a compatible device

For synchronization, Bluetooth wireless technology or infrared is used. The other device is in the standby mode.

To start data transfer, select **Menu** > *Settings* > *Connectivity* > *Data transfer* and the transfer partner from the list, other than *Server sync* or *PC sync*. According to the settings, the selected data is copied or synchronized. The other device also must be activated for receiving data.

Data transfer without SIM card

Your phone allows data transfer when the SIM card is not inserted.

Switch on your phone with no SIM card inserted, and select **Transfer** and from the following options:

Transfer contacts — to select a contact, other than *Server sync* and *PC sync*, from the partner list to transfer data from your phone. The phone starts a synchronization or copy session.

Receive data > *Via Bluetooth* or *Via infrared* — to receive data from the other phone

Synchronize from a compatible PC

Before you synchronize data from calendar, notes, and contacts from a compatible PC, you must install the Nokia PC Suite software on your phone on the PC. Use Bluetooth wireless technology, infrared, or a USB data cable for the synchronization, and start the synchronization from the PC.

Synchronize from a server

To use a remote Internet server, you must subscribe to a synchronization service. For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message. See "[Configuration settings service](#)", p. xi and "[Configuration](#)", p. 44.

If you have saved data on the remote Internet server, to synchronize your phone, start the synchronization from your phone.

Select **Menu** > **Settings** > **Connectivity** > **Data transfer** > **Server sync**. Depending on the settings, select **Initialising sync** or **Initialising copy**.

Synchronizing for the first time or after an interrupted synchronization may take up to 30 minutes to complete, if the contacts or calendar are full.

USB data cable

You can use the USB data cable to transfer data between the phone and a compatible PC or a printer supporting PictBridge. You can also use the USB data cable with Nokia PC Suite.

To activate the phone for data transfer or picture printing, connect the data cable; when the phone displays **USB data cable connected. Select mode.**, select **OK**. Select from the following modes:

Default mode — to use the cable for PC Suite

Printing — to print pictures directly from the phone using a compatible printer

To change the USB mode, select **Menu** > **Settings** > **Connectivity** > **USB data cable** > **Default mode** or **Printing**.

■ Call

Select **Menu** > **Settings** > **Call** and from the following options:

Call divert (network service) — to divert your incoming calls. You may not be able to divert your call, if some call barring functions are active. See **Call barring service** in “**Security**”, p. 45.

Anykey answer > **On** — to answer an incoming call, briefly press any key, except the end key, the camera release key and the left and right selection keys

Automatic redial > **On** — to set your phone to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt

Speed dialling > **On** — to activate speed dialing. To set up speed dialing, see “**Speed dials**”, p. 33. To dial, press and hold the corresponding number key.

Call waiting > **Activate** — to set the network to notify you of an incoming call while you have a call in progress (network service). See “**Call waiting**”, p. 10.

Summary after call > **On** — to briefly display the approximate duration and cost (network service) of the call after each call

Send my caller ID > **Set by network, Yes or No** (network service)

Line for outgoing calls — to select the phone line 1 or 2 to make calls, if supported by your SIM card (network service)

Slide call handling — to change the slide opening function to answer and end a call when the slide is opened or closed

■ Phone

Select **Menu** > **Settings** > **Phone** and from the following options:

Language settings — to set the display language of your phone, select **Phone language**. If you select **Automatic**, the phone selects the language according to the information on the SIM card.

To select the SIM card language, select **SIM language**.

Memory status — to view the free memory and the used memory in **Gallery, Messaging, Applications, and Bookmarks**.

Automatic keyguard — to set the keypad of your phone to lock automatically after a preset time delay when the phone is in standby mode and no function of the phone has been used. Select **On**, and you can set the time from 5 seconds to 60 minutes.

Security keyguard — to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select **On**. When the

keyguard is on, calls still may be possible to the official emergency number programmed into your device.

Cell info display > *On* — to receive information from the network operator depending on the network cell used (network service)

Welcome note — to enter a welcome note to be shown briefly when the phone is switched on

Operator selection > *Automatic* — to set the phone automatically to select one of the cellular networks available in your area. With *Manual*, you can select a network that has a roaming agreement with your home network operator.

Confirm SIM service actions — see "SIM services", p. 75

Help text activation — to select whether the phone shows help texts

Start-up tone — to select whether the phone plays a start-up tone when the phone is switched on

■ Enhancements

This menu is shown only if the phone is or has been connected to a compatible mobile enhancement.

Select *Menu* > *Settings* > *Enhancements*. You can select an enhancement menu if the corresponding enhancement is, or has been, connected to the phone.

Depending on the enhancement, select from the following options:

Default profile — to select the profile that you want to be automatically activated when you connect to the selected enhancement

Automatic answer — to set the phone to answer an incoming call automatically after 5 seconds.

If *Incoming call alert* is set to *Beep once* or *Off*, automatic answer is off.

Lights — to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a key press.

Text phone > *Use text phone* > *Yes* — to use the text phone settings instead of headset or loopset settings

■ Configuration

You can configure your phone with settings that are required for certain services to function correctly. The services are browser, multimedia messaging, remote Internet server synchronization, presence, and e-mail application. Get the settings from your SIM card, from a service provider as a configuration message, or enter your personal settings manually. You can store configuration settings from up to 20 service providers in the phone and manage them within this menu.

To save the configuration settings received by a configuration message

from a service provider, see
 “[Configuration settings service](#)”, p. xi.

Select **Menu** > **Settings** >
Configuration and from the following
 options:

Default configuration settings —
 to view the service providers saved in
 the phone. Scroll to a service provider,
 and select **Details** to view the
 applications that the configuration
 settings of this service provider
 support. To set the configuration
 settings of the service provider as
 default settings, select **Options** >
Set as default. To delete configuration
 settings, select **Options** > **Delete**.

Activate default in all applications —
 to activate the default configuration
 settings for supported applications

Preferred access point — to view the
 saved access points. Scroll to an access
 point, and select **Options** > **Details** to
 view the name of the service provider,
 data bearer, and packet data access
 point or GSM dial-up number.

Connect to service provider support —
 to download the configuration settings
 from your service provider

Personal configuration settings —
 to add new personal accounts for
 various services manually, and to
 activate or delete them. To add a new
 personal account if you have not added
 any, select **Add new**; otherwise, select
Options > **Add new**. Select the service

type, and select and enter each of the
 required parameters. The parameters
 differ according to the selected service
 type. To delete or activate a personal
 account, scroll to it, and select
Options > **Delete** or **Activate**.

■ Security

When security features that restrict
 calls are in use (such as call barring,
 closed user group and fixed dialling)
 calls still may be possible to the official
 emergency number programmed into
 your device.

Select **Menu** > **Settings** > **Security** and
 from the following options:

PIN code request — to set the phone to
 ask for your PIN or UPIN code every
 time the phone is switched on.
 Some SIM cards do not allow the code
 request to be turned off.

Call barring service — to restrict
 incoming calls to and outgoing calls
 from your phone (network service).
 A barring password is required.

Fixed dialling — to restrict your
 outgoing calls to selected phone
 numbers if this function is supported
 by your SIM card

Closed user group — to specify a group
 of people whom you can call and who
 can call you (network service)

Security level > **Phone** — the phone
 asks for the security code whenever a

new SIM card is inserted into the phone. Select *Memory* and the phone asks for the security code when SIM card memory is selected and you want to change the memory in use.

Access codes — to set the PIN code or UPIN code in use, or to change the security code, PIN code, UPIN code, PIN2 code, and barring password.

Code in use — to select whether the PIN code or UPIN code should be active.

PIN2 code request — to select whether PIN2 code is required when using a specific phone feature which is covered by the PIN2 code (depends on SIM card).

Authority certificates and *User certificates* — to view the list of the authority and user certificates downloaded into your phone.

See "*Certificates*", p. 73.

Security module settings — See "*Security module*", p. 72.

■ Restore factory settings

To reset some of the menu settings to their original values, select *Menu* > *Settings* > *Restore factory sett.*. Enter the security code. The data you have entered or downloaded are not deleted, for example, the names and phone numbers saved in *Contacts*.

10. Operator menu

This menu lets you access a portal to services provided by your network operator. The name and the icon depend on the operator. For more information contact your network operator. If this menu is not shown the following menu numbers change accordingly.

The operator can update this menu with a service message. For more information, see "[Service inbox](#)", p. 71.

11. Gallery



In this menu you can manage graphics, images, recordings, video clips, themes, and tones. These files are arranged in folders.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

The files stored in *Gallery* use a memory that may have a capacity of up to 23 MB depending on the size of the regional software on your phone.

To see the list of folders, select **Menu** > *Gallery*.

To see the available options of a folder, select a folder > **Options**.

To view the list of files in a folder, select a folder > **Open**.

To see the available options of a file, select a file > **Options**.

12. Media



Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred, or forwarded.

■ Camera

You can take photos or record video clips with the built-in camera.


The camera produces pictures in JPEG format and video clips in 3GP format.


When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others.

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

Camera modes and zoom



To start the camera in the still photo mode , press the camera release key, or select **Menu > Media > Camera**. To start the camera in the

video mode , press and hold the camera release key.

To use the camera, hold the phone in a horizontal position. Press in this position the navigation key left or right to change between still photo and video mode. Press the navigation key up and down, or the volume keys to zoom in and out.

Take a photo

To take a photo select **Capture**, or press the camera release key. The phone saves the photo in **Gallery > Images**. To take another photo, select **Back**; to send the photo as a multimedia message, select **Send**.

To take a self-portrait, turn the camera towards yourself, use the small mirror besides the camera lens as a view finder, and press the camera release key.

Select **Options** to set **Night mode on** if the lighting is dim, **Flash on** to activate the camera flash, **Self-timer on** to activate the selftimer, and **Img. sequence on** to take photos in a fast sequence.

Record a video clip

To start the video recording, select **Record**, or press the camera release key. To pause the recording, select **Pause**; to resume the recording, select **Continue**. To stop the recording, select **Stop**. The phone saves the recording in *Gallery > Video clips*.

When recording, the camera flash is on with a dimmed light as indicator to others, that a video is recorded.

Select **Options > Mute** to prevent the recording of sound.

Camera settings

Select **Options > Settings** to define image, video and camera parameters:

Image quality – to define the compression rate or quality of the images.

The higher the image quality, the lower the compression rate. Higher image quality uses more memory space.

Image size – to define the image resolution or size.

Image resolution is expressed by multiplying the number of horizontal dots (width) by the number of vertical dots (height). The higher the resolution, the higher the image quality.

Video clip quality – choose high, medium, or low quality. High video clip quality uses more memory space.

Video clip length – choose *Default* to restrict the video length to a size that can be sent by MMS, or choose *Maximum* to allow the available memory to be used for the video clip.

Camera sounds – when activated, a sound is played when you take a photo, and when you start the self-timer

Default title – to define the default name for photos or video clips. Use a predefined title or enter one yourself.

Default mode – Select *Still image* or *Video* as default mode when the *Camera* is activated.

Media player

With the media player you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service).

Select **Menu > Media > Media player > Open Gallery, Bookmarks, Go to address**, or **Media downloads**.

While streaming audio or video, to rewind (Rew) or fast forward (FF) scroll left or right. To set the length of a scrolling jump, select *FF/Rew interval*.

Set up the phone for a streaming service

You may receive the configuration settings required for streaming as a configuration message from the network operator. See "Configuration settings service", p. xi. You can also enter the settings manually. See "Configuration", p. 44.

To activate the settings, do the following:

1. Select **Menu** > **Media** > **Media player** > **Streaming sett..**
2. Select **Configuration**. Only the configurations that support streaming are shown. Select a service provider, **Default**, or **Personal config**. for streaming.
3. Select **Account** and a streaming service account contained in the active configuration settings.





■ Music player


Your phone includes a music player for listening to music tracks, recordings, or other MP3, MP4, or AAC sound files that you have transferred to the phone with the Nokia Audio Manager application. MP3 and AAC files are stored in the **Gallery** folders. Music files stored in the **Music files** folder and in another location, such as a folder of the phone memory, are

automatically detected and added to the default track list.



Play music tracks



1. Select **Menu** > **Media** > **Music player**. The details of the first track on the default track list are shown.


To use the graphical keys , , , or  on the display, scroll left or right to the desired key, and select it.

2. To play a track, scroll to the track that you want, and select .

To adjust the volume level, use the volume keys on the side of the phone.

To skip to the beginning of the next track, select . To skip to the beginning of the previous track, select  twice.

To rewind the current track, select and hold . To fast forward the current track, select and hold . Release the key at the position you want.

3. To stop the playing, select .



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Music player options

Select **Music player** > **Options**. Some of following features may be available:

Play via Bluetooth — to make a connection to an audio enhancement using a Bluetooth connection

Track list — to view all the tracks available on the track list. To play a track, scroll to the desired track, and select **Play**.

Select **Options** > **Refresh all tracks** or **Change track list** to refresh the track list (for example, after adding new tracks to the list) or to change the track list that is shown when you open the **Music player** menu, if several track lists are available in the phone

Play options > **Random** > **On** — to play the tracks in the track list in random order. Select **Repeat** > **Current track** or **All tracks** to play the current track or the entire track list repeatedly. Select **Music source** to change to another folder with music files.

Media equaliser — to open the list of media equalizer sets. See “**Equalizer**”, p. 55.

Loudspeaker or Headset — to listen to the music player through the loudspeaker or a compatible headset connected to the phone



Tip: When using a headset, you can skip to the next track by pressing the headset key quickly.

Send — to send the selected file using MMS, Bluetooth wireless technology, or an IR connection

Web page — to connect to a Web address attached to the current file in the track list

Music downloads — to connect to a browser service related to the current track. This function is only available when the address of the service is included in the track.

Memory status — to view the free and used memory capacity

Radio

The FM radio depends on an antenna other than the wireless device's antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.



Warning: Listen to music at a moderate level.

Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

2. To save the channel to a memory location, 1 to 9, press and hold the corresponding number key.





To save the channel in the memory location from 10 to 20, press briefly **1** or **2**, and press and hold the desired number key **0** to **9**.



3. Enter the name of the channel, and select **OK**.

Listen to the radio


 
 

1. Select **Menu** > **Media** > **Radio**.

The channel location number, the name of the radio channel (if you have saved the channel), and the frequency of the radio channel are displayed.

To use the graphical keys , , , or  on the display, scroll left or right to the desired key, and select it.

2. If you have already saved radio channels, select  or  to scroll to the channel you would like to listen to.

Tune a radio frequency

1. When the radio is on, select , or  to change the radio frequency in 0.05 MHz steps, or select and hold , or  to start the channel search. Searching stops when a channel is found.

Basic radio functions

When the radio is on, do the following:

To turn off the radio, select **Options** > **Switch off**.

To save the radio channel you have found, select **Options** > **Save station**.

See "[Tune a radio frequency](#)", on p. 53. You can save up to 20 radio channels.

To set whether the visual radio application is used, select **Options** > **Visual Radio**. Some radio channels may send text or graphical information that you can view using the visual radio application.

To select the options for visual radio, select **Options** > **Visual Radio sett.**

To set whether the visual radio application starts automatically when you turn on the radio, select **Enable visual service** > **Automatically**, **Manually**, or **Ask first**.

Select **Options** > *Visual Radio sett.* > *Station directory* to access a Web site with a list of radio stations, and if available, their visual radio ID, which you can receive in your region.

To select the list of saved channels, select **Options** > *Stations*. To delete or rename a channel, or to enter the ID for a visual radio channel, scroll to the desired channel, and select **Options** > *Delete station, Rename,* or *Visual service ID*.

To listen to the radio in monophonic sound or in stereo, select **Options** > *Mono output* or *Stereo output*.

To listen to the radio using the loudspeaker or headset, select **Options** > *Loudspeaker* or *Headset*. Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

To enter the frequency of the desired radio channel, select **Options** > *Set frequency*.

You can normally make a call or answer an incoming call while listening to the radio. During the call, the volume of the radio is muted.

When an application using a packet data connection is sending or receiving data, it may interfere with the radio.




Recorder


You can record pieces of speech, sound, or an active call for up to 60 minutes, depending on available memory space.

The recorder cannot be used when a data call or packet data connection is active.

Record sound


1. Select **Menu** > *Media* > *Recorder*.

To use the graphical keys, , , or , on the display, scroll left or right to the desired key, and select it.

2. To start the recording, select . To start the recording during a call, select **Options** > *Record*.

While recording a call, all parties to the call hear a faint beeping sound about every 2 seconds.

When recording a call, hold the phone in the normal position near to your ear.

3. To end the recording, select . The recording is saved in *Gallery* > *Recordings*.

Options after recording

To listen to the latest recording, select

Options > *Play last recorded*.

To send the last recording using

Bluetooth wireless technology or IR,

select **Options** > *Send last recorded*.

Select **Menu** > *Media* > *Recorder* >

Options > *Recordings list*. The list of folders in the *Gallery* is shown.

Open *Recordings* to see the list with

recordings. Select **Options** to select options for files in the *Gallery*.

See "*Gallery*", p. 48.

■ Equalizer

To control the sound quality when

using the music player, amplify or

diminish frequency bands.

Select **Menu** > *Media* > *Equaliser*.

To activate a set, scroll to one of the

equalizer sets, and select **Activate**.

To view, edit, or rename a selected set,

select **Options** > *View*, *Edit*, or

Rename. Not all sets can be edited or renamed.

13. Push to talk



Select **Menu** > *Push to talk*.

Push to talk (PTT) over cellular is a two-way radio service available over a GPRS cellular network (network service).

You can use PTT to have a conversation with one person or with a group of people having compatible devices. While you are connected to the PTT service, you can use the other functions of the phone.

To check availability and costs, and to subscribe to the service, contact your network operator. Roaming services may be more limited than for normal calls.

Before you can use the PTT service, you must define the required PTT service settings. See "[PTT settings](#)", p. 60 and "[Configuration settings](#)", p. 60.

■ Push to talk channels

When you call a channel, all members joined to the channel hear the call simultaneously.

There are different types of PTT channels:

Public group — Every channel member can invite other persons.

Private group — Only persons which receive an invitation by the channel creator can join in.

Provisioned channel — Permanent channel created by the service provider.

You can set the status of each channel to *Default*, *Listened*, or *Inactive*.

Default and *Listened* are active channels. When you press the volume up key to make a channel call, the default channel is called if you have not scrolled to any other channel or contact.

Add a channel

To add a channel, select **Menu** > *Push to talk* > *Add channel*, and enter the settings in the form fields:

Channel status: — Select *Default* to connect to this channel when push to talk is started, *Listened* to set the channel active, or *Inactive* to disable the channel.

Chnl. security: — Select *Public group* or *Private group*.

To send an invitation to the channel, select **Yes** when the phone requests it.

You can send the invitation using a text message or IR.

To add a provisioned channel, select **Menu > Push to talk > Add channel > Options > Edit add. manually.**



Enter the **Channel address**: provided by your service provider.

Receive an invitation

1. When you receive a text message invitation to a channel, **Channel invitation received**: is displayed.
2. To view the nickname of the person who sent the invitation and the channel address if the channel is not a private channel, select **View**.
3. To add the channel to your phone, select **Save**.
4. To set the status for the channel, select **Default**, **Listened**, or **Inactive**.

To reject the invitation, select **Exit > Yes**, or select **View > Discard > Yes**.

Switch PTT on and off

To connect to the PTT service, select **Menu > Push to talk > Switch PTT on** or press the PTT (volume up) key.  indicates the PTT connection.  indicates that the service is temporarily unavailable. If you have added channels to the phone, you are automatically joined to the active

(**Default** and **Listened**) channels, and the name of the default channel is displayed in standby mode.

To disconnect from the PTT service, select **Switch PTT off**.

Make and receive a PTT call




Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

To make a channel call, a one-to-one call, or a call to multiple recipients, you must hold the PTT (volume up) key as long as you talk. To listen to the response, release the PTT (volume up) key. Talking is allowed on a first-come, first-served basis. When you stop talking, the first person to press the volume up key can talk next.


You may be able to check the login status of your contacts in **Menu > Push to talk > Contacts list**. This service depends on your network operator and is only available for subscribed contacts. To subscribe a contact, select **Options > Subscribe contact**, or if one or more contacts are already marked **Subscribe marked**.



, or  indicate that the person is either available or unknown.



indicates that the person wants

not to be disturbed, but can receive callback requests.  indicates that the person has PTT not switched on.

Make a channel call

To make a call to the default channel, press the volume up key. A tone indicates that the access is granted, and the phone displays your nickname and channel name.

To make a call to a nondefault channel, select *Channel list* in the PTT menu, scroll to the desired channel, and press the volume up key.

Make a one-to-one call

To start a one-to-one call from the list of contacts to which you have added the PTT address, select *Contacts* or *Menu > Push to talk > Contacts list*. Scroll to a contact, and press the volume up key.

To start a one-to-one call from the list of PTT channels, select *Channel list*, and scroll to the desired channel and select *Members*. Scroll to the desired contact, and press the volume up key.

To start a one-to-one call from the list of callback requests you have received, select *Callback inbox*. Scroll to the desired nickname, and press the volume up key.

Make a PTT call to multiple recipients

You can select multiple PTT contacts from the contact list. The recipients receive an incoming call and need to accept the call in order to participate. If supported by your network operator, you also may select contacts with a phone number but without PTT number. For details, contact your network operator.

1. Select *Menu > Push to talk > Contacts list*, and mark the desired contacts.
2. Press the volume up key briefly to start the call. The participating contacts are shown on the display, as soon as they join the call.
3. Press and hold the volume up key to talk to them. Release the volume up key to hear the response.
4. Press the end key to terminate the call.

Receive a PTT call

A short tone notifies you of an incoming PTT call. Informations, such as the channel, the phone number, or the nickname (network service) of the caller are displayed.

You can either accept or reject an incoming one-to-one call if you have set the phone to first notify you of the one-to-one calls.

When you press the volume up key while the caller is talking, you hear a queuing tone, and *Queuing* is displayed. Press and hold the volume up key, and wait for the other person to finish; then you can talk immediately.

■ Callback requests

If you make a one-to-one call and do not get a response, you can send a request for the person to call you back.

Send a callback request

You can send a callback request in the following ways:

To send a callback request from the contacts list in the *Push to talk* menu, select *Contacts list*. Scroll to a contact, and select **Options** > *Send callback*.

To send a callback request from *Contacts*, search for the desired contact, and select **Details**. Scroll to the PTT address, and select **Options** > *Send callback*.

To send a callback request from the channel list in the PTT menu, select *Channel list*, and scroll to the desired channel. Select **Members**, scroll to the desired contact, and select **Options** > *Send callback*.

To send a callback request from the callback request list in the *Push to talk* menu, select *Callback inbox*. Scroll to a contact, and select **Options** > *Send callback*.

Respond to a callback request

When someone sends you a callback request, *Callback request received* is displayed in standby mode.

To open the *Callback inbox*, select **View**. The list of nicknames of the persons who have sent you callback requests is shown.

To make a one-to-one call, select the desired request and press the volume up key.

To send a call request back to the sender, select **Options** > *Send callback*.

To delete the request, select **Delete**.

To save a new contact or to add the PTT address to a contact from a received callback request, select **Options** > *Save as* or *Add to contact*.

■ Add a one-to-one contact

You can save the names of persons to whom you often make one-to-one calls in the following ways:

To add a PTT address to a name in *Contacts*, search for the desired contact, select **Details** > **Options** > *Add detail* > *PTT address*. A contact will only appear in the PTT contact list, if the PTT address is entered.

To add a contact to the PTT contacts list, select **Menu** > *Push to talk* > *Contacts list* > **Options** > *Add contact*.

To add a contact from the channel list, connect to the Push to talk service, select *Channel list*, and scroll to the desired channel. Select **Members**, scroll to the member whose contact information you want to save, and select **Options**. To add a new contact, select *Save as*. To add a PTT address to a name in *Contacts*, select *Add to contact*.

■ PTT settings

Select **Menu** > *Push to talk* > *PTT settings*.

1 to 1 calls > *On* — to select the phone to allow the reception of incoming one-to-one calls. To make but not receive one-to-one calls, select *Off*. The service provider may offer some services that override these settings.

To set the phone to first notify you of incoming one-to-one calls with a ringing tone, select *Notify*.

Listened channels > *On* — to activate the listened channels

Show my login status — to enable or disable the sending of the login status

PTT status in startup > *Yes* or *Ask first* — to set the phone to automatically connect to the PTT service when you switch the phone on

Push to talk when abroad — to switch the Push to talk service on or off when the phone is used outside of the home network

Send my PTT address > *No* — to hide your PTT address from channel and one-to-one calls

■ Configuration settings

You may receive the settings for connecting to the service from your service provider. See "[Configuration settings service](#)", p. xi. You can enter the settings manually.

See "[Configuration](#)", p. 44.

To select the settings for connecting to the service, select **Menu** > *Push to talk* > *Config. settings*. Select from the following options:

Configuration — to select a service provider, *Default*, or *Personal config*.

for PTT service. Only the configurations that support the PTT service are shown.

Account – to select a PTT service account contained in the active configuration settings

Other parameters are *PTT user name*, *Default nickname*, *PTT password*, *Domain*, and *Server address*.

■ Web

Select **Menu** > *Push to talk* > *Web* to access the Internet site of your push to talk provider.

14. Organizer



■ Alarm clock

You can set the phone to alarm at a desired time. Select **Menu** > *Organiser* > *Alarm clock*.

To set the alarm, select *Alarm time*, and enter the alarm time. To change the alarm time when the alarm time is set, select *On*. To set the phone to alert you on selected days of the week, select *Repeat alarm*.

To select the alarm tone or set a radio channel as the alarm tone, select *Alarm tone*. If you select the radio as an alarm tone, connect the headset to the phone. The phone uses the last channel you listened to as the alarm, and the alarm plays through the loudspeaker. If you remove the headset or switch off the phone, the default alarm tone replaces the radio.

To set a snooze time-out, select *Snooze time-out*.

Stop the alarm

The phone sounds an alert tone, and flashes *Alarm!* and the current time on the display, even if the phone was switched off. To stop the alarm, select **Stop** or open the phone. If you let the phone continue to sound the alarm for

a minute or select **Snooze**, the alarm stops for the selected snooze time-out and then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.

■ Calendar

Select **Menu** > *Organiser* > *Calendar*.






The current day is indicated by a frame. If there are any notes set for the day, the day is in bold type. To view the day notes, select **View**. To view a week, select **Options** > *Week view*. To delete all notes in the calendar, select the month or week view, and select **Options** > *Delete all notes*.

Other options for the day view may be *Make a note*, *Delete*, *Edit*, or *Move* a note; *Copy* a note to another day; *Send note* as text message or multimedia message, with IR or Bluetooth, or to the calendar of another compatible phone. In *Settings* you can set the date


and time settings. In *Auto-delete notes* you can set the phone to delete old notes automatically after a specified time.

Make a calendar note

Select **Menu** > *Organiser* > *Calendar*. Scroll to the date you want, and select **Options** > *Make a note* and one of the following note types:

 *Meeting*,  *Call*,  *Birthday*,  *Memo*, or  *Reminder*.

A note alarm

The phone beeps and displays the note. With a call note  on the display, to call the displayed number, press the call key. To stop the alarm and to view the note, select **View**. To stop the alarm for approximately 10 minutes, select **Snooze**. To stop the alarm without viewing the note, select **Exit**.

■ To-do list

To save notes for tasks that you must do, select **Menu** > *Organiser* > *To-do list*.

To create a note if no note is added, select **Add note**; otherwise, select **Options** > **Add**. Write the note, and select the priority, the deadline, and the alarm type for the note. Then select **Save**.

To view a note, scroll to it, and select **View**.

You can also select an option to delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone as a text message or a multimedia message, with IR or Bluetooth, save a note as a calendar note, or access the calendar.

While viewing a note, you can also select an option to edit the deadline or priority for the note or mark the note as done.

■ Notes

To use this application for writing and sending notes, select **Menu** > *Organiser* > *Notes*. To create a note if no note is added, select **Add note**; otherwise, select **Options** > *Make a note*. Write a note, and select **Save**.

Other options for notes include deleting, and editing a note. While editing a note, you can also exit the text editor without saving the changes. You can send the note to compatible devices using a text message, a multimedia message, or with IR or Bluetooth. If the note is too long to send as a text message, the phone asks you to delete the appropriate number of characters from your note.

■ Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.



Note: This calculator has limited accuracy and is designed for simple calculations.

Select **Menu** > **Organiser** > **Calculator**.

When 0 is displayed on the screen, enter the first number in the calculation. Press the # key for a decimal point. Select **Options** > **Add**, **Subtract**, **Multiply**, **Divide**, **Square**, **Square root**, or **Change sign**. Enter the second number. For a total, select **Equals**. Repeat this sequence as many times as it is necessary. To start a new calculation, first select and hold **Clear**.

To perform a currency conversion, select **Menu** > **Organiser** > **Calculator**. To save the exchange rate, select **Options** > **Exchange rate**. Select either of the displayed options. Enter the exchange rate, press the # key for a decimal point, and select **OK**. The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion, enter the amount to be converted, and select **Options** > **In domestic** or **In foreign**.



Note: When you change base currency, you must enter the new exchange rates because all previously set exchange rates are cleared.

■ Countdown timer

Select **Menu** > **Organiser** > **Timer**.

Enter the alarm time in hours, minutes, and seconds, and select **OK**. If you wish, write your own note text that is displayed when the time expires. To start the countdown timer, select **Start**. To change the countdown time, select **Change time**. To stop the timer, select **Stop timer**.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note text if it is set or **Countdown time up**. To stop the alarm, press any key. If no key is pressed, the alarm automatically stops within 60 seconds. To stop the alarm and to delete the note text, select **Exit**. To restart the countdown timer, select **Restart**.

■ Stopwatch

To measure time, take intermediate times, or take lap times, use the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press the end key.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Select **Menu > Organizer > Stopwatch** and from the following options:

Split timing — to take intermediate times. To start the time observation, select **Start**. Select **Split** every time that you want to take an intermediate time. To stop the time observation, select **Stop**. To save the measured time, select **Save**. To start the time observation again, select **Options > Start**. The new time is added to the previous time. To reset the time without saving it, select **Reset**. To set the stopwatch timing in the background, press the end key.

Lap timing — to take lap times. To set the stopwatch timing in the background, press the end key

Continue — to view the timing that you have set in the background

Show last — to view the most recently measured time if the stopwatch is not reset

View times or **Delete times** — to view or delete the saved times

15. Applications



■ Games

Your phone software includes games.

Launch a game

Select **Menu** > *Applications* > *Games*. Scroll to the desired game, and select **Open**.

For options related to a game, see “*Other application options*”, p. 66.

Game downloads

Select **Menu** > *Applications* > **Options** > *Downloads* > *Game downloads*. The list of available bookmarks is shown. To access the list of bookmarks in the *Web* menu, see “*Bookmarks*”, p. 70.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

Game settings

To set sounds, lights, and shakes for the game, select **Menu** >

Applications > **Options** > *App. settings*.

■ Collection

Your phone software includes Java applications specially designed for this Nokia phone.

Launch an application

Select **Menu** > *Applications* > *Collection*. Scroll to an application, and select **Open**.

Other application options

Delete — to delete the application or application set from the phone

Details — to view additional information about the application

Update version — to check if a new version of the application is available for download from *Web* (network service)

App. access — to restrict the application from accessing the network. Different categories are shown. Select in each category one of the available permissions.

Web page — to provide further information or additional data for the application from an Internet page. This feature must be supported by the network. It is only shown if an Internet address has been provided with the application.

Use the game download function.
See "[Game downloads](#)", p. 66.

Use the Nokia Application Installer in PC Suite to download the applications to your phone.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Download an application

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications in different ways.

Select **Menu** > **Applications** > **Options** > **Downloads** > **App. downloads**. The list of available bookmarks is shown. Select the appropriate bookmark to connect to the desired page. For the availability of different services, pricing, and tariffs, contact your service provider.

16. Web



You can access various mobile Internet services with your phone browser.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these network services, pricing, tariffs, and instructions with your service provider.

With the phone browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size. You may not be able to view all details of the Internet pages.

■ Set up browsing

You may receive the configuration settings required for browsing as a configuration message from the network operator that offers the service that you want to use. See “[Configuration settings service](#)”, p. [xi](#). You can also enter all the configuration settings manually. See “[Configuration](#)”, p. [44](#).

■ Connect to a service

First, verify that the correct configuration settings of the service that you want to use are activated.

1. To select the settings for connecting to the service, select [Menu > Web > Settings > Configuration settings](#).
2. Select [Configuration](#). Only the configurations that support browsing service are shown. Select a service provider, [Default](#), or [Personal config](#). for browsing. See “[Set up browsing](#)”, p. [68](#).

Select [Account](#) and a browsing service account contained in the active configuration settings.

Select [Display terminal window > Yes](#) to perform manual user authentication for intranet connections.

To make a connection to the service, select [Menu > Web > Home](#); or in standby mode, press and hold **0**.

To select a bookmark of the service, select [Menu > Web > Bookmarks](#).

To select the last URL, select [Menu > Web > Last web address](#).

To enter the address of the service, select **Menu** > **Web** > **Go to address**, enter the address of the service, and select **OK**.

■ Browse pages

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

If packet data is selected as the data bearer, **G** is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a packet data connection, **G** is shown on the top right of the display to indicate that the packet data connection is suspended (on hold). After a call the phone tries to reconnect the packet data connection.

Browse with phone keys

Use the navigation keys to browse through the page.

To select a highlighted item, press the call key, or select **Select**.

To enter letters and numbers, press the keys, **0** to **9**. To enter special characters, press *****.

Options while browsing

In addition to the options available on your device, your service provider may offer other options.

Direct calling

The browser supports functions that you can access while browsing. You can make a phone call, and save a name and a phone number from a page.

■ Appearance settings

While browsing, select **Options** > **Other options** > **Appear. settings**; or in standby mode, select **Menu** > **Web** > **Settings** > **Appearance settings** and from the following options:

Text wrapping > **On** — to set the text to continue on the next line on the display. If you select **Off**, the text is abbreviated

Font size — to set the font size.

Show images > **No** — to hide pictures on the page. This can speed up the browsing of pages that contain a lot of pictures

Alerts > **Alert for unsecure connection** > **Yes** — to set the phone to alert when an encrypted connection changes to unencrypted during browsing

Alerts > Alert for unsecure items > Yes — to set the phone to alert when an encrypted page contains an unsecure item. These alerts do not guarantee a secure connection. For more information, see "[Browser security](#)", p. 72.

Character encoding > Content encoding — to select the encoding for the browser page content

Character encoding > Unicode (UTF-8) web addresses > On — to set the phone to send a URL as a UTF-8 encoding. You may need this setting when you access a Web page created in foreign language.

JavaScript > Enable — to allow the execution of Java scripts by the browser

■ Cookies

A cookie is data that a site saves in the cache memory of your phone. Cookies are saved until you clear the cache memory. See "[Cache memory](#)", p. 72.

While browsing, select **Options > Other options > Security > Cookie settings**; or in standby mode, select **Menu > Web > Settings > Security settings > Cookies**. To allow or prevent the phone from receiving cookies, select *Allow* or *Reject*.

■ Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.

1. While browsing, select **Options > Other options > Security settings > WMLScript sett.**; or in standby mode, select **Menu > Web > Settings > Security settings > WMLScripts over secure connection**.
2. To allow the scripts, select *Allow*.

■ Bookmarks

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select **Options > Bookmarks**; or in standby mode, select **Menu > Web > Bookmarks**.
2. Select a bookmark; or press the call key to make a connection to the page associated with the bookmark.
3. Select **Options** to view, edit, delete, or send the bookmark; create a new bookmark; or save the bookmark to a folder.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receive a bookmark

When you have received a bookmark that is sent as a bookmark, *1 bookmark received* is displayed. To save the bookmark, select **Show**. To discard the bookmark directly after you have received the bookmark, select **Exit**.

■ Download files

To download more tones, images, games, or applications to your phone (network service), select **Menu** > *Gallery* or *Applications* > **Options** > *Downloads* and from the available downloads.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

To save all downloaded files automatically in *Gallery*, select **Menu** > *Web* > *Settings* > *Downloading settings* > *Automatic saving* > **On**.

■ Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider (network service). Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a service.

To access the *Service inbox* in standby mode, when you have received a service message, select **Show**. If you select **Exit**, the message is moved to the *Service inbox*. To access the *Service inbox* later, select **Menu** > *Web* > *Service inbox*.

To access the *Service inbox* while browsing, select **Options** > *Other options* > *Service inbox*. Scroll to the message you want, and to activate the browser and download the marked content, select **Retrieve**. To display detailed information on the service notification or to delete the message, select **Options** > *Details* or *Delete*.

Service inbox settings

Select **Menu** > **Web** > **Settings** > **Service inbox settings**.

To set whether you want to receive service message, select **Service messages** > **On** or **Off**.

To set the phone to receive service messages only from content authors approved by the service provider, select **Message filter** > **On**. To view the list of the approved content authors, select **Trusted channels**.

To set the phone to automatically activate the browser from standby mode when the phone has received a service message, select **Automatic connection** > **On**. If you select **Off**, the phone activates the browser only after you select **Retrieve** when the phone has received a service message.

Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache, while browsing, select **Options** > **Other options** > **Clear the cache**; in standby mode, select **Menu** > **Web** > **Clear the cache**.

Browser security

Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider. See also "[Access codes](#)", p. x.

Select **Menu** > **Settings** > **Security** > **Security module settings** and from the following options:

Security module details — to show the security module title, status, manufacturer, and serial number

Module PIN request — to set the phone to ask for the module PIN when using services provided by the security module. Enter the code, and select **On**. To disable the module PIN request, select **Off**.

Change module PIN — to change the module PIN, if allowed by the security module. Enter the current module PIN code, then the new code twice.

Change signing PIN — to change the signing PIN code for the digital signature. Select the signing PIN you want to change. Enter the current PIN code, then the new code twice.

Certificates




Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are three kinds of certificates: server certificates, authority certificates, and user certificates. You may receive these certificates from your service provider. Authority certificates and user certificates may also be saved in the security module by the service provider.

To view the list of the authority or user certificates downloaded into your phone, select **Menu > Settings > Security > Authority certificates** or **User certificates**.


The security indicator  is displayed during a connection, if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Digital signature

You can make digital signatures with your phone if your SIM card has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page, for example, the title of the book you want to buy and its price. The text to sign, which may include the amount and date, is shown.

Check that the header text is **Read** and that the digital signature icon  is shown.

If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first, and select **Sign**.

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Enter the signing PIN (see "**Access codes**", p. x), and select **OK**. The digital signature icon disappears, and the service may display a confirmation of your purchase.

17. SIM services



Your SIM card may provide additional services that you can access. This menu is shown only if it is supported by your SIM card. The name and contents of the menu depend on the SIM card.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

To set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services, select

Menu > **Settings** > **Phone** > **Confirm SIM service actions** > **Yes**.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

18. PC connectivity

You can send and receive e-mail, and access the Internet when your phone is connected to a compatible PC through an infrared, Bluetooth wireless technology, or a USB data cable connection. You can use your phone with a variety of PC connectivity and data communications applications.

■ PC Suite

With PC Suite you can synchronize *Contacts*, *Calendar*, *To-do list*, and *Notes* between your phone, and the compatible PC, or a remote Internet server (network service).

You may find more information about PC Suite in the support area on the Nokia Web site at www.nokia-asia.com/support.

■ Packet data, HSCSD, and CSD

With your phone you can use the packet data, high-speed circuit switched data (HSCSD), and circuit switched data (CSD, *GSM data*).

For availability and subscription to data services, contact your network operator.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer. See "[Packet data](#)", p. 40.

■ Data communication applications

For information on using a data communication application, refer to the documentation provided with it. Making or answering phone calls during a computer connection is not recommended, as it might disrupt the operation. For better performance during data calls, place the phone on a stationary surface with the keypad facing down. Do not move the phone by holding it in your hand during a data call.

19. Battery information

■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look

like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery and its ability to charge. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it, and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

 
Authenticate hologram

1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original

Enhancements logo when looking from another angle.



2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.

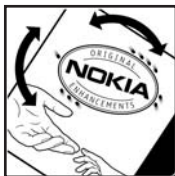

3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.



4. Confirm that the 20-digit code is valid by following the instructions at www.nokiaoriginals.com/check.



To create a text message enter the 20-digit code, for example, 12345678919876543210, and send to +44 7786 200276.

To create a text message,

- For countries in Asia Pacific, excluding India: Enter the 20-digit code, for example, 12345678919876543210, and send to +61 427151515.
- For India only: Enter Battery followed by the 20-digit battery code, for example, Battery 12345678919876543210, and send to 5555.

National and international operator charges will apply.

You should receive a message indicating whether the code can be authenticated.

If you need assistance confirming the battery code, contact your local Nokia Care Centres listed at www.nokia-asia.com/carecentrelocator.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokiaoriginals.com/battery.

20. Genuine Enhancements

A new extensive range of enhancements is available for your phone.



Select the enhancements which accommodate your specific communication needs.

Some of the enhancements are described in detail below.

For availability of the enhancements, please check with your local dealer.

A few practical rules about accessories and enhancements.

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

■ Battery

Type	Tech	Talk-time*	Standby*
BL-4B	Li-ion	up to 200 mins	up to 300 hours

* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

■ Indoor

Nokia Travel Charger (AC-4)

Small and lightweight charger with smaller charging plug to charge your phone battery fast.

■ Indoor and Vehicle

Nokia Classic Stereo Headset (HS-23)

Small and lightweight stereo headset with handsfree functionality, volume control, push to talk support and comfortable earpieces for listening to the FM radio or MP3 player in compatible phones.

21. Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

22. Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Operating environment

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least

1.5 centimeters from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body. To transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with a hearing aid should not hold the device to the ear with the hearing aid. Do not place

credit cards or other magnetic storage media near the device, because information stored on them may be erased.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating

properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting

operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

■ Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.

4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. If the device is in the offline or flight mode, you must change the profile to activate the phone function before you can make an emergency call. Consult this guide or your service provider for more information.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by

independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 watts/kilogram (W/kg)*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

The highest SAR value for this device when tested for use at the ear is 0.84 W/kg.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values. Additional SAR information may be provided under

product information at www.nokia-asia.com.

* The SAR limit for mobile devices used by the public is 2.0 W/kg averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions, please look under product information at www.nokia.com.

Index

A

- A note alarm 63
- About your device viii
- Accept or reject an invitation 22
- Access codes x
- Access the IM menu 21
- Active standby mode 6
- Add a channel 56
- Add a one-to-one contact 60
- Add and manage voice tags 32
- Add contacts to the subscribed names 31
- Additional safety information 83
- Alarm clock 62
- Answer or reject a call 9
- Antenna 4
- Appearance settings 69
- Applications 66

B

- Barring password xi
- Basic radio functions 53
- Battery 80
- Battery information 77
 - type 80
- Block and unblock messages 24
- Bluetooth settings 39
- Bluetooth wireless connection 39
- Bluetooth wireless technology 38
- Bookmarks 70
- Browse pages 69
- Browse with phone keys 69
- Browser security 72
- Business cards 29

C

- Cache memory 72
- Calculator 64
- Calendar 62
- Call 43
- Call functions 9
- Call waiting 10
- Callback requests 59
- Camera 49

- Camera modes and zoom 49
- Camera settings 50
- Care and maintenance 82
- Certificates 73
- Certification information (SAR) 85
- Character case 11
- Charge the battery 2
- Charging and discharging 77
- Clock settings 36
- Collection 66
- Configuration 44
- Configuration settings 60
- Configuration settings service xi
- Connect to a service 68
- Connect to the IM service 21
- Connectivity 37
- Contacts 28
 - save numbers 28
- Contacts for IM 23
- Cookies 70
- Copy contacts 29
- Countdown timer 64
- Counters and timers 34
- Create a private group 24
- Create and send an audio message 18

D

- Data cable 42
- Data communication applications 76
- Data transfer
 - synchronize from PC 42
 - synchronize from server 42
 - with a compatible device 41
 - without SIM card 41
- Date settings 36
- Delete contacts or contact details 29
- Delete e-mail messages 21
- Delete messages 25
- Digital signature 74
- Direct calling 69
- Display 6, 36
- Download an application 67
- Download content and applications xi
- Download e-mail 20
- Download files 71

E

- Edit contact details 29
- Edit your availability status 23
- E-mail 27
- E-mail application 19
- Emergency calls 85
- Enhancements ix, 44
- Equalizer 55

F

- Flash messages 17
- Folders 19
- For your safety vii

G

- Gallery 48
- Game downloads 66
- Game settings 66
- Games 66
- General information x
- General settings 25
- Genuine Enhancements 80
- Get started 1
- Groups 24, 32

H

- Hearing aids 84

I

- Inbox and other folders 20
- Indicators 7
- Info messages 25
- Info, service, and my numbers 33
- Infrared 39
- Install battery 2
- Install SIM card 1
- Install SIM card and battery 1
- Instant messaging (IM) 21
- IR connection indicator 40

K

- Keypad lock (keyguard) 8
- Keys and parts 5

L

- Language 11
- Language settings 43
- Launch a game 66
- Launch an application 66
- Left and right selection key 37
- Listen to the radio 53
- Log 34

M

- Make a calendar note 63
- Make a call 9
- Make a call by using a voice tag 33
- Make a channel call 58
- Make a one-to-one call 58
- Make a PTT call to multiple recipients 58
- Make and receive a PTT call 57
- Media 49
- Media player 50
- Medical devices 83
- Memory full 18
- Menu
 - navigation 13
 - scrolling 13
- Message settings 25
- Messages
 - flash messages 17
 - voice messages 24
- Messaging 14
- Multimedia 26
- Multimedia messages (MMS) 16
- Music player 51
- Music player options 52
- My presence 30
- My shortcuts 37

N

- Navigation 13
- Navigation key 37
- Network services viii
- Nokia battery authentication guidelines 78
- Nokia support and contact information xii
- Nokia Xpress audio messaging 18
- Notes 63

O

- Open the slide phone 1
- Operating environment 83
- Operator menu 47
- Options after recording 55
- Options during a call 10
- Options while browsing 69
- Organizer 62
- Other application options 66
- Other display settings 36
- Overview of functions x

P

- Pacemakers 83
- Packet data 40
- Packet data settings 40
- Packet data, HSCSD, and CSD 76
- Participate in a conversation 23
- Partner list 41
- PC connectivity 76
- PC Suite 76
- Personal shortcut list 7
- Phone 43
- PIN codes x
- Play music tracks 51
- Plug and play service 3
- Positioning information 34
- Potentially explosive environments 84
- Power saving 7
- Predictive text input 11
- Profiles 35
- PTT settings 60
- Public groups 24
- PUK codes xi
- Push to talk 56
- Push to talk channels 56

R

- Radio 52
- Read a MMS and reply 17
- Read a received instant message 23
- Read and reply to a SMS message 15
- Read and reply to e-mail 20
- Receive a bookmark 71
- Receive a PTT call 58
- Receive an audio message 18
- Receive an invitation 57
- Recent calls lists 34

- Record a video clip 50
- Record sound 54
- Recorder 54
- Respond to a callback request 59
- Restore factory settings 46

S

- Save names and phone numbers 28
- Scripts over secure connection 70
- Search for a contact 28
- Security 45
- Security code x
- Security module 72
- Send a callback request 59
- Service commands 25
- Service inbox 71
- Service inbox settings 72
- Set up a Bluetooth connection 38
- Set up browsing 68
- Set up the phone for a streaming service 51
- Settings 31, 35
 - clock 36
 - data transfer 41
 - date 36
 - time 36
 - USB data cable 42
- Shared memory ix
- Shortcuts in standby mode 7
- SIM services 75
- Speed dialing 9
- Speed dials 33
- Standby mode 6
- Standby mode settings 36
- Start an IM session 22
- Stop the alarm 62
- Stopwatch 64
- Subscribed names 30
- Switch PTT on and off 57
- Switch the phone on and off 3

T

- Take a photo 49
- Templates 15
- Text
 - character case 11
 - predictive text input 11
 - settings 11

- traditional text input 12
- writing 11
- Text messages (SMS) 14
- Text messages and SMS e-mail 25
- Themes 35
- Time settings 36
- To make an emergency call 85
- To-do list 63
- Tones 35
- Traditional text input 12
- Tune a radio channel 53

U

- Unsubscribe a contact 31

V

- Vehicles 84
- View the subscribed names 31
- Voice commands 37
- Voice dialing 32
- voice messages 24

W

- Web 61, 68
- Wrist strap 4
- Write and send a MMS 16
- Write and send a SMS message 15
- Write and send an e-mail 20
- Write text 11
- Writing language 11

Y

- Your phone 5