

User's Guide for Nokia 7250

List of menu functions

1. Messages

1. Text messages
2. Multimedia msgs.
3. Chat
4. Voice messages
5. Info messages
6. Message settings
7. Service commands



2. Call register

1. Missed calls
2. Received calls
3. Dialed numbers
4. Delete recent call lists
5. Call duration
6. Call costs
7. GPRS data counter
8. GPRS connection timer



3. Phone book

1. Search
2. Add name
3. Delete
4. Copy
5. Settings
6. Speed dials
7. Info numbers¹
8. Service numbers²
9. My numbers
10. Caller groups



4. Profiles

1. General
2. Silent
3. Meeting
4. Outdoor
5. Pager



5. Settings

1. Right selection key settings
2. Time and date settings
3. Call settings
4. Phone settings
5. Display settings
6. Tone settings
7. Accessory settings³
8. Security settings
9. Restore factory settings



6. Radio



7. Camera

1. Standard photo
2. Portrait photo
3. Self-timer
4. Settings



8. Gallery

1. View folders
2. Add folder
3. Delete folder
4. Rename folder
5. Gallery services



1. Only shown if supported by your SIM card.

2. Only shown if supported by your SIM card.

3. This menu is shown only if the phone is or has been connected to a headset, handsfree unit or loopset available for the phone.

9. Organiser

1. Alarm clock
2. Calendar
3. To-do list



10. Games

1. Select game
2. Game services
3. Memory
4. Settings



11. Applications

1. Select application
2. App. services
3. Memory



12. Extras

1. Calculator
2. Countdown timer
3. Stopwatch
4. Wallet
5. Synchronise



13. Connectivity

1. Infrared
2. GPRS



14. Services

1. Home
2. Bookmarks
3. Service inbox
4. Settings
5. Go to address
6. Clear the cache



15. SIM services¹



1. Only shown if supported by your SIM card. The name and contents vary depending on the SIM card

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product NHL-4j is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found from
http://www.nokia.com/phones/declaration_of_conformity/.

Copyright © 2003 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software
Copyright (C) 1997-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Contents

FOR YOUR SAFETY	x	Keypad lock (Keyguard)	7
Network Services	xi	Changing the covers	8
About accessories	xi	3. Call functions	10
General information	xii	Making a call	10
Stickers in the sales package	xii	Speed dialling a phone number	10
Access codes	xii	Making a conference call	10
Overview of the functions		Answering or rejecting an	
of the phone	xiv	incoming call	11
Camera	xiv	Call waiting	11
Multimedia messaging service		Options during a call	12
(MMS)	xiv	Loudspeaker	12
Polyphonic sound (MIDI)	xiv	4. Writing text	13
MIDP Java™ applications	xv	Setting predictive text input	
Over the Air (OTA) settings		on or off	13
service	xv	Using predictive text input	13
General Packet Radio Service		Writing compound words	14
(GPRS)	xv	Using traditional text input	14
Shared memory	xvi	Tips for writing text	15
1. Your phone	1	5. Using the menu	16
Keys and connectors	1	Accessing a menu function	16
Standby mode	2	6. Menu functions	17
Screen saver	2	Messages (Menu 1)	17
Wallpaper	2	Text messages	17
Essential indicators in standby mode	3	Multimedia messages	21
Putting on the wrist strap	4	Multimedia messages memory full	24
Headset	4	Deleting messages	24
2. Getting started	5	Chat	24
Installing the SIM card and the		Voice messages	25
battery	5	Info messages	25
Charging the battery	6	Message settings	26
Switching the phone on and off ...	7	Service commands	28
		Call register (Menu 2)	28
		Recent calls lists	29
		Call counters and call timers	29

Phone book (Menu 3)	30	Games (Menu 10)	52
Selecting the phone book		Launching a game	52
settings	30	Memory status for games	53
Saving names and phone		Game settings	53
numbers (Add name)	31	Applications (Menu 11)	53
Searching for a name in the		Launching an application	53
phone book	32	Other options available for an	
Editing a name, number or		application or application set	53
text item	32	Downloading an application	54
Deleting names and numbers	32	Memory status for applications	55
Copying phone books	33	Extras (Menu 12)	55
Sending and receiving a		Calculator	55
business card	33	Countdown timer	56
Speed dials	34	Stopwatch	56
Info numbers	34	Wallet	57
Service numbers	34	Synchronisation	59
My numbers	34	Synchronising from your PC	61
Caller groups	35	Connectivity (Menu 13)	61
Profiles (Menu 4)	35	Infrared	61
Settings (Menu 5)	36	GPRS	62
Right selection key	36	WAP services (Menu 14)	63
Time and date settings	36	Basic steps for accessing and using	
Call settings	37	WAP services	63
Phone settings	39	Setting up the phone for a	
Display settings	40	WAP service	63
Tone settings	42	Making a connection to a	
Accessory settings	42	WAP service	64
Security settings	43	Browsing the pages of a	
Restore factory settings	44	WAP service	65
Radio (Menu 6)	44	Ending a WAP connection	66
Tuning a radio channel	45	Appearance settings of the WAP	
Using the radio	45	browser	67
Camera (Menu 7)	46	Cookie settings	67
To take a photo	46	Bookmarks	67
Camera settings	47	Service inbox	68
Gallery (Menu 8)	47	The cache memory	68
Organiser (Menu 9)	49	Browser security	69
Alarm clock	49	SIM services (Menu 15)	71
Calendar	49		
To-do list	51		

7. PC Connectivity	72
PC Suite	72
GPRS, HSCSD and CSD	73
Using data communication applications.....	73
8. Battery information	74
Charging and Discharging.....	74
9. Genuine Accessories.....	75
Battery	75
Indoor.....	75
Travel Charger (ACP-12)	75
Indoor and Vehicle	76
Boom Headset (HDB-4).....	76
Vehicle	76
Mobile Charger (LCH-9).....	76
10. Care and Maintenance.....	77
11. Important Safety Information	78
Index.....	83

FOR YOUR SAFETY

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



BACKUP COPIES

Remember to make backup copies of all important data.






WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.





CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

Network Services

The wireless phone described in this guide is approved for use on the EGSM 900, GSM 1800 and GSM 1900 network.

Triband is a network dependent feature. Check with your local service provider if you can subscribe to and use this feature.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.



Note: Some networks may not support all language-dependent characters and/or services.

About accessories

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-12, ACP-8, ACP-7 and LCH-9.



Warning: Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

General information

■ Stickers in the sales package

The stickers contain important information for services and customer support purposes.

■ Access codes

- **Security code (5 to 10 digits):**
The security code protects your phone against unauthorised use, and is supplied with the phone. The preset code is 12345. Change the code, and keep the new code secret and in a safe place separate from your phone. To change the code, and to set the phone to request the code, see "[Security settings](#)" on page 43.
- **PIN code and PIN2 code (4 to 8 digits):** The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card.

Set the phone to request the PIN code each time the phone is switched on, see "[Security settings](#)" on page 43.

The PIN2 code may be supplied with the SIM card and is required to access some functions, such as charging unit counters.

If you key in an incorrect PIN code three times in succession, the phone may display *SIM blocked* and ask you to enter the PUK code. Contact your service provider to obtain the PUK code.

- **PUK and PUK2 codes (8 digits):**
The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.
If the codes are not supplied with the SIM card, contact your local service provider for the codes.
- **Barring password (4 digits):** The barring password is needed when using the *Call barring service*, see "[Security settings](#)" on page 43. You can obtain the password from your service provider.

- **Signing PIN:** The signing PIN is needed for the digital signature. See "[Digital signature](#)" on page 70. The signing PIN is supplied with the SIM card if the SIM card has a security module in it.

If you key in an incorrect PIN code several times, the phone may display *PIN code blocked* and ask you to key in the PUK code. Contact your service provider to get the PUK code.

- **Wallet code (4–10 digits):** The wallet code is needed to access the wallet services. If you key in a wrong wallet code several times, the wallet application is blocked for five minutes. For further information, see "[Wallet](#)" on page 57.

Overview of the functions of the phone

The Nokia 7250 phone provides many functions, which are practical for daily use, such as a Calendar, a Clock, an Alarm clock, a Camera, a Radio, and many more. Also a range of Nokia Xpress-on™ colour covers is available for your phone. To change the covers, see "[Changing the covers](#)" on page 8.

■ Camera

Your phone has a built-in camera that can be used for taking pictures. After you have taken a picture, you can attach it to a multimedia message and send it via the Multimedia Messaging Service (MMS).

The pictures can also be used as wallpapers in standby mode.

You can save your pictures in a compatible PC using the PC Suite software.

■ Multimedia messaging service (MMS)

The phone is able to send multimedia messages composed of text and a picture, and to receive messages containing text, a picture and sound. You can save the pictures and ringing tones for personalising your phone. See "[Multimedia messages](#)" on page 21.

■ Polyphonic sound (MIDI)

Polyphonic sound consists of several sound components played at the same time like a real melody through a speaker. Polyphonic sounds are used in ringing tones and message alert tones. Your phone has sound components from over 40 instruments that can be used for polyphonic sounds, but the phone can only play four instruments simultaneously. The phone supports Scalable Polyphonic MIDI (SP-MIDI) format.

You can receive polyphonic ringing tones via the multimedia service, see ["Reading and replying to a multimedia message"](#) on page 23, or download them via the gallery menu, see ["Gallery \(Menu 8\)"](#) on page 47 or via PC suite, see ["PC Suite"](#) on page 72.

■ MIDP Java™ applications

Your phone supports Java and includes some Java applications and games that have been specially designed for mobile phones. You can download new applications and games to your phone from a compatible PC with a Java installer software or from WAP services, e.g. from Club Nokia. See ["Games \(Menu 10\)"](#) on page 52.

■ Over the Air (OTA) settings service

In order to use WAP, MMS, GPRS and other wireless services, you need to have proper settings on your phone. You may receive the settings directly as an OTA message and you only need to save the settings on your phone. For more information on the availability of the settings, contact your network operator, service provider or nearest authorised Nokia dealer.

■ General Packet Radio Service (GPRS)

GPRS technology allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP) – based network. GPRS as such is a data bearer that enables wireless access to data networks such as the Internet. The applications that use GPRS are WAP services, MMS and SMS messaging, Java™ application downloading and the PC dial-up (for example, Internet and e-mail).

Before you can use GPRS technology

- Contact your network operator or service provider for availability and subscription to the GPRS service.
- Save the GPRS settings for each of the applications used over GPRS.

See ["Setting up the phone for a WAP service"](#) on page 63, ["Message settings"](#) on page 26 and ["GPRS"](#) on page 62.

Pricing for GPRS and applications

For more detailed information on pricing, contact your network operator or service provider.


■ Shared memory

The following features in this phone may share memory: phone book, text and multimedia messages, images and ringing tones in gallery, calendar, to-do notes, and Java games and applications. Using any such features may reduce the memory available for any features sharing memory. This is especially true with heavy use of any of the features (although some of the features may have a certain amount of memory specially allotted to them in addition to the amount of memory shared with other features). For example, saving many images, java applications etc. may take all of the shared memory and your phone may display a message that the memory is full. In this case, delete some of the information or entries stored in the shared memory features before continuing.

1. Your phone

■ Keys and connectors

1. Power key

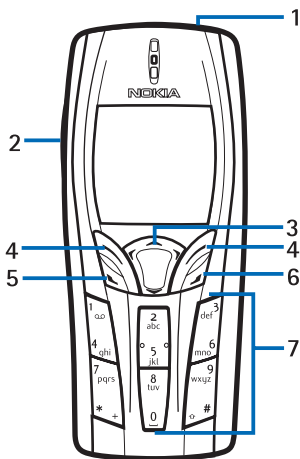

Switches the phone on and off.

For example, when the keypad is locked, pressing the power key briefly turns the phone's display lights on for approximately 15 seconds.

2. Volume keys

Keys to adjust the volume of the earpiece, the headset and the loudspeaker.

3. 4-way scroll keys



Enables scrolling through names, phone numbers, menus or settings.

4. Selection keys

 
 



The function of the keys depends on the guiding text shown on the display above the keys. See ["Standby mode"](#) on page 2.


5. dials a phone number, and answers a call. In standby mode it shows the most recently called number.

6. ends an active call. Exits from any function.


7. - enter numbers and characters.

  and  are used for various purposes in different functions.

1. Charger connector

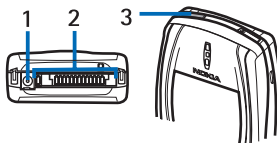


2. Pop-Port™ connector for headsets and the data cable, for example
3. Infrared (IR) port
4. Camera lens on the back cover of the phone.

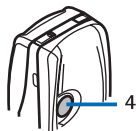

■ Standby mode

When the phone is ready for use, and you have not keyed in any characters, the phone is in standby mode.

1. Indicates in which cellular network the phone is currently being used.

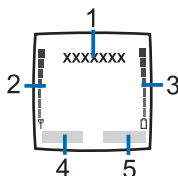

2. Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal.
3. Shows the battery charge level. The higher the bar, the more power in the battery.
4. The left selection key in standby mode is **Menu**.

5. The right selection key in standby mode is **Names or Go to**

To activate a function in the selection key **Go to**, press **Go to**, scroll to the specific function and select it.

To set the functions for the right selection key, see "[Right selection key](#)" on page 36.

See also "[Essential indicators in standby mode](#)" on page 3.

Screen saver













 


The phone automatically activates the screen saver, a digital clock view, for power saving in standby mode. It will be activated by a certain time when no function of the phone is used. See "[Screen saver](#)" on page 41. Press any key to deactivate the screen saver.

Note that if you have not set the time, 00:00 is displayed. To set the time, see "[Clock](#)" on page 36.

Wallpaper

You can set your phone to display a background picture, wallpaper, when the phone is in standby mode. See "[Wallpaper](#)" on page 40.

Essential indicators in standby mode

 
-  You have received one or several text or picture messages. See "[Reading and replying to a message or an e-mail](#)" on page 19.
-  You have received one or several multimedia messages. See "[Reading and replying to a multimedia message](#)" on page 23.
-  You have received one or several voice messages. See "[Voice messages](#)" on page 25.
-  The phone's keypad is locked. See "[Keypad lock \(Keyguard\)](#)" on page 7.
-  The phone does not ring for an incoming call or text message when *Incoming call alert* is set to *Off* and *Message alert tone* is set to *Off*. See "[Tone settings](#)" on page 42.
-  The alarm clock is set to *On*. See "[Alarm clock](#)" on page 49.
-  The countdown timer is running. See "[Countdown timer](#)" on page 56.
-  The stopwatch is running in the background. See "[Stopwatch](#)" on page 56.
-  A GPRS dial-up connection is established, refer to "[GPRS modem settings](#)" on page 62. The indicator is shown on the top left of the display.
-  The GPRS connection is suspended (on hold), for example if there is an incoming or outgoing call during a GPRS dial-up connection.
-  Infrared connection indicator, see "[Infrared](#)" on page 61.
-  All your calls are diverted to another number, *Divert all voice calls*. If you have two phone lines, the divert indicator for the first line is  and for the second line . See "[Call divert](#)" on page 37.
- 1 or 2** If you have two phone lines, the indicator displays the selected phone line. See "[Line for outgoing calls](#)" on page 38.
-  The loudspeaker has been activated, see "[Loudspeaker](#)" on page 12.



Calls are limited to a closed user group. See ["Security settings"](#) on page 43.



The timed profile is selected. See ["Profiles \(Menu 4\)"](#) on page 35.



A headset, handsfree, loopset or music stand accessory is connected to the phone.

To enable the phone to show the time and date in standby mode, see ["Clock"](#) on page 36 and ["Date"](#) on page 37.


■ Putting on the wrist strap

Thread the strap as shown in the picture and then tighten it.




■ Headset

Connect the stereo headset HDS-3 to the Pop-Port connector of your phone as shown in the picture.

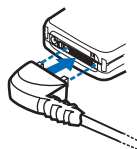

For example, you can carry the headset as shown in the picture.

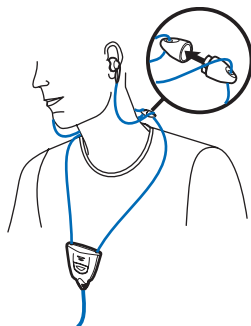


2. Getting started

■ Installing the SIM card and the battery


- Keep all miniature SIM cards out of the reach of small children.
- The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.
- Before installing the SIM card, always make sure that the phone is switched off and then remove the battery.

1. To remove the back cover off the phone:


With the back of the phone facing you, push the back cover release button (1) and remove the cover off the phone (2).

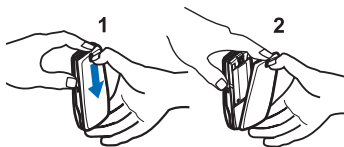


2. Remove the battery by lifting it from the end with the finger grip (3).

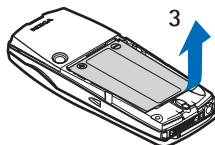


3. To release the SIM card holder, slide the card holder backwards (4) and open it (5).

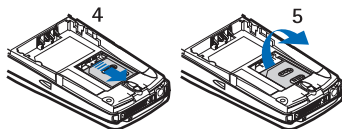


4. Insert the SIM card into the SIM card holder (6). Make sure that the SIM card is properly inserted and that the golden contact area on the card is facing downwards.

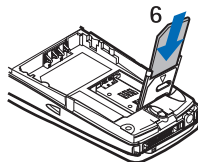

5. Close the SIM card holder (7) and (8).

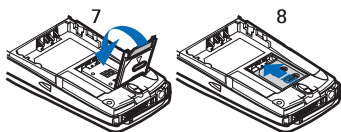


6. Replace the battery (9).

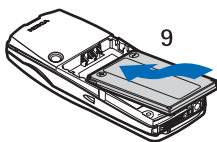


7. To replace the back cover:

First place the top of the back cover over the locking catch on the top of the phone (10). Direct the back cover towards the locking catches on both sides of the phone and press to lock the cover into place (11).

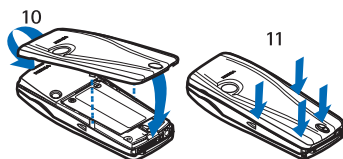

■ Charging the battery

1. Connect the lead from the charger to the socket on the bottom of your phone.

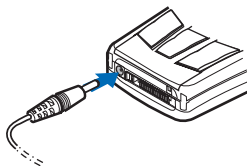

2. Connect the charger to an AC wall socket.

The text **Charging** is displayed briefly if the phone is switched on. If the battery is completely flat, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

You can use the phone while the charger is connected.

The charging time depends on the charger and the battery used. For example, charging a BLD-3 battery with the ACP-12 charger takes up to one hour and 30 minutes while the phone is in standby mode.

■ Switching the phone on and off

Press and hold the power key ①.

Note that if the phone displays *Insert SIM card* even though the SIM card is properly inserted, or *SIM card not supported*, contact your network operator or service provider. Your phone does not support 5 Volt SIM cards and the card may need to be changed.



- If the phone asks for a PIN code, key in the PIN code (displayed as ****), and press **OK**.

See also *PIN code request* in "Security settings" on page 43 and "Access codes" on page xii.

- If the phone asks for a security code, key in the security code (displayed as ****), and press **OK**.


See also "Access codes" on page xii.



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

TIPS ON EFFICIENT OPERATION:


Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.

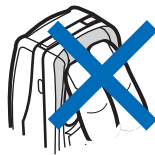

■ Keypad lock (Keyguard)


You can lock the keypad to prevent the keys being accidentally pressed, for example, when your phone is in your handbag.


- Locking the keypad

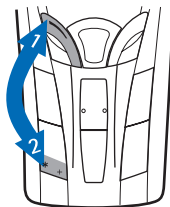

In standby mode, press **Menu** and then *** +** within 1.5 seconds.

 - **Unlocking the keypad**


Press **Unlock** and then  within 1.5 seconds.

To answer a call when the keyguard is on, press . During a call, the phone can be operated normally. When you end or reject the call, the keypad will automatically be locked.

For automatic keypad locking, see ["Automatic keyguard"](#) on page 39.

For locking the keypad during a call, see ["Options during a call"](#) on page 12.




Note: When Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.


■ Changing the covers

Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.


1. Remove the back cover of the phone. See the step 1 in ["Installing the SIM card and the battery"](#) on page 5.
2. To remove the front cover, gently pull the locking catch on the top of the front cover from the locking hole in the phone (1) and remove the cover starting from the top.

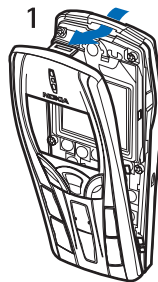

3. Place the key mat on the new front cover (2).

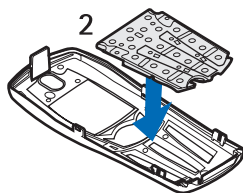

4. To replace the front cover, first place the catches on the lower part of the cover into the corresponding holes on the phone (3) and then gently push the catch on the top of the cover through the locking hole on the top of the phone (4). Press the cover into place.

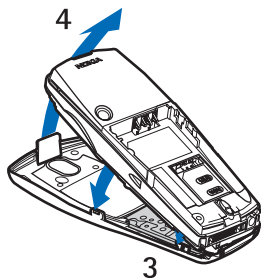

5. Replace the back cover of the phone. See step 7 in ["Installing the SIM card and the battery"](#) on page 5.

3. Call functions

■ Making a call

1. Key in the phone number, including the area code. If you key in an incorrect character, press **Clear** to delete it.
For international calls, press twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without the leading 0, if necessary, and the phone number.
2. Press to call the number.
3. Press to end the call or to cancel the call attempt.

See also ["Options during a call"](#) on page 12.

Making a call using the phone book

- See ["Searching for a name in the phone book"](#) on page 32. Press to call the number on the display.

Last number redialling

- In standby mode, press once to access the list of the last 20 numbers you called or attempted to call. Scroll to the number or name you want, and press to call the number.

Calling your voice mailbox

- In standby mode, press and hold , or press and .
If the phone asks for the voice mailbox number, key it in and press **OK**. See also ["Voice messages"](#) on page 25.

Speed dialling a phone number


Before you can use speed dialling, assign a phone number to one of the speed dialling keys, from to , see ["Speed dials"](#) on page 34. Call the number in either of the following ways:

- Press the speed dialling key you want and then press .
- If *Speed dialling* is set to on, press and hold a speed dialling key until the call is started. See ["Speed dialling"](#) on page 38.



Making a conference call


Conference calling is a network service that allows up to six persons to take part in a conference call.

1. Make a call to the first participant.
2. To make a call to a new participant, press **Options** and select *New call*.

3. Key in, or retrieve from the memory, the phone number of the new participant and press **Call**. The first call is put on hold.
4. When the new call has been answered, join the first participant in the conference call. Press **Options** and select **Conference**.
5. To add a new participant to the call, repeat steps 2 to 4.
6. To have a private conversation with one of the participants:
Press **Options** and select **Private** and select the desired participant. Rejoin the conference call as described in step 4.
7. To end the conference call, press .

■ Answering or rejecting an incoming call

Press  to answer an incoming call and press  to end the call.

Press  to reject an incoming call.

If you press **Silence**, only the ringing tone is muted. Then either answer or reject the call.



If the headset HDB-4 or HDS-3 is connected to the phone, you can answer and end a call by pressing the headset key.



Tip: If the **Divert if busy** function is activated to divert the calls, for example to your voice mailbox, rejecting an incoming call will also divert the call. See "**Call divert**" on page 37.

Note that when somebody is calling you, the phone shows the caller's name, phone number or the text **Private number** or **Call**. If more than one name is found in the phone book with the same phone number as the caller's number, only the phone number will be displayed, if this is available.

Call waiting

During a call, press  to answer the waiting call. The first call is put on hold. Press  to end the active call.

 
To activate the **Call waiting** function, see "**Call waiting**" on page 38.

■ Options during a call

Many of the options that you can use during a call, are network services. Press **Options** during a call for some of the following options:

Mute or Unmute, End call, End all calls, Phone book, Menu and Hold or Unhold, New call, Conference, Private, Answer, Reject and Loudspeaker or Handset.

Lock keypad to activate the keypad lock.

Send DTMF to send DTMF tone strings, for example, passwords or bank account numbers. Key in the DTMF string or search for it in the phone book and press **OK**. Note that you can key in the wait character w and the pause character p by repeatedly pressing .

Swap to switch between the active call and the call on hold, *Transfer* to connect a call on hold to an active call, and disconnect yourself from the calls.

Loudspeaker

You can use your phone as a loudspeaker during a call. Do not hold the phone to your ear during loudspeaker operation.

- To activate the loudspeaker, press **Options** and select *Loudspeaker*, or press **Loudsp.**, if available.
- To deactivate the loudspeaker during a call, press **Options** and select *Handset*, or press **Handset**, if available.







If you have connected the handsfree unit CARK126 or the headset to the phone, *Handset* in the options list is replaced with *Handsfree* or *Headset* and the selection key **Handset** with **Handsfr.** or **Headset**, respectively.

The loudspeaker is automatically deactivated when you end the call or call attempt or connect the handsfree unit or headset to the phone.

Using the loudspeaker with the radio, see ["Using the radio"](#) on page 45.

4. Writing text

You can key in text, for example when writing messages, using traditional or predictive text input.



When you are writing text, the predictive text input is indicated by  and the traditional text input by  at the top left of the display. The character case is indicated by **Abc**, **abc**, or **ABC** next to the text input indicator. You can change the character case by pressing  . The number mode is indicated by **123**, and you can change between the letter and number mode by pressing and holding  .

■ Setting predictive text input on or off

When writing text, press **Options** and select *Dictionary*.

 

- To set the predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages on the list.
- To revert to traditional text input, select *Dictionary off*.



 
 
 

 
Tip: To quickly set the predictive text input on or off when writing text, press   twice, or press and hold **Options**.

■ Using predictive text input

You can key in any letter with a single keypress. The predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word using the keys  to . Press each key only once for one letter. The word changes after each keystroke.

 



Example: To write **Nokia** when the English dictionary is selected, press  once for N,  once for o,  once for k,  once for i and  once for a:



To insert a number while in letter mode, press and hold the desired number key.

More instructions for writing text, see "[Tips for writing text](#)" on page 15.

 
- When you have finished writing the word and it is correct, confirm it by adding a space with  or by pressing any of the scroll keys. Pressing a scroll key also moves the cursor.

If the word is not correct, press  repeatedly or press **Options** and select *Matches*. When the word you want appears, confirm it.

 

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**, key in the word (traditional text input is used) and press **Save**. When the dictionary becomes full, the new word replaces the oldest one that was added.

- Start writing the next word.


Writing compound words

Key in the first part of the word and confirm it by pressing . Write the last part of the word and confirm the word.

Using traditional text input

 Press a number key,  to , repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the language selected in the *Language* menu, see "*Language*" on page 39.






To insert a number while in letter mode, press and hold the desired number key.

- If the next letter you want is located on the same key as the present one, wait until the cursor appears, or press any of the scroll keys and then key in the letter.
- The most common punctuation marks and special characters are available under the number key .

More instructions for writing text, see "*Tips for writing text*" on page 15.

 ■ Tips for writing text



The following functions may also be available for writing text:

- To insert a space, press .
- To move the cursor to the left, right, down or up, press the scroll keys , ,  or , respectively.

 
 
 
 
 
- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly.

To delete all the characters at once when writing a message, press **Options** and select *Clear text*.

- To insert a word when using the predictive text input, press **Options** and select *Insert word*. Write the word using the traditional text input and press **Save**. The word is also added to the dictionary.

- To insert a special character when using the traditional text input, press , or when using the predictive text input, press and hold , or press **Options** and select *Insert symbol*.

Press any of the scroll keys to scroll to a character and press **Use** to select the character.

You can also scroll to a character by pressing , ,  or , and select the character by pressing .

The following options are available when writing text messages:



- To insert a number while in letter mode, press **Options** and select *Insert number*. Key in the phone number or search for it in the phone book and press **OK**.
- To insert a name from the phone book, press **Options** and select *Insert name*. To insert a phone number or a text item attached to the name, press **Options** and select *View details*.

5. Using the menu

The phone offers you an extensive range of functions, which are grouped into menus. Most of the menu functions are provided with a brief help text. To view the help text, scroll to the menu function you want and wait for 15 seconds. To exit the help text, press **Back**. See "[Help text activation](#)" on page 40.

■ Accessing a menu function

By scrolling

 

 
 
1. To access the menu, press **Menu**.
2. Scroll with  or  through the menu and select, for example, *Settings* by pressing **Select**.
3. If the menu contains submenus, select the one you want, for example *Call settings*.
4. If the selected submenu contains further submenus, repeat step 3. Select the next submenu, for example *Anykey answer*.
5. Select the setting of your choice.
6. Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

By using a shortcut

The menus, submenus and setting options are numbered and you can access them by using their shortcut number.

- To access the menu, press **Menu**. Key in quickly, within two seconds, the index number of the menu function you want to access.



Example: To set the *Anykey answer On*, press **Menu**, , ,  and . Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

6. Menu functions

■ Messages (Menu 1)



You can read, write, send and save text, multimedia and e-mail messages. All messages are organised into folders.

Before you can send any text, picture, or e-mail message, you need to save your message centre number, see "[Message settings](#)" on page 26.

Text messages

Your phone can send and receive multi-part messages, which consist of several ordinary text messages (network service). Invoicing is based on the number of ordinary messages that are required for a multi-part message.

You can also send and receive text messages that contain pictures. Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.




Note: Picture message function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.

Writing and sending messages

The number of available characters and the current part number of a multi-part message are shown on the top right of the display.

1. Press **Menu**, and select *Messages*, *Text messages* and *Create message*.



Tip: To quickly open *Create message*, press  in standby mode.

2. Key in a message. See "[Writing text](#)" on page 13. To insert text templates or a picture into the message, see "[Templates](#)" on page 20.
3. To send the message, press **Options** and select *Send*.
4. Enter the recipient's phone number or search for the phone number in the phone book.
Press **OK** to send the message.



Note: When sending messages via the SMS network service, your phone may display the words *Message sent*. This is an indication that the message has been sent by your phone to the message centre number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.

Options for sending a message

After you have written a message, press **Options** and select *Sending options*.

- To send a message to several recipients, select *Send to many*. When you have sent the message to everyone you want to send it to, press **Done**.
- To send a message using a message profile, select *Sending profile* and then the desired message profile.

To define a message profile, see "Message settings" on page 26.

Writing and sending e-mail

Before you can send e-mail via SMS, you need to save the settings for sending e-mail, see "Message settings" on page 26. For availability and subscription to the e-mail service, contact your network operator or service provider. To save an e-mail address in the phone book, see "Saving multiple numbers and text items per name" on page 31.

1. Press **Menu**, and select *Messages, Text messages and Create e-mail*.
2. Key in the recipient's e-mail address or search for it in the phone book and press **OK**.
3. If you wish, you can key in the subject for the e-mail and press **OK**.
4. Key in the e-mail message. See "Writing text" on page 13. The total number of characters that you can key in is shown on the top right of the display. The e-mail address and subject are included in the total number of characters.

See also "Inserting a text template into a message or into an e-mail" on page 20. Pictures cannot be inserted.


5. To send the e-mail, press **Options** and select *Send e-mail*. If you have not saved the settings for sending e-mails, the phone asks for the number of the e-mail server.


Press **OK** to send the e-mail.



Note: When sending e-mails via the SMS network service, your phone may display the words *Message sent*. This is an indication that the e-mail has been sent by your phone to the e-mail server. This is not an indication that the e-mail has been received at the intended destination. For more details about e-mail services, check with your service provider.

Reading and replying to a message or an e-mail

When you have received a message or an e-mail, the indicator  and the number of new messages followed by *message(s) received* are shown.


The blinking  indicates that the message memory is full. Before you can receive new messages, delete some of your old messages in the *Inbox* folder.

The text messages function uses shared memory, see "*Shared memory*" on page xvi.

1. Press **Show** to view the new message, or press **Exit** to view it later.

Reading the message later:

Press **Menu**, and select *Messages, Text messages* and *Inbox*.

2. If more than one message has been received, select the one that you want to read. An unread message is indicated by  in front of it.
3. While reading or viewing the message, press **Options**.

You can select an option, for example, to delete, forward or edit the message as a text message or an e-mail, move and rename the message you are reading.

Select *Copy to calendar* to copy text at the beginning of the message to your phone's calendar as a reminder note for the current day.

Select *Message details* to view the sender's name and phone number, the message centre used, and the date and time of receipt.

Select *Use detail* to extract numbers, e-mail addresses and website addresses from the current message.

When reading a picture message, select *Save picture* to save the picture in the *Templates* folder.

4. Select *Reply* to reply to a message. Select *Original text* to include the original message in the reply, or select a standard answer to be included in the reply, or select *Empty screen*.

When replying to an e-mail, confirm or edit the e-mail address and subject first. Then write your reply message.



5. Press **Options**, select *Send*, and press **OK** to send the message to the displayed number.

Inbox and outbox folders

The phone saves incoming text messages in the *Inbox* folder and sent messages in the *Sent items* folder of the *Text messages* submenu.

Text messages that you wish to send later can be saved in the *Archive*, *My folders* or *Templates* folder.

Templates


Your phone includes text templates, indicated by , and picture templates, indicated by .

To access the template list, press **Menu**, and select *Messages*, *Text messages* and *Templates*.

Inserting a text template into a message or into an e-mail

- When you are writing or replying to a message or an e-mail, press **Options**. Select *Use template* and select the template that you want to insert.

Inserting a picture into a text message

- When you are writing or replying to a message, press **Options**. Select *Insert picture* and select a picture to view it. Press **Insert** to insert the picture into your message. The  indicator in the header of the message indicates that a picture has been attached. The number of characters that you can enter in a message, depends on the size of the picture.

To view the text and the picture together before sending the message, press **Options** and select *Preview*.

Archive folder and my folders

To organise your messages, you can move some of them to the *Archive* folder, or add new folders for your messages.

While reading a message, press **Options**. Select *Move*, scroll to the folder that you want to move the message to and press **Select**.

To add or delete a folder, press **Menu**, and select *Messages, Text messages* and *My folders*.

- To add a folder, press **Options** and select *Add folder*.
- To delete a folder, scroll to the folder that you want to delete, press **Options** and select *Delete folder*.

Multimedia messages



Note: This function can be used only if it is supported by your network operator or service provider. Only phones that offer multimedia message features can receive and display multimedia messages.

A multimedia message can contain text, sound and a picture. The phone supports multimedia messages that are up to 45 KB in size. If the maximum size is exceeded, the phone may not be able to receive the message. Depending on the network, you may receive a text message that includes an Internet address where you can view the multimedia message.

If the message contains a picture, the phone scales it down to fit the display area.



Note: If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive.

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, PNG, and BMP.
- Sound: Scalable Polyphonic MIDI (SP-MIDI) and monophonic ringing tones.


If a received message contains any unsupported elements, they may be replaced with the file name and the text *Object format not supported*.

Note that you are not able to receive any multimedia messages if you have a call in progress, a game or another Java application running, or an active WAP connection over GSM data (see ["Keying in the service settings manually"](#) on page 64). Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.

Writing and sending a multimedia message

To set the settings for multimedia messaging, see ["Settings for multimedia messages"](#) on page 27. For availability and a subscription to the multimedia messaging service, contact your network operator or service provider.


1. Press **Menu**, and select *Messages, Multimedia msgs.* and *Create message*.
2. Key in a message. See ["Writing text"](#) on page 13.

You can insert one picture in a multimedia message. To insert a picture, press **Options**, and select *Insert image*. The list of available folders in the *Gallery* is shown. Open a specific folder, scroll to the desired picture, press **Options** and select *Insert*. The  indicator in the header of the message indicates that a picture has been attached.

To insert a name from the phone book, press **Options**, select *More options* and *Insert name*. Scroll to the desired name, press **Options** and select *Insert contact*.



To insert a number, press **Options**, select *More options* and *Insert number*. Key in the number or search for it in the phone book, and press **OK**.


3. To view the message before sending it, press **Options** and select *Preview*.
4. To send the message, press **Options** and select *Send to number* (or *Send to e-mail*).
5. Enter the recipient's phone number (or e-mail address) or search for it in the phone book. Press **OK** and the message is moved to the *Outbox* folder for sending.

It takes more time to send a multimedia message than to send a text message. While the multimedia message is being sent, the animated indicator  is displayed and you can use other functions on the phone. If there is an interruption while the message is being sent, the phone tries to resend it a few times. If this fails, the message will remain in the *Outbox* folder and you can try to resend it later.

The messages that you have sent will be saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "Settings for multimedia messages" on page 27.

Reading and replying to a multimedia message

When your phone is receiving a multimedia message, the animated indicator  is displayed. When the message has been received, the indicator  and the text *Multimedia message received* are shown.

The blinking  indicates that the memory for multimedia messages is full, see "Multimedia messages memory full" on page 24.

The multimedia message function uses shared memory, see "Shared memory" on page xvi.

1. Press **Show** to view the message, or press **Exit** to view it later.

Reading the message later: Press **Menu**, and select *Messages*, *Multimedia msgs.* and *Inbox*.

2. Scroll to view the message. Press **Options** and some of the following options may be available.

- *Delete message* to delete a saved message.
- *Reply* to reply to the message. To send the reply, press **Options** and select *Send*. The sender's phone number (or e-mail address) is used as the default value.
- *Forward to no.* or *Forward to e-mail* to forward the message to a phone number or e-mail address.
- *Edit* to edit a message. You can only edit messages you have written. See "Writing and sending a multimedia message" on page 22.
- *Message details* to view the subject, size and class of the message.
- *Details* to view the details of the attached image or sound.
- *Play* to listen to the ringing tone or to view animated images if contained in the message.
- *Save sound clip* to save the ringing tone in the *Gallery*.
- *Save image* to save the picture in the *Gallery*.

Inbox, Outbox, Saved and Sent items folders


The phone saves the multimedia messages that have been received in the *Inbox* folder of the *Multimedia msgs.* submenu.

Multimedia messages that have not yet been sent are moved to the *Outbox* folder of the *Multimedia msgs.* submenu.

The multimedia messages that you wish to send later, can be saved in the *Saved items* folder of the *Multimedia msgs.* submenu.

The multimedia messages that have been sent are saved in the *Sent items* folder of the *Multimedia msgs.* submenu if the setting *Save sent messages* is set to *Yes*. See "*Settings for multimedia messages*" on page 27.

Multimedia messages memory full

When you have a new multimedia message waiting and the memory for the messages is full, the indicator  blinks and *Multimedia memory full, view waiting msg.* is shown. To view the waiting message, press **Show**. To save the message, press **Options**, select *Save message* and delete old messages by first selecting the folder and then the old message to be deleted.

To discard the waiting message, press **Exit** and **Yes**. If you press **No**, you can view the message.

Deleting messages

1. To delete text messages, press **Menu**, and select *Messages, Text messages* and *Delete messages*.

To delete all text messages from all folders, select *All messages* and when *Delete all messages from all folders?* is displayed, press **OK**. If the folders contain unread messages, the phone will ask whether you want to delete them also.

To delete multimedia messages, press **Menu**, and select *Messages, Multimedia msgs.* and *Delete messages*.

2. To delete all messages from a folder, select the folder where you want to delete the messages and press **OK**. If the folder contains unread messages, the phone will ask whether you want to delete them also.

Chat

You can have a conversation with another person using this faster text messaging application. You cannot save received or sent messages, but you can view them while chatting. Each chat message is priced as a text message.

1. To start a chat, press **Menu**, select *Messages* and *Chat*. Key in or search the phone book for the phone number of the person with whom you want to start a chat session and press **OK**.

Another way to start a chat:

When you have received a message, press **Show** to read it.

To start a chat, press **Options** and select *Chat*.

2. Key in your nickname for the chat and press **OK**.
3. Write your chat message, see "Writing text" on page 13.
4. To send the message, press **Options** and select *Send*.
5. The reply message from the other person is shown above your original message.

To reply to the message, press **OK** and repeat steps 3 and 4.

6. To end the chat session, press **OK** and **Options**, and select *Quit*.

To view the most recent messages of the current chat session, press

Options and select *Chat history*. The messages that you sent are indicated by "<" and your nickname and the messages that you received are indicated by ">", and the sender's nickname. Press **Back** to return to the message you are currently writing. To edit your nickname, select the option *Chat name*.

Voice messages


Voice mailbox is a network service and you may need to subscribe to it. For more information and for the voice mailbox number, contact your service provider.

Press **Menu**, and select *Messages* and *Voice messages*. Select

 
- *Listen to voice messages* to call your voice mailbox at the phone number that you have saved in the *Voice mailbox number* menu.

Each phone line may have its own voice mailbox number, see "Line for outgoing calls" on page 38.

- *Voice mailbox number* to key in, search for or edit your voice mailbox number and press **OK** to save it.

If supported by the network, the indicator  will show new voice messages. Press **Listen** to call your voice mailbox number.



Tip: Pressing and holding  calls your voice mailbox.

Info messages

With the info message network service you can receive messages on various topics from your service provider, for example weather or traffic conditions. For available topics and the relevant topic numbers, contact your service provider.

If the *GPRS connection* is set to *Always online*, the info messages may not be received. In that case, set the *GPRS connection* to *When needed*, see "*GPRS connection*" on page 62.

Message settings

The message settings affect the sending, receiving and viewing of messages.

Settings for text and e-mail messages

1. Press **Menu**, and select *Messages*, *Message settings*, *Text messages* and *Sending profile*.
2. If more than one message profile set is supported by your SIM card, select the set you want to change.

- Select *Message centre number* to save the phone number of the message centre that is required for sending text messages. You will receive this number from your service provider.
- Select *Messages sent as* to select the message type *Text*, *E-mail*, *Paging* or *Fax*.

- Select *Message validity* to select the length of time for which the network should attempt to deliver your message.
- For message type *Text*, select *Default recipient number* to save a default number for sending messages for this profile.

For message type *E-mail*, select *E-mail server* to save the e-mail server number.

- Select *Delivery reports* to ask the network to send delivery reports about your messages (network service).
- Select *Use GPRS* to set GPRS as the preferred SMS bearer.
- Select *Reply via same centre* to allow the recipient of your message to send you a reply via your message centre (network service).
- Select *Rename sending profile* to change the name of the selected message profile. The message profile sets are only displayed if your SIM card supports more than one set.

Overwrite settings

When the text message memory is full, the phone cannot receive or send any new messages. However, you can set the phone to automatically replace old text messages in the *Inbox* and *Sent items* folders with the new ones.


Press **Menu**, and select *Messages*, *Message settings*, *Text messages* and *Overwriting in inbox* or *Overwriting in sent items*. Select *Allowed* to set the phone to replace the old text messages with new ones in the *Inbox* or the *Sent items* folder, respectively.

Settings for multimedia messages

Press **Menu**, and select *Messages*, *Message settings* and *Multimedia msgs..* Select

- *Save sent messages*. Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.
- *Allow multimedia reception*. Choose *No*, *Yes* or *In home network* to use the multimedia service. If you choose *In home network*, you cannot receive multimedia messages when outside your home network.

- *Incoming multimedia messages*. Select *Retrieve* to set the phone to automatically fetch newly received multimedia messages, or select *Reject* if you do not wish to receive multimedia messages. This setting is not shown if the *Allow multimedia reception* is set to *No*.
- *Connection settings*. Define WAP connection settings for retrieving multimedia messages. Activate the set where you want to save the connection settings and then edit the settings.
 - *Settings' name*. Key in the new name for the connection set and press **OK**.
 - *Homepage*. Key in the homepage address of the WAP service that you want to use, press 100 for a dot, and press **OK**.
 - *Session mode*. Select *Permanent* or *Temporary*.
 - *Data bearer*. Select *GPRS*.
 - *GPRS access point*. Key in the access point name to establish a connection to a GPRS network and press **OK**. Contact your network operator or service provider for the access point name.

- *IP address.* Key in the address, press  for a dot, and press **OK**. You obtain the IP address from your network operator or service provider.
- *Authentication type.* Select *Secure* or *Normal*.
- *User name.* Key in the user name and press **OK**.
- *Password.* Key in the password and press **OK**.
- *Allow adverts.* You can receive or reject advertisements. This setting is not shown if the *Allow multimedia reception* is set to *No*.

To receive the multimedia connection settings as a text message

You may receive the service settings as a text message from the network operator or service provider that offers the WAP service that you want to use. For more information, contact your network operator or service provider. You can also visit Club Nokia's website (www.club.nokia.com), availability may vary by country

Font size setting

To select the font size for reading and writing messages, press **Menu**, and select *Messages*, *Message settings*, *Other settings* and *Font size*.

Service commands

Press **Menu**, and select *Messages* and *Service commands*. Key in and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

■ Call register (Menu 2)



The phone registers the phone numbers of missed, received and dialled calls, and the approximate length and cost of your calls.

The phone registers missed and received calls only if the network supports these functions, the phone is switched on and within the network's service area.


When you press **Options** in the *Missed calls*, *Received calls* and *Dialled numbers* menu, you can, for example, view the date and the time of the call, edit or delete the phone number from the list, save the number in the phone book, or send a message to the number.

Recent calls lists

Press **Menu**, and select *Call register* and then select

- *Missed calls* to view the list of the last ten phone numbers from which somebody has tried to call you (network service). The number in front of the (name or) phone number indicates the amount of call attempts from that caller.



Tip: When a note about missed calls is displayed, press **List** to access the list of phone numbers. Scroll to the number you would like to call back and press .

- *Received calls* to view the list of the last ten phone numbers from which you have most recently accepted calls (network service).
- *Dialled numbers* to view the list of the 20 phone numbers that you have most recently called or attempted to call. See also "*Last number redialling*" on page 10.
- *Delete recent call lists* to delete the recent calls lists. Select whether you want to delete all the phone numbers in the recent calls lists, or only those numbers in the missed calls, received calls or dialled numbers lists. You cannot undo the operation.

Call counters and call timers



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding-off for billing, taxes and so forth.

Press **Menu**, and select *Call register* and then select

- *Call duration*, scroll to view the approximate duration of your incoming and outgoing calls in hours, minutes and seconds. The security code is required to clear the timers.

Each phone line has its own call timers and the timers of the selected line are displayed. See "*Line for outgoing calls*" on page 38.

- *Call costs* (network service). Select *Last call units* or *All calls' units* to check the cost of your most recent call or all calls in terms of units specified within the *Show costs in* function. Select *Call cost settings* and select *Clear counters* to clear the counters, or select *Show costs in* to set the phone to show the remaining talk time in terms of charging units, *Units*, or units of currency, *Currency*. Contact your service provider for charging unit prices.

Select *Call cost limit* to limit the cost of your calls to a certain amount of charging units or units of currency. The PIN2 code is required for the call cost settings.




Note: When no more charging units or currency units are left, calls may only be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number).

- *GPRS data counter*. Scroll to check the amounts of data that were sent or received data in last session, data sent and received in total, and to clear the counters. The counter unit is a byte. The security code is required to clear the counters.
- *GPRS connection timer*. Scroll to check the duration of the last GPRS connection or the total GPRS connection. You can also clear the timers. To clear the timers, the security code is required.

■ Phone book (Menu 3)



You can save names and phone numbers in the phone's memory (internal phone book) and in the SIM card's memory (SIM phone book).

- The internal phone book may save up to 500 names with numbers and text notes about each name. The number of names that can be saved depends on the length of the names, and the number and length of the phone numbers and text items.
- The phone supports SIM cards that can save up to 250 names and phone numbers. Names and numbers saved in the SIM card's memory, are indicated by .

Selecting the phone book settings

Press **Menu** and select *Phone book* and *Settings*. Select

- *Memory in use* to select the phone book you want to use. To recall names and numbers from both phone books, select *Phone and SIM*. In that case, the names and numbers will be saved in the phone's memory.

- *Phone book view* to select how the names and numbers in the phone book are displayed.
- *Memory status* to see how many names and phone numbers are currently saved and how many can still be saved in the selected phone book.

Saving names and phone numbers (Add name)

Names and numbers will be saved in the used memory, see "[Selecting the phone book settings](#)" above.

1. Press **Menu** and select *Phone book* and *Add name*.
2. Key in the name and press **OK**. See "[Using traditional text input](#)" on page 14.
3. Key in the phone number, and press **OK**. To key in the numbers, see "[Making a call](#)" on page 10.
4. When the name and number are saved, press **Done**.



Tip: Quick save In standby mode, key in the phone number. Press **Options**, and select *Save*. Key in the name, press **OK** and **Done**.

Saving multiple numbers and text items per name

You can save different types of phone numbers and short text items per name in the phone's internal phone book.

The first number saved is automatically set as the default number and it is indicated with a frame around the number type indicator, for example . When you select a name from the phone book, for example to make a call, the default number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*. See "[Selecting the phone book settings](#)" on page 30.
2. To access the list of names and phone numbers, press in standby mode.
3. Scroll to the name saved in the phone's internal phone book to which you want to add a new number or text item, and press **Details**.
4. Press **Options** and select *Add number* or *Add detail*.

5. Select one of the following number types *General*, *Mobile*, *Home*, *Office* and *Fax*, or text types *E-mail address*, *Web address*, *Postal address* and *Note*.
To change the number or text type, select *Change type* in the options list.
6. Key in the number or text item and press **OK** to save it.
7. Press **Back** and then **Exit** to return to standby mode.

Changing the default number

Press in standby mode, scroll to the name you want and press **Details**. Scroll to the number you want to set as the default number. Press **Options** and select *Set as default*.

Searching for a name in the phone book

1. Press **Menu** and select *Phone book* and *Search*.
2. You can key in the first characters of the name you are searching for in the pop-up window.
Press and to scroll through the names in the list, and and to move the cursor in the pop-up window.

3. Scroll to the name you want, and press **Details**. Scroll to view the details of the selected name.



Tip: To quickly find a name and phone number, press in standby mode. Key in the first letter(s) of the name, and/or scroll to the name you want.

Tip: To quickly view a specific name with the default phone number, press and hold at the name while scrolling through the names.

Editing a name, number or text item

Search for the name (and number) you want to edit and press **Details**. Scroll to the name, number or text item you want to edit, and press **Options**. Select *Edit name*, *Edit number* or *Edit detail* and edit the name, number or text and press **OK**.


Deleting names and numbers

Press **Menu** and select *Phone book* and *Delete*.

- To delete names and numbers one by one, select *One by one* and scroll to the name (and number) you want to delete. Press **Delete** and press **OK** to confirm.

- To delete names and numbers in the phone book all at once, select *Delete all* and then scroll to the phone book, *Phone* or *SIM card* and press **Delete**. Press **OK** and confirm with the security code.

Deleting numbers or text items

Press  in standby mode, scroll to the desired name (and number) and press **Details**. Scroll to the number or text item you want to delete, press **Options** and select *Delete number* or *Delete detail*, respectively.

Copying phone books

You can copy names and phone numbers from the phone's memory to your SIM card's memory and vice versa. Note that any text items saved in the phone's internal memory, such as e-mail addresses, will not be copied to the SIM card.

1. Press **Menu** and select *Phone book* and *Copy*.
2. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.
3. Select *One by one*, *All* or *Default numbers*.
 - If you select *One by one*, scroll to the name you want to copy and press **Copy**.

Default nos. is shown if you copy from the phone to the SIM card. Only the default numbers will be copied.

4. To choose whether you want to keep or delete the original names and numbers, select *Keep original* or *Move original*.
 - If you select *All* or *Default nos.*, press **OK** when *Start copying?* or *Start moving?* is displayed.

Sending and receiving a business card

You can send and receive a person's contact information as a business card either via IR or as an Over The Air (OTA) message if supported by the network.

Receiving a business card

To receive a business card via IR, make sure that your phone is ready to receive data through its IR port, see "*Infrared*" on page 61. The user of the other phone can now send the name and phone number via Infrared.

When you have received a business card via IR or as an OTA message, press **Show**. Press **Save** to save the business card in the phone's memory. To discard the business card, press **Exit** and then **OK**.

Sending a business card

You can send a business card via IR or as an OTA message to a compatible phone or other handheld device which supports the vCard standard.

1. To send a business card, search for the name and phone number you want to send from the phone book, press **Details** and **Options** and select *Send bus. card*.
2. To send the business card via IR, make sure that the other phone or the PC is set up to receive data via its IR port and select *Via infrared*.

To send the business card as an OTA message, select *Via text message*.

Speed dials


To assign a number to a speed dialling key, press **Menu** and select *Phone book* and *Speed dials* and scroll to the speed dialling key number you want.

Press **Assign**, press **Search**, and select first the name and then the number you want to assign. If a number has already been assigned to the key, press **Options**, and you can view, change or delete the assigned number. If the *Speed dialling* function is off, the phone asks whether you want to activate it. Press **Yes** to activate the function. Refer to "*Speed dialling*" on page 38.

To make a call using the speed dialling keys, see "*Speed dialling a phone number*" on page 10.


Info numbers

For availability, contact your network operator or service provider.

Press **Menu** and select *Phone book* and *Info numbers*. Scroll through a category to an information number and press  to call the number.

Service numbers

You can call the service numbers of your service provider if the numbers are included in your SIM card.

Press **Menu** and select *Phone book* and *Service numbers*. Scroll to a service number and press  to call the number.

My numbers

The phone numbers assigned to your SIM card are saved in *My numbers* if this is allowed by the card. To view the numbers press **Menu** and select *Phone book* and *My numbers*. Scroll to the desired name or number, and press **View**.

Caller groups

You can arrange the names and phone numbers saved in the phone book into caller groups. For each caller group, you can set the phone to sound a specific ringing tone and show a selected graphic on the display when you receive a call from a phone number in the group, see below. To set the phone to ring only upon calls from phone numbers belonging to a selected caller group, see *Alert for* in "Tone settings" on page 42.

Press **Menu** and select *Phone book* and *Caller groups* and select the desired caller group. Select

- *Group name*, key in a new name for the caller group and press **OK**.
- *Group ringing tone* and select the ringing tone for the group. *Default* is the ringing tone selected for the currently active profile.
- *Group logo* and select *On* to set the phone to display the group logo, *Off* not to display it, or *View* to view the logo.

- *Group members* to add a name to the caller group, press **Options** and select *Add name*. Scroll to the name you want to add to the group and press **Add**.

To remove a name from a caller group, scroll to the name you want to remove, and press **Options** and select *Remove name*.

■ Profiles (Menu 4)



Your phone has various setting groups, profiles, for which you can customise the phone tones for different events and environments. Initially, personalise the profiles to your own liking and then you only need to activate a profile to use it. Available profiles are *General*, *Silent*, *Meeting*, *Outdoor*, and *Pager*.

Press **Menu**, and select *Profiles*. Scroll to a profile and press **Select**.

- To activate the selected profile, select *Activate*.

- To set the profile to be active for a certain amount of time up to 24 hours, select *Timed* and set the end time. When the time set for the profile expires, the previous profile that was not timed, becomes active.
- To personalise the profile, select *Personalise*. Select the setting you want to change and make the changes. The same settings can also be changed in the *Tone settings* menu, see "*Tone settings*" on page 42.

To rename a profile, *Profile name*. The *General* profile can not be renamed.



Tip: To change the profile quickly in standby mode, press the power key **ⓘ**, scroll to the profile you want to activate and press **Select**.

■ Settings (Menu 5)



Right selection key

To access some specific functions quickly, you can add them to the list assigned to the right selection key, and rearrange the functions in the list.

1. Press **Menu**, and select *Settings* and *Right selection key*.

- To select desired functions for the right selection key, select *Select options* and the list of available functions is shown.

To add the desired function to the selection key list, press **Mark**. When a function is added to the list, the right selection key changes from **Names** to **Go to**.

To remove a function from the list, press **Unmark**.

- To rearrange the functions in the list, select *Organise* and then the desired function. Press **Options** and select an option to move the function in the list.

2. When you have made all the changes, press **Done**. To save the changes, press **Yes** or to discard the changes, press **No**.

Time and date settings

Clock

Press **Menu**, and select *Settings*, *Time and date settings* and *Clock*.

Select *Show clock* (or *Hide clock*) to show (or hide) the time on the top right of the display in standby mode. Select *Set the time* to adjust the clock to the correct time, and *Time format* to select 12-hour or 24-hour time format.

The clock serves the functions *Messages*, *Call register*, *Alarm clock*, timed *Profiles*, *Calendar* and screen saver, for example.

If the battery is removed from the phone for a long time, you may need to set the time again.

Date

Press **Menu**, and select *Settings*, *Time and date settings* and *Date*.

Select *Show date* (or *Hide date*) and the date is shown (or hidden) on the display when the phone is in standby mode. Select *Set the date* to adjust the date. You can also select the date format.

Auto update of date and time

Press **Menu**, and select *Settings*, *Time and date settings* and *Auto-update of date & time* (network service). To set the phone to automatically update the time and date according to the current time zone, select *On*. To set the phone to ask for a confirmation before the update, select *Confirm first*.

The automatic update of the date and time does not change the time that you have set for the alarm clock, calendar or the alarm notes. They are in local time. Updating may cause some alarms that you have set to expire.

Call settings

Call divert




Press **Menu**, and select *Settings*, *Call settings* and *Call divert* (network service). With call divert, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Divert options not supported by your SIM card or your network operator may not be shown.

Select the divert option you want, for example, select *Divert if busy* to divert the voice calls when your number is busy or when you reject an incoming call.

To set the divert setting to on, select *Activate* and then select the timeout after which the call is diverted, if this is available for the divert option. To set the divert setting to off, select *Cancel*, or select *Check status*, if this is available for the divert option, to check whether call divert is activated or not. Several divert options may be active at the same time.

To see the divert indicators in standby mode, see "[Standby mode](#)" on page 2.

 
 
Anykey answer

Press **Menu**, and select *Settings*, *Call settings* and then *Anykey answer*. Select *On* and you can answer an incoming call by briefly pressing any key, except **1**, selection keys  and , and .

Automatic redial

Press **Menu**, and select *Settings*, *Call settings* and *Automatic redial*. Select *On* and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

Speed dialling

Press **Menu**, and select *Settings*, *Call settings* and *Speed dialling*. Select *On* and the names and phone numbers assigned to the speed dialling keys, from  to , can be dialled by pressing and holding the corresponding number key.

Call waiting

Press **Menu**, and select *Settings*, *Call settings* and *Call waiting*. Select *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See "Call waiting" on page 11.

Summary after call

Press **Menu**, and select *Settings*, *Call settings* and *Summary after call*. Select *On* and the phone will after each call briefly display the duration and cost (network service) of the call.

Send my caller identity

Press **Menu**, and select *Settings*, *Call settings* and *Send my caller identity*. Select *Yes* and your phone number will be displayed to the person you are calling (network service). Select *Set by network* and the setting agreed upon with your service provider is used.

Line for outgoing calls

Line for outgoing calls is a network service to select the phone line 1 or 2, that is, the subscriber number, for making calls.

Press **Menu**, and select *Settings*, *Call settings* and *Line for outgoing calls*. If you select *Line 2* and have not subscribed to this network service, you will not be able to make calls. However, calls on both lines can be answered regardless of the selected line.

If supported by your SIM card, you can prevent the line selection by selecting the option *Lock*.

For more information on availability, contact your network operator or service provider.



Tip: In standby mode, you can switch from one line to the other by pressing and holding



Phone settings

Language

Press **Menu**, and select *Settings*, *Phone settings* and *Language*. Select the language for the display texts. If *Automatic* is selected, the phone selects the language according to the information on the SIM card.


Memory info

Press **Menu**, and select *Settings*, *Phone settings* and *Memory status*. Scroll to view the free memory, the total used memory and the used memory for each function.

You may also find the memory information in the menu of some of those functions, for example in gallery.

Automatic keyguard



Note: When Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

You can set the keypad of your phone to lock automatically after a preset time delay when the phone is in standby mode and no function of the phone has been used.

Press **Menu**, and select *Settings*, *Phone settings* and *Automatic keyguard*.

- To activate the automatic keyguard, select *On* and the phone displays *Set delay*. Key in the time and press **OK**. You can set the time from 10 seconds to 60 minutes
- To deactivate the automatic keyguard, select *Off*.

Refer also to "[Keypad lock \(Keyguard\)](#)" on page 7.

Cell info display

Press **Menu**, and select *Settings*, *Phone settings* and *Cell info display*. Select *On* to set the phone to indicate when it is used in a cellular network based on Micro Cellular Network (MCN) technology.

If the *GPRS connection* is set to *Always online*, the cell identity may not be received. In that case, set the *GPRS connection* to *When needed*, see "[GPRS connection](#)" on page 62.

Welcome note

Press **Menu**, and select *Settings*, *Phone settings* and *Welcome note*. Key in the note you would like to be shown briefly when the phone is switched on. To save the note, press **Options**, and select *Save*.

Network selection

Press **Menu**, and select *Settings*, *Phone settings* and *Network selection*. Select *Automatic* and the phone automatically selects one of the cellular networks available in your area.

If you select *Manual*, you can select a network that has a roaming agreement with your home network operator. If *No access* is displayed, you must select another network. The phone stays in manual mode until the automatic mode is selected or another SIM card is inserted into the phone.

Confirm SIM service actions

See "SIM services (Menu 15)" on page 71.

Help text activation

To set the phone to show or not to show the help texts, press **Menu**, and select *Settings*, *Phone settings* and *Help text activation*.

See also "Using the menu" on page 16.

Start-up tone

To set the phone to play or not to play a start-up tone when the phone is switched on, press **Menu**, and select *Settings*, *Phone settings* and *Start-up tone*.

Display settings

Wallpaper

You can set your phone to display a background image, known as wallpaper, when the phone is in standby mode. Some images are presaved in the *Gallery* menu. You can also receive images via multimedia messages, download them from WAP pages or transfer them with PC Suite from your PC and then save them in *Gallery*. Your phone supports JPEG, GIF, BMP and PNG formats.

To select wallpaper

1. Press **Menu**, and select *Settings*, *Display settings* and *Wallpaper*.
2. Select *Change image* and the folder list in the *Gallery* menu will be shown.
3. Open an image folder and scroll to the desired image.
4. To set the image as wallpaper, press **Options** and select *Set as wallpaper*.

Note that the wallpaper is not displayed when the phone activates the screen saver.

To activate or deactivate the wallpaper

Press **Menu**, and select *Settings*, *Display settings* and *Wallpaper*. To activate/deactivate the wallpaper, select *On/Off*, respectively.

Colour schemes

You can change the colour in some display components, for example, indicators and signal bars.

Press **Menu**, and select *Settings*, *Display settings* and *Colour schemes*. Select the desired colour scheme.

Operator logo

To set your phone to display or hide the operator logo, press **Menu**, and select *Settings*, *Display settings* and *Operator logo*. If you have not saved the operator logo, the *Operator logo* menu is dimmed.

Note that the operator logo is not displayed when the phone activates the screen saver.

For more information on availability of an operator logo via SMS, MMS or WAP, contact your network operator or service provider. See also "**PC Suite**" on page 72.

Screen saver



Digital clock screen saver is used for power saving in standby mode. It is activated when no function of the phone has been used for a certain time. Press any key to deactivate the screen saver. The screen saver is also deactivated when the phone is out of the network coverage area.

Press **Menu**, and select *Settings*, *Display settings* and *Screen saver timeout*. Select the timeout after which the digital clock display will be activated. The length of the timeout can vary from 5 seconds to 60 minutes.

Note that the screen saver overrides all the graphics and texts on the display in standby mode.

Display brightness

You can change the display brightness level used on the phone display.

Press **Menu**, and select *Settings*, *Display settings* and *Display brightness*. Scroll with  and  to decrease and increase the brightness level, and press **OK** to accept it.

Tone settings

Press **Menu**, and select *Settings* and then *Tone settings*. You can find the same settings in the *Profiles* menu, see "*Profiles (Menu 4)*" on page 35. Note that the settings you make, will change the settings in the active profile.

Select *Incoming call alert* to choose how the phone notifies you of an incoming voice call. The options are *Ringing*, *Ascending*, *Ring once*, *Beep once* and *Off*.

Select *Ringing tone* for incoming voice calls. To select ringing tones that have been saved in the *Gallery*, select *Open gallery* from the ringing tone list.

Select *Ringing volume* and *Vibrating alert* for incoming voice calls and messages. The vibrating alert does not work when the phone is connected to a charger, a desktop stand, or a car kit.



Tip: If you receive a ringing tone via infrared connection or by downloading, you can save the ringing tone in the *Gallery*.

Select *Message alert tone* to set the alert tone for the incoming messages, *Keypad tones*, or *Warning tones* to set the phone to sound tones for example, when the battery is running out of power.

Select *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group. Scroll to the caller group you want or *All calls* and press **Mark**.

Accessory settings

Accessory settings menu is shown only if the phone is or has been connected to one of the following accessories: headsets HDB-4 or HDS-3, handsfree unit CARK126, or mobile inductive loopset LPS-4.

Press **Menu**, and select *Settings* and *Accessory settings*. You can select *Headset*, *Handsfree*, *Loopset*, or *Music stand*, if the corresponding accessory is or has been connected to the phone.

- Select *Default profile* to select the profile that you want to be automatically activated when you connect to the selected accessory. You can select another profile while the accessory is connected.

- Select *Automatic answer* to set the phone to answer an incoming call automatically after five seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer will not be in use.
- Select *Lights* to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a keypress. The *Lights* option is available only when *Handsfree* is selected.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.
- *Fixed dialling* to restrict your outgoing calls and text messages to selected phone numbers if this function is supported by your SIM card. The PIN2 code is required.

When the fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number have to be included on the fixed dialling list.

Security settings



Note: When security features that restrict calls are in use (call barring, closed user group and fixed dialling), calls may be possible to certain emergency numbers in some networks (e.g. 112, 911 or other official emergency numbers).

Press **Menu**, and select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to ask for your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Closed user group*. Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information contact your network operator or service provider.
- *Security level*. Select *Phone* and the phone will ask for the security code whenever a new SIM card is inserted into the phone.

Select **Memory** and the phone will ask for the security code when the SIM card's memory is selected and you want to change the memory in use, (see "[Selecting the phone book settings](#)" on page 30) or copy from one memory to another ("[Copying phone books](#)" on page 33).

- **Access codes** to change the security code, PIN code, PIN2 code or barring password. Codes can only include numbers from 0 to 9.

Restore factory settings

To reset some of the menu settings to their original values, press **Menu**, and select **Settings** and **Restore factory settings**. Key in the security code and press **OK**. Note that the data you have keyed in or downloaded, for example, the names and phone numbers saved in the phone book are not deleted.

Radio (Menu 6)



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

To listen to the radio on your phone connect the headset HDS-3 (stereo) or HDB-4 (mono) to the headset connector on the bottom of the phone. The lead of the headset functions as the radio antenna, so let it hang freely.


Note that the quality of the radio broadcast depends on the radio station's coverage in that particular area.

1. To turn on the radio, press **Menu** and select **Radio**. On the display are
 - Channel location number and the name of the radio channel if you have saved the channel.
 - Frequency of the radio channel.
2. If you have already saved radio channels, you can scroll to the channel you would like to listen to, or select a radio channel location 1 to 9 by pressing the corresponding number key.



When using the headset HDB-4 and HDS-3, press the headset key to scroll to the desired saved radio channel.

3. When the radio is on, press **Options** and select **Switch off** to turn off the radio.



Tip: To quickly turn off the radio, press and hold .

Tuning a radio channel



When the radio is on, press and hold  or  to start the channel search. Searching stops when a channel is found. To save the channel, press **Options**, and select *Save channel*. Key in the name of the channel and press **OK**. Select the location where you want to save the channel.





Tip: To quickly save the channel in a location 1 to 9, press and hold the corresponding number key, then key in the name of the channel and press **OK**.



Using the radio

When the radio is on, press **Options** and select

- *Switch off* to turn off the radio.
- *Save channel* to save the radio channel you have found, refer to "Tuning a radio channel" above. Up to 20 radio channels can be saved.
- *Automatic tuning*. Briefly press  or  to start the channel search upwards or downwards. The search stops when a channel has been found, press **OK**. To save the channel, see *Save channel* above.


 
- *Manual tuning*. Briefly press  or  to move the channel search 0.1 MHz upwards or downwards or press and hold down the keys to quickly search upwards or downwards for a channel. To save the channel, press **OK** and see *Save channel* above.



Tip: To quickly select *Manual tuning*, press   when in the *Radio* menu.

- *Set frequency*. If you know the frequency of the radio channel you would like to listen to (between 87.5 MHz and 108.0 MHz), key it in and press **OK**. To save the channel, see *Save channel* above.



Tip: To quickly select *Set frequency*, press   when in the *Radio* menu.

- *Delete channel*. To delete a saved channel, scroll to it, press **Delete**, and **OK**.
- *Rename*. Key in a new name for the saved channel and press **OK**.
- *Loudspeaker* (or *Headset*) to listen to the radio using the loudspeaker (or headset). Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

- **Mono output** (or **Stereo output**) to listen to the radio in mono (or in stereo).

You can normally make a call or answer an incoming call while listening to the radio. The volume of the radio is muted. When you end the call, the radio will automatically be turned on.

When an application using a GPRS or HSCSD connection is sending or receiving data, it may interfere with the radio.

■ Camera (Menu 7)



Note:

Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Note: Obey all local laws governing the taking of pictures. Do not use this feature illegally.


In this menu you can take photos with the phone's built-in camera and adjust its settings. The camera lens is on the back of the phone, and the display of the phone works as a viewfinder. The camera produces JPEG pictures.

If there is not enough memory to take a new photo, you need to free some by deleting old photos or other files in the gallery. Note that the camera uses shared memory, see "**Shared memory**" on page xvi.

To take a photo

1. Press **Menu**, and select **Camera** and **Standard photo** or **Portrait photo**.



Tip: To quickly open the camera viewfinder with standard photo view, press  in standby mode.

2. The live image appears on the display, and you can use the display as a viewfinder.
3. To take a photo, press **Capture**. When taking a photo, a shutter sound is heard. The phone saves the photo in the **Photos** folder of the **Gallery** menu. The saved photo will be shown on the display.

To define the default title for the photo, see **Default title** in "**Camera settings**" on page 47.

4. Select **Back** to take another photo or press **Options** and select, for example, an option to delete or rename the saved photo, send it as a multimedia message or access the gallery.



Tip: To activate the self timer of the camera, press **Menu**, and select *Camera*, *Self-timer* and *Standard photo* or *Portrait photo*. Press **Start**, and after the timeout, the camera takes the photo and saves it in the *Gallery* menu. While the self timer is running, a beeping sound is heard.

Camera settings

Press **Menu**, and select *Camera* and *Settings*. Select

- *Image quality* to define how much the photo file will be compressed when saving the image. Select *High*, *Normal* or *Basic*. *High* provides the best image quality but takes more memory.
- *Camera sounds* to set the shutter sound and the self timer tone to *On* or *Off*.
- *Default title* to define the title that will be used when saving a photo. If you select *Automatic*, the default title will be used, or if you select *My title*, you can key in or edit a new title.

Gallery (Menu 8)



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can save images and ringing tones, for example, that have been received in multimedia messages in the folders of the gallery, see "[Reading and replying to a multimedia message](#)" on page 23.

The gallery uses shared memory, see "[Shared memory](#)" on page xvi.

1. Press **Menu** and select *Gallery*. The list of options is shown.
2. Select *View folders* to open the list of folders.

Other available options are:

- *Add folder* to add a new folder. Key in a name for the folder and press **OK**.
- *Delete folder* to select the folder you want to delete. You cannot delete the original folders on the phone.
- *Rename folder* to select the folder you want to rename. You cannot rename the original folders on the phone.

- *Gallery services* to download more images and tones. Select *Image services* or *Tone services*, respectively. The list of available WAP bookmarks is shown. Select *More bookmarks* to access the list of WAP bookmarks in the *Services* menu, see "Bookmarks" on page 67.

Select the appropriate bookmark to connect to the desired WAP page. If the connection fails, you may not be able to access the WAP page from the WAP service whose connection settings are currently active. In this case, enter the *Services* menu and activate another set of service settings, see "Making a connection to a WAP service" on page 64. Try again to connect to the WAP page.

For the availability of different WAP services, pricing and tariffs, contact your network operator and/or the WAP service provider.

3. Open the desired folder and the list of files in the folder is shown. *Photos*, *Graphics* and *Tones* are the original folders in the phone.
4. Scroll to the desired file. Press **Options** and some of the following options are available:
 - *Open* to open the selected file.
 - *Delete* to delete the selected file.
 - *Send* to send the selected file via MMS.
 - *Move* to move a file to another folder.
 - *Rename* to give a new name to the file.
 - *Set as wallpaper* to set the selected file as wallpaper.
 - *Set as ring tone* to set the selected file as the ringing tone.
 - *Details* to see the details of the file, for example the size of the file.
 - *Sort* to sort the files and folders by date, type, name or size.

■ **Organiser** (Menu 9)



Note: Your phone must be switched on to use the functions in the *Organiser* menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Alarm clock

The alarm clock uses the time format set for the clock. The alarm clock works even when the phone is switched off.

Press **Menu**, and select *Organiser* and *Alarm clock*.

- Select *Alarm time*, key in the alarm time and press **OK**.
To change the alarm time, select *On*.
- Select *Alarm tone* and select the default alarm tone or the radio.
To select the radio as an alarm tone, connect the headset to the phone.
If you select the radio, the phone uses the latest listened channel as an alarm tone via loudspeaker. If the headset is removed, the default alarm tone will be used instead of the radio.

When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display.

Press **Stop** to stop the alarm. If you let the phone continue to sound the alarm for a minute or press **Snooze**, the alarm stops for about ten minutes and then resumes.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls, *Switch the phone on?* Press **No** to switch off the phone or **Yes** to make and receive calls.



Note: Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

Calendar

The calendar helps you to keep track of reminders, calls that you need to make, meetings, and birthdays.

The calendar uses shared memory, see "*Shared memory*" on page xvi.

Press **Menu**, and select *Organiser* and *Calendar*.



Tip: To quickly open the *Calendar* menu, press **▷** in standby mode.

Scroll to the day you want. The current day is indicated by a frame around the day. If there are any notes set for the day, the day is in bold type. To view the day notes, press **Options** and select *Day notes*.

To view a single note, scroll to the note you want to view, press **Options** and select *View*. The note view allows you to view the details of the selected note. You can scroll through the note.



The other options for the calendar views may include:




- Options for making a note, or for sending a note via IR, or as a note directly to another phone's calendar or as a text message.
- Options for deleting, editing, moving and repeating a note and for copying a note to another day.
- *Settings* to set the date, time, date or time format, or the first day of the week. In the *Auto-delete* option you can set the phone to delete old notes automatically after a specified time. However, the repeat notes, for example, birthday notes, will not be deleted.


Making a calendar note

For keying in letters and numbers, see "Writing text" on page 13.



Press **Menu**, and select *Organiser* and *Calendar*. Scroll to the date you want, press **Options** and select *Make a note*. Select one of the following note types:

-  *Meeting* – Key in the note (or press **Options** and search for the name in the phone book). Press **Options** and select *Save*. Key in the location for the meeting and press **Options** and select *Save*. Key in the start time for the meeting and press **OK**, and then the end time and press **OK**. To set the alarm for the note, select *With tone* or *Silent* (no alarm tone) and then set the alarm time.
-  *Call* – Key in the phone number, press **Options** and select *Save*. Key in the name, press **Options** and select *Save*. (Instead of keying in the phone number, press **Options** to search for the name and number in the phone book.) Then key in the time for the call and press **OK**. To set the alarm for the note, select *With tone* or *Silent* (no alarm tone) and then set the alarm time.

-  **Birthday** - Key in the person's name (or press **Options** and search for it in the phone book), press **Options** and select **Save**. Then key in the year of birth, and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Memo** - Key in the note, press **Options** and select **Save**. Key in the end day for the note and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Reminder** - Key in the subject for the reminder, press **Options** and select **Save**. To set the alarm for the note, select **Alarm on** and then set the alarm time.

When you have set the alarm, the indicator  is displayed when you view the notes.

When the phone sounds an alarm for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing . To stop the alarm and view the note, press **View**. To stop the alarm without viewing the note, press **Exit**.

To-do list

You can save a note for a task that you have to do, select a priority level for the note and mark it as done when you have completed it. You can sort the notes by priority or by date.

The to-do list uses shared memory, see "[Shared memory](#)" on page [xvi](#).

Press **Menu**, and select **Organiser** and **To-do list** and the list of notes is shown. Press **Options**, or scroll to the desired note and press **Options**.

- To add a new note, select **Add**. Key in the subject for the note. When you have keyed in the maximum number of characters for a note, no further characters are accepted. Press **Options** and select **Save**. Select the priority for the note, **High**, **Medium**, or **Low**. The phone automatically sets the deadline without an alarm for the note.

Dictionary, refer to "[Setting predictive text input on or off](#)" on page [13](#).

- You can also view and delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone, save a note as a calendar note, or access the calendar.



While viewing a note, you can also, for example, select an option to edit the selected note, edit the deadline or priority for the note, or mark the note as done.

■ Games (Menu 10)



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Launching a game

1. Press **Menu**, and select **Games** and **Select game**.
2. Scroll to a game or a game set (the name depends on the game).
3. Press **Options** and select **Open** or press . If the selection is a single game it will be launched. Otherwise, a list of games in the selected game set is displayed. To launch a single game, scroll to the desired game and press **Options** and select **Open**, or press .

Note that running some games may consume the phone's battery faster (and you may need to connect the phone to the charger).

Other options available for a game or game set

Options for games, see "[Other options available for an application or application set](#)" on page 53.

Game services

Press **Menu**, and select **Games** and **Game services**. The list of available WAP bookmarks is shown. Select **More bookmarks** to access the list of WAP bookmarks in the **Services** menu, see "[Bookmarks](#)" on page 67.

Select the appropriate bookmark to connect to the desired WAP page. If the connection fails, you may not be able to access the WAP page from the WAP service whose connection settings are currently active. In this case, enter the **Services** menu and activate another set of service settings, see "[Making a connection to a WAP service](#)" on page 64. Try again to connect to the WAP page.

For the availability of different WAP services, pricing and tariffs, contact your network operator and/or the WAP service provider.

To download more games, refer also "[Downloading an application](#)" on page 54.

Note that when downloading a game, it may be saved in the *Applications* menu instead of the *Games* menu.

Memory status for games

To view the amount of memory available for game and application installations, press **Menu**, and select *Games* and *Memory*. See also "[Memory status for applications](#)" on page 55.

The games use shared memory, see "[Shared memory](#)" on page xvi.

Game settings

Press **Menu**, and select *Games* and *Settings* to set sounds, lights and shakes for the game.

Applications (Menu 11)



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.



■ Launching an application

1. Press **Menu**, and select *Applications* and *Select application*.
2. Scroll to an application or an application set (the name depends on the application).
3. Press **Options** and select *Open* or press . If the selection is a single application it will be launched.

Otherwise, a list of applications in the selected application set is displayed. To launch a single application, scroll to the desired application and press **Options** and select *Open*, or press .

Note that running some applications may consume the phone's battery faster (and you may need to connect the phone to the charger).

Other options available for an application or application set

- *Delete* to delete the application or application set from the phone.

Note that if you delete a pre-installed application or an application set from your phone, you may download it again to your phone from the Nokia Software Market, www.softwaremarket.nokia.com/wap.

- **Web access** to restrict the application for accessing the network. Select **Ask first** and the phone asks for net access, **Allowed** to allow the net access, or **Not allowed** not to allow the net access.
- **Check version** to check if a new version of the application is available for download from the WAP services.
- **Web page** to provide further information or additional data for the application from an Internet page. This feature needs to be supported by the network. It is only shown if an Internet address has been provided with the application.
- **Details** to give additional information about the application.

Downloading an application

You can download new Java applications in different ways:

- Press **Menu**, and select **Applications** and **App. services** and the list of available WAP bookmarks is shown. Select **More bookmarks** to access the list of WAP bookmarks in the **Services** menu, see **"Bookmarks"** on page 67.

Select the appropriate bookmark to connect to the desired WAP page. If the connection fails, you may not be able to access the WAP page from the WAP service whose connection settings are currently active. In this case, enter the **Services** menu and activate another set of service settings, see **"Making a connection to a WAP service"** on page 64. Try again to connect to the WAP page.

For the availability of different WAP services, pricing and tariffs, contact your network operator and/or the WAP service provider.

- Press **Menu**, and select **Services** to find a WAP page to download an appropriate Java application. See "[Browsing the pages of a WAP service](#)" on page 65.
- Use the game download functionality, see "[Game services](#)" on page 52.
- Use the Nokia Application installer from PC Suite to download the applications in your phone.



Note that Nokia does not warrant for applications from non-Nokia sites. If you choose to download Java applications from them, you should take the same precautions, for security or content, as you would with any site.

Note that when downloading an application, it may be saved in **Games** menu instead of the **Applications** menu.

Memory status for applications

To view the amount of memory available for game and application installations, press **Menu**, and select **Applications** and **Memory**.

The applications use shared memory, see "[Shared memory](#)" on page xvi.

Extras (Menu 12)

 


Note: Your phone must be switched on to use the functions in **Extras** menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.

This calculator has a limited accuracy and rounding errors may occur, especially in long divisions.

1. Press **Menu**, and select **Extras** and **Calculator**.
2. When '0' is displayed on the screen, key in the first number in the calculation, press  for a decimal point.
3. Press **Options** and select **Add**, **Subtract**, **Multiply**, **Divide**, **Square**, **Square root** or **Change sign**.



Tip: Alternatively, press once to add, twice to subtract, three times to multiply or four times to divide.

4. Key in the second number.
5. For a total, press **Options** and select *Equals*. Repeat steps 3 to 5 as many times as is necessary.
6. To start a new calculation, first press and hold **Clear**.

Performing a currency conversion

1. Press **Menu**, and select *Extras* and *Calculator*.
2. To save the exchange rate, press **Options** and select *Exchange rate*. Select either of the displayed options. Key in the exchange rate, press for a decimal point, and press **OK**. The exchange rate remains in the memory until you replace it with another one.
3. To perform the currency conversion, key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.



Tip: You can also perform the currency conversion in standby mode. Key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.

Countdown timer

Press **Menu**, and select *Extras* and *Countdown timer*. Key in the alarm time in hours and minutes and press **OK**. If you wish, write your own note text which is displayed when the time expires, and press **OK** to start the countdown timer.

- To change the countdown time, select *Change time*, or to stop the timer, select *Stop timer*.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note text if it is set or else *Countdown time up*. Stop the alarm by pressing any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and to delete the note text, press **OK**.

Stopwatch

You can measure time, take intermediate times or lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press

Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

Time observation and time splitting

1. Press **Menu**, and select *Extras*, *Stopwatch* and *Split timing*. You can select *Continue* if you have set the timing in the background.
2. Press **Start** to start the time observation. Press **Split** every time you want to take an intermediate time. The intermediate times are listed below the running time on the display. Scroll to view the times.
3. Press **Stop** to stop the time observation.
4. Press **Options** and select *Start* to start the time observation again. The new time is added to the previous time.
Save to save the time. Key in a name for the measured time and press **OK**. If no name is keyed in, the total time is used as the title.
Reset to reset the time without saving it.

Lap times

Press **Menu**, and select *Extras*, *Stopwatch* and *Lap timing*. Press **Start** to start the time observation and **Lap** to take a lap time. Press **Stop** to stop the lap timing. Press **Options** and you can save or reset the lap times. Refer to "Time observation and time splitting" above.

Viewing and deleting times

Press **Menu**, and select *Extras*, and *Stopwatch*.

If the stopwatch is not reset, you can select *Show last* to view the most recent measured time. Select *View times* and a list of names or final times of the time sets is shown, select the time set you want to view.

To delete the saved times, select *Delete times*. Select *All at once* and press **OK**, or select *One by one*, scroll to the times you want to delete, press **Delete** and press **OK**.

Wallet

In *Wallet* you can save personal information, for example, credit cards and make purchases with your phone.

You can access wallet via the *Wallet* menu or via the WAP browser, see "Options while browsing" on page 66.

When you access wallet for the first time, you need to create your own wallet code. At *Create wallet code*: key in the code and press **OK** to confirm it and at *Verify wallet code*: key in the code again and press **OK**.

If you want to delete all the content of the wallet and the wallet code, key in *#7370925538# (*#res0wallet# in letters) in standby mode. You also need the phone's security code.

See also "Access codes" on page xii.

Saving and changing personal card information

To access the wallet, press **Menu**, select *Extras* and *Wallet*. If required, key in your wallet code and press **OK**, see "Wallet settings" on page 59. Select *Cards* to view the list of cards. The maximum number of cards is five. Scroll to the desired card.

- To save information on a card, press **Options** and select *View*. Select
 - *Card info* to key in, for example, card holder's name, card type, number and expiry information.
 - *User info* to save user name and password.
 - *Shipping info* to save your contact information.

- *Billing info* to save the contact information in case the invoicing address differs from your own, for example, with company credit cards.
- *Receipt info* to save phone numbers and e-mail addresses where you want the service provider to send a receipt of your purchase.
- To make a copy of the card, press **Options** and select *Copy card*.
- To delete all the information on the card, press **Options** and select *Clear card*.
- To rename the card, press **Options** and select *Rename card*.

Personal notes

You can save up to 30 confidential personal notes, for example, passwords, codes or notations.

Press **Menu**, select *Extras*, *Wallet* and *Personal notes*. Press **Options** and you can view, add, edit a selected note and sort notes either by name or date. *Send as text* copies the note as a text message. *Copy to calendar* copies the note to the calendar as a memo. *Use detail* extracts numbers from a note.

Wallet settings

Press **Menu**, select *Extras, Wallet* and *Settings*. Select

- *Code request* to set the wallet code request to on or off. You need to key in the correct wallet code before you can set the code request to on or off.
- *Change code* to change the wallet code.

Guidelines for paying for your purchases with wallet

1. Access the desired WAP site to do your shopping, see "[Making a connection to a WAP service](#)" on page 64, and choose the product you want to buy.
2. To pay for the items you wish to purchase, press **Options** and select *Use wallet info*. See "[Options while browsing](#)" on page 66.
3. Select the card you want to pay with. Fill in the data form you receive from the service provider by transferring the credit card details from the wallet. If you want to fill in all the fields automatically, select *Fill in all fields*. The option is shown only when the WAP service supports the Electronic Commerce Modeling Language standard. You can also fill the form by selecting information fields from the card one by one. The phone displays the filled form.

4. Approve the purchase, and the information is sent forward.
5. You may receive a sign-in document from the WAP service that you need to sign to make the purchase binding, see "[Digital signature](#)" on page 70.
6. To close the wallet, select *Close wallet*. See "[Options while browsing](#)" on page 66.

Synchronisation

You can save your calendar and phone book data in a remote Internet server or in a compatible PC. If you have saved data in the remote Internet server, you can synchronise your phone by starting the synchronisation from your phone. You can also synchronise the data in your phone's phone book and calendar to correspond with the data of your PC by starting the synchronisation from your PC. The phone book in your SIM card will not be synchronised.

Note that answering an incoming call during synchronisation will end the synchronisation and you need to start it again.

Synchronising from your phone

Before synchronising from your phone, you may need to do the following:

- Subscribe to a synchronisation service. For more information on availability and the synchronisation service settings, contact your network operator or service provider.
- Retrieve the synchronisation settings from your network operator or service provider.

You may receive the synchronisation settings as a text message, see "[Saving the synchronisation settings received as a text message](#)" on page 60 or you may have to key in the settings manually, see "[Keying in the synchronisation settings manually](#)" on page 60.

To start the synchronisation from your phone:

1. Press **Menu**, and select *Services*, *Active service settings* and select the connection settings you need for synchronisation.

The synchronisation settings may differ from the service settings required for WAP browsing. After synchronising, change your *Active service settings* back to the previous ones if you want to use other WAP services later.

2. Mark the data to be synchronised. See *Data to be synchronised* in "[Keying in the synchronisation settings manually](#)" on page 60.
3. Press **Menu**, and select *Extras*, *Synchronise* and *Synchronise*.
4. The marked data of the active set will be synchronised after confirmation.

Note that synchronising for the first time or after an interrupted synchronisation may take time up to 30 minutes, if the phone book or calendar are full.

Saving the synchronisation settings received as a text message

When you receive the synchronisation settings as a text message, *Synchronisation settings received* is displayed.

Press **Options** and select *Details* to view the received settings first, *Save* to save the synchronisation settings, or *Discard* to discard them.

Keying in the synchronisation settings manually

Press **Menu**, select *Extras*, *Synchronise* and *Settings*.

Select *Active Internet sync. settings*.

You need to activate the set where you want to save the synchronisation settings. A set is a collection of settings required to make a connection to a service.

Scroll to the set you wish to activate and press **Activate**.

Select *Edit active Internet sync. settings*. Select each setting one by one and key in all the required settings.

- *Settings' name*. Key in the name for the set and press **OK**.
- *Data to be synchronised*. Mark the data you want to synchronise, *Phone book* or/and *Calendar*, and press **Done**.
- *Database addresses*. Select *Phone book database* or/and *Calendar database* to be edited. Key in the name of the database and press **OK**.
- *User name*. Key in the user name and press **OK**.
- *Password*. Key in the password and press **OK**.
- *Synchronisation server*. Key in the name of the server and press **OK**.

Synchronising from your PC

To synchronise the phone book and calendar from your PC, use either an IR connection or a data cable. You also need the PC Suite software of your phone installed on your PC. Start the synchronisation from your PC using PC suite. After synchronising, the data in the phone and in the PC are the same.

■ Connectivity (Menu 13)



Infrared

You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data such as business cards and calendar notes to or from a compatible phone or data device (for example, a computer) via the IR port of your phone.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.





Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Sending and receiving data via IR

- Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices in an infrared connection is one meter at most.
- To activate the IR port of your phone to receive data via IR, press **Menu**, and select *Connectivity* and *Infrared*.
- The user of the sending phone selects the desired IR function to start data transfer.

If data transfer is not started within two minutes after the activation of the IR port, the connection is cancelled and has to be started again.

IR connection indicator

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data via its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

GPRS

GPRS connection

You can set the phone to automatically register to a GPRS network when you switch the phone on. Press **Menu**, and select *Connectivity*, *GPRS*, *GPRS connection* and *Always online*. When you start an application using GPRS, the connection between phone and network is established, and data transfer is possible. When you end the application, the GPRS connection is ended but the registration to the GPRS network remains.

If you select *When needed*, the GPRS registration and connection are established when an application using GPRS need it and is closed when you end the application.

GPRS modem settings

You can connect the phone via an infrared or a data cable connection to a compatible PC and use the phone as a modem to enable GPRS connectivity from the PC.

Press **Menu**, and select *Connectivity*, *GPRS* and *GPRS modem settings*. Select *Active access point* and activate the access point you want to use. Select *Edit active access point* to change the access point settings.

- Select *Alias for access point*. Key in the name you would like for the activated access point and press **OK**.
- Select *GPRS access point*. Key in the Access Point Name (APN) to establish a connection to a GPRS network and press **OK**. Contact your network operator or service provider for the access point name.

You can also set the GPRS dial-up service settings (Access Point Name) on your PC using the Nokia Modem Options software, see "*PC Suite*" on page 72. If you have set the settings both on your PC and on your phone, note that the PC's settings will be used.

■ WAP services (Menu 14)



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can access various WAP services such as banking, news, weather reports and flight times. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

The WAP services use Wireless Mark-Up Language (WML) on their WAP pages. Internet web pages cannot be viewed on your phone.

Basic steps for accessing and using WAP services

1. Save the service settings that are required to access the WAP service that you want to use. See page 63.
2. Make a connection to the given WAP service. See page 64.
3. Start browsing the pages of the WAP service. See page 65.
4. Once you are finished browsing, end the connection to the WAP service. See page 66.

Setting up the phone for a WAP service

You may receive the service settings as a text message from the network operator or service provider that offers the WAP service that you want to use. For more information, contact your network operator or service provider, or visit Club Nokia's website (www.club.nokia.com).

You can also key in the settings manually or add and edit the settings with PC Suite. For appropriate settings, contact your network operator or service provider. The WAP settings may be available, for example, on their website.

Saving the service settings received as a text message

When you receive the service settings as a text message, *Service settings received* is displayed.

- To save the received settings, press **Options** and select *Save*.

If no settings are saved in *Active service settings*, the settings are saved under the first free connection set and are also activated.

If there are settings saved in *Active service settings*, *Activate saved service settings?* will be displayed. To activate the saved settings, press **Yes**, or to save them only, press **No**.

- To discard the received settings, press **Options** and select *Discard*.
- To view the received settings first, press **Options** and select *View*. To save the settings, press **Save**.

Keying in the service settings manually

1. Press **Menu**, and select *Services*, and *Settings*.
2. Select *Active service settings*.

You need to activate the set where you want to save the service settings. A set is a collection of settings required to make a connection to a WAP service.

3. Scroll to the set you would like to activate and press **Activate**.
4. Select *Edit active service settings*.

Select each of the settings one by one and key in all the required settings according to the information you have received from your network operator or service provider.

Making a connection to a WAP service

Firstly, make sure that the service settings of the WAP service you want to use are activated. To activate the settings:

- Press **Menu**, and select *Services* and *Settings*. Select *Active service settings* and scroll to the set you want to activate and press **Activate**.

Secondly, make a connection to the WAP service. There are three ways to connect:

- Open the homepage of the WAP service:

Press **Menu**, and select **Services** and **Home**.



Tip: To quickly open the homepage of a WAP service, press and hold **[0 _]** in standby mode.

OR

- Select a bookmark of the WAP service:

Press **Menu**, and select **Services**, **Bookmarks**, and select a bookmark.

If the bookmark does not work with the current active service settings, activate another set of service settings and try again.

OR

- Key in the address of the WAP service:

Press **Menu**, and select **Services** and then **Go to address**. Key in the address of the WAP service, press **[* +]** for special characters, and press **OK**.

Note that it is not necessary to add the prefix **http://** in front of the address since it will be added automatically.

Browsing the pages of a WAP service

After you have made a connection to the WAP service, you can start browsing its WAP pages. The function of the phone keys may vary in different WAP services. Follow the text guides on the phone display. For more information, contact your WAP service provider.

Note that if GPRS is selected as the data bearer, the indicator **[G]** is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a GPRS connection, the indicator **[E]** will be shown on the top right of the display to indicate that the GPRS connection is suspended (on hold).

Using the phone keys while browsing

- Use the scroll keys **[<]** or **[>]** to browse through the WAP page.
- To select a highlighted item, press **[<]**.
- To enter letters and numbers, press the keys **[0 _]** - **[WXYZ9]** and to enter special characters, press the key **[* +]**.

Options while browsing

Press **Options** and select one of the options available. The service provider may also offer other options. Select

- **Home** to return to the homepage of the WAP service.
- **Bookmarks**. See page 67.
- **Call / Edit / Open row / Open link / Open list** to call, to key in text or to select a highlighted item on the WAP page.
- **Add bookmark** to save the WAP page as a bookmark.
- **View image** or **View images** to view images and animations from the WAP page.
- **Go to address** to key in the address of the WAP service you want to access.
- **Service inbox**. See page 68.
- **Appear. settings**. See "Appearance settings of the WAP browser" on page 67.
- **Cookie settings**. See page 67.
- **Use detail** to extract numbers, e-mail addresses and website addresses from the WAP page.



- **Reload** to reload and update the current WAP page.
- **Clear the cache**. See "The cache memory" on page 68.
- **Security info** to view security information about the current WAP connection and the server.
- **Quit**. See "Ending a WAP connection" on page 66.

Direct calling

The WAP browser supports functions that you can access while browsing. You can make a voice call, send DTMF tones while a voice call is in progress, and save in the phone book a name and a phone number from a WAP page.

Ending a WAP connection

To quit browsing and to end the connection, press **Options** and select **Quit**. When **Quit browsing?** is shown, press **Yes**.

Alternatively, press . If **GSM data** is the selected data bearer, press  twice. The phone ends the connection to the WAP service.

Appearance settings of the WAP browser

1. While browsing, press **Options** and select *Appear. settings*, or in standby mode, press **Menu**, and select *Services, Settings* and *Appearance settings*.
2. Select *Text wrapping* or *Show images*.
3. Select *On* or *Off* for *Text wrapping* and *Yes* or *No* for *Show images*.

When *Text wrapping* is set to *On*, the text continues on the next line if it cannot be shown on one line. If you select *Off*, the text is abbreviated if it is too long to be shown on one line.

When *Show images* is set to *No*, any pictures appearing on the WAP page are not shown. This can speed up the browsing of WAP pages that contain a lot of pictures.

Cookie settings

You can set the phone to allow or prevent the receiving of cookies.

A cookie is data that a WAP site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see "[The cache memory](#)" on page 68.

1. While browsing, press **Options** and select *Cookie settings*, or in standby mode, press **Menu**, and select *Services, Settings* and *Cookie settings*.
2. Select *Cookies* and select *Allow* or *Reject* to allow or prevent the phone receiving cookies.

Bookmarks

You can save WAP page addresses as bookmarks in the phone's memory.

1. While browsing, press **Options** and select *Bookmarks*, or in standby mode, press **Menu**, and select *Services* and *Bookmarks*.
2. Scroll to the bookmark you want to use and press **Options**.
3. Select one of the following options:

Go to to make a connection to the WAP page associated with the bookmark.

View, Edit or *Delete* to view, modify or delete the selected bookmark.

Send to send the selected bookmark directly to another phone select *As bookmark*, or to send the bookmark as a text message, select *As text message*.

New bookmark to create a new bookmark without connection to the WAP service. Key in the address and the title of the WAP page and press **OK**.

Note that your phone may have some pre-installed bookmarks for sites not affiliated to Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receiving a bookmark

When you have received a bookmark *1 bookmark received* is displayed. Press **View**, then press **Options** and select *View* to view the bookmark, *Save* to save the bookmark, or *Discard* to discard it.

Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider. Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a WAP service.

To access the *Service inbox* in standby mode, when you have received a service message, press **View**.

- If you press **Exit** the message is moved to the *Service inbox*. To access the *Service inbox* later, press **Menu**, and select *Services*, and *Service inbox*.

To access the *Service inbox* while browsing, press **Options** and select *Service inbox*. Scroll to the message you want, press **Options** and select

- *Retrieve* to activate the WML browser and download the marked content.
- *Details* to display detailed information on the service notification.
- *Delete* to delete the selected service notification.

To set the phone to receive service messages

Press **Menu**, and select *Services*, *Settings*, *Service inbox settings*, and *Service messages*. To set the phone to receive service messages, select *On*. If you select *Off*, the phone will not receive service messages.

The cache memory



Note: The information or services you have accessed are stored in the cache of your phone. A cache is a buffer memory, which is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.

To empty the cache:

- while browsing, press **Options** and select *Clear the cache*, or
- in standby mode, press **Menu**, and select *Services*, and *Clear the cache*.

Browser security

Security features are required for some WAP services, such as banking services or shopping on a WAP site. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module can contain certificates as well as private and public keys. The security module provides security services for WAP related applications, and allows you to use a digital signature. The certificates are saved in the security module by the service provider.

Press **Menu** and select *Services*, *Settings* and *Security module settings*. Select

- *Security module details* to show the security module title, its status, manufacturer and serial number.

- *Change signing PIN* to select the signing PIN you want to change. Select the signing PIN you want to change. Key in the current PIN code, then key in the new code twice.


See also "[Access codes](#)" on page [xii](#).

Certificates

There are three kinds of certificates: server certificates, authority certificates and user certificates.

- Server certificates

The phone uses a server certificate to create a secure connection to the WAP service provider. The phone receives the server certificate from the service provider before the connection is established and its validity is checked using the authority certificates saved in the phone. Server certificates are not saved. The phone indicates if the identity of the WAP server or WAP gateway cannot be verified, if the WAP server or WAP gateway certificate is not authentic or if you do not have the correct authority certificate in your phone.

The security indicator  is displayed during a WAP connection, if the data transmission between the phone and the WAP gateway or WAP server (identified by the *IP address* in the *Edit active service settings*) is encrypted.

However, the security indicator does not indicate that the data transmission between the gateway and the content server (place where the requested resource is saved) is secure. It is up to the service provider to secure the data transmission between the gateway and the content server.

- Authority certificates

Authority certificates are used by some WAP services, such as banking services, and for checking the validity of other certificates. Authority certificates can either be saved in the security module by the service provider, or they can be downloaded from a WAP site, if the WAP service supports the use of authority certificates. If you save the certificate, it is added to the certificate list in the phone. Authority certificates may also be available in the security module.


- User certificates

User certificates are issued to users by a Certifying Authority. User certificates are required, for example, to make a digital signature and they associate the user with a specific private key in a security module. User certificates are saved in the security module by the service provider or you can download them to your phone from a WAP site, if supported by the security module of the SIM card.

Digital signature

You can make digital signatures with your phone. The signature can be traced back to you via the private key on the security module and the user certificate that was used to perform the signature. Using the digital signature can be the same as signing your name to a paper bill, contract or other document.

To make a digital signature, select a link on a WAP page, for example, the title of the book you want to buy and its price. The text to sign (possibly including amount, date, etc.) will be shown.

Check that the header text is *Read* and that the digital signature icon  is shown.



Note: If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first and then you can select **Sign**.



Note: The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Key in the signing PIN (see "[Access codes](#)" on page xii) and press **OK**. The digital signature icon will disappear, and the WAP service may display a confirmation of your purchase.

SIM services (Menu 15)



In addition to the functions available on the phone, your SIM card may provide additional services that you can access in Menu 14. Menu 14 is shown only if it is supported by your SIM card. The name and contents of the menu depend entirely on the service available.



Note: For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

You can set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option **Yes** within the menu **Confirm SIM service actions**, in **Phone settings**.

Note that accessing these services may involve sending a text message (SMS) or making a phone call for which you may be charged.

7. PC Connectivity

You can send and receive e-mails, and access the Internet when your phone is connected to a compatible PC via an IR connection or a data cable. You can use your phone with a variety of PC connectivity and data communications applications. With PC Suite you can, for example, send text and picture messages, synchronise contacts, calendar and to-do notes between your phone and the PC, and manage your WAP bookmarks and connection sets.

You may find more information and downloadable files on the Nokia website, www.nokia.com/support/phones/7250.

PC Suite

The PC Suite contains the following applications :

- **Nokia Application Installer** to install Java applications from the PC to the phone.
- **Nokia Image Converter** to make images usable for multimedia messages, wallpaper or operator logos and to transfer them to your phone.
- **Nokia Sound Converter** to edit polyphonic ringing tones to be compatible with your phone and to transfer them to your phone.
- **Nokia Content Copier** to copy data or back-up data from your phone to a PC or to another Nokia phone.
- **Nokia PC WAP Manager** to edit and send your WAP bookmarks or update the connection sets to your phone.
- **Nokia Phone Editor** to send text messages and edit the phone book and message settings of your phone.
- **Nokia Phone Browser** to view the contents of the Gallery folder of your phone on PC.
- **Nokia PC Sync** to synchronise the phone book, calendar and to-do notes between your phone and PC.
- **Nokia PC Graphics** to create and edit picture messages for previous compatible Nokia phone models, for example, the Nokia 8310.
- **Nokia PC Composer** to create monophonic ringing tones for previous compatible Nokia phone models, for example, the Nokia 8310.
- **Nokia 7250 data modem drivers** enable you to use your phone as a modem.

- **Nokia Modem Options** contains settings for HSCSD and GPRS connections.
- **Nokia Connection Manager** to select the connection type between the PC and the phone.

GPRS, HSCSD and CSD

With your phone you can use GPRS (General Packet Radio Service), HSCSD (High Speed Circuit Switched Data) and CSD (Circuit Switched Data, *GSM data*) data services.

For availability and subscription to data services, contact your network operator or service provider.

Note that the use of HSCSD service consumes the phone's battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer.

See ["GPRS modem settings"](#) on page 62.

■ Using data communication applications

For information on using a data communication application, refer to the documentation provided with it.

1. If you use an IR connection:
 - Activate the IR connection in the phone, see ["Infrared"](#) on page 61. Make sure that the connection is active in your PC.
2. Start using the data communications application on the computer.

If you use the cable DKU-5:

- Connect the cable to the USB port on the back of your computer and to the connector on your phone.

Note that making or answering phone calls during a computer connection is not recommended as it might disrupt the operation.

For a better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

8. Battery information

■ Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire !
Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

9. Genuine Accessories

A new extensive range of accessories is available for your phone. Select the accessories which accommodate your specific communication needs.

Some of the accessories are described in detail below.

For availability of the accessories, please check with your local dealer. A few practical rules for accessories operation:

- Keep the accessories out of small children's reach.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that all mobile phone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and accessories approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.



■ Battery


Type	Tech	Capacity	Talktime *	Standby *
BLD-3	Li-Ion	720 mAh	2 hrs - 5 hrs	150 hrs - 300 hrs

* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

■ Indoor

Travel Charger (ACP-12)

Small, lightweight travel charger with multivoltage (100 - 240V) switcher technology. Provides easy and convenient way to charge the phone.

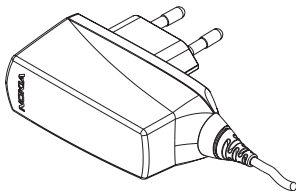


Note: The plug types vary according to different markets.

■ Indoor and Vehicle

Boom Headset (HDB-4)

This small and lightweight headset has a beautiful and distinctive Nokia design. Gives you excellent audio quality and you can answer or end calls by pressing the button on the microphone part of the headset.

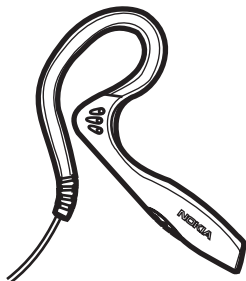

Stereo Headset (HDS-3)

This stereo headset has a beautiful and distinctive Nokia design. Gives you excellent audio quality and you can answer or end calls by pressing the remote control button. A comfortable hands-free solution that makes listening to the phone's FM radio, a pleasure.

■ Vehicle

Mobile Charger (LCH-9)

The multi-voltage Mobile Charger, LCH-9, ensures your phone is always ready for use whenever you travel. This small charger's functional design fits most car lighters and interiors.

A green light indicates that the Mobile Charger is ready for charging. Check the charging status on the phone display. The input voltage can be 12 or 24 V DC, negative grounding.

Avoid prolonged charging with the Mobile Charger when the car engine is not running; this may cause the battery of your car to drain. Note also that in some cars the cigarette lighter plug is not provided with electricity if the ignition is switched off. Verify that the green LED light is on.

10. Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

11. Important Safety Information

■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

■ Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air-bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices so require.

■ Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

■ Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.


■ Emergency calls




Important: This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions. Because of this, connections in all conditions can not be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the phone.
2. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
3. Key in the emergency number for your present location (e.g. 112, 911 or other official emergency number). Emergency numbers vary by location.

4. Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident – do not cut off the call until given permission to do so.

■ Certification information (SAR)

THIS MODEL PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for this model phone when tested for use at the ear is 0.60 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com.

Index

A

- Access codes
 - Barring password xii
 - PIN code and PIN2 code xii
 - PUK and PUK2 codes xii
 - Security code xii
- Accessories 75
- Alarm clock 49
- Appearance settings of the WAP browser 67
- Applications 53
- Archive folder and my folders 21

B

- Battery 75
- Battery information 74
 - type 75
- Bookmarks 67
- Boom Headset (HDB-4) 76
- Browser security 69
 - browser security
 - security module for WAP applications 69
- Browsing the pages of a WAP service 65

C

- Calculator 55
- Calendar 49
- Call counters and call timers 29
- Call settings 37
- Call waiting 11
- Caller groups 35
- Camera xiv, 46
- Camera settings 47
- Changing the covers 8
- Charging the battery 6
- Chat 24
- Colour schemes 41
- Connectivity 61
- Cookie settings 67
- Copying phone books 33
- Countdown timer 56
- currency conversion 56
- customise the phone tones 35

D

- Delete recent call lists 29
- Dialled numbers 29
- digital signature 70
- Display settings 40
- Downloading an application 54

E

- Editing a name, number, text item 32
- Ending a WAP connection 66
- Essential indicators in standby mode 3
- Extras 55

F

- Font size setting 28

G

- Gallery 47
- Game settings 53
- Games 52
- General Packet Radio Service (GPRS)
 - GPRS technology xv
- Genuine Accessories 75
- GPRS 62
- GPRS connection 62
- GPRS modem settings 62

H

- Headset 4

I

- Infrared 61
- Inserting a text template into a message or into an e-mail 20
- Installing the SIM card and the battery 5
- IR connection indicator 62

K

- Keying in the service settings manually 64
- Keypad lock (Keyguard) 7
- Keys and connectors 1

L

- Language 39
- Line for outgoing calls 38
- Loudspeaker 12

M

- Making a calendar note 50
- Making a call 10
 - Calling your voice mailbox 10
 - Last number redialling 10
 - Making a call using the phone book 10
- Making a conference call 10
- Making a connection to a WAP service 64
- Memory in use 30
- Memory status for applications 55
- Memory status for games 53
- menu
 - list of functions iv
- MIDP Java™ applications xv
- Missed calls 29
- Mobile Charger (LCH-9) 76
- Multimedia messages 21
- Multimedia messaging service (MMS) xiv

N

- Nokia Application Installer 72
- Nokia Connection Manager 73
- Nokia Content Copier 72
- Nokia Image Converter 72
- Nokia Modem Options 73
- Nokia PC Composer 72
- Nokia PC Graphics 72
- Nokia PC Sync 72
- Nokia PC WAP Manager 72
- Nokia Phone Browser 72
- Nokia Phone Editor 72
- Nokia Sound Converter 72

O

- Organiser 49
- Over the Air (OTA) settings service xv

P

- PC Suite 72
- personalise the profile 36
- Phone settings 39
- Polyphonic sound (MIDI) xiv
- predictive text input 13

R

- Radio 44
- Reading and replying to a message or an e-mail 19
- Reading and replying to a multimedia message 23
- receive the service settings as a text message 63
- Received calls 29
- Recent calls lists 29

S

- SAR value 82
- Saving the synchronisation settings received as a text message 60
- Screen saver 2, 41
- Searching for a name in the phone book 32
- security settings
 - digital signature 70
- Sending and receiving a business card 33
- Sending and receiving data via IR 62
- Service inbox 68
- Setting up the phone for a WAP service 63
- Settings for multimedia messages 27
- Settings for text and e-mail messages 26
- Shared memory xvi
- Speed dialling 10
- Stereo Headset (HDS-3) 76
- Stopwatch 56
- Synchronisation 59
- Synchronising from your PC 61
- Synchronising from your phone 60

T

- Templates 20
- The cache memory 68
- Time and date settings 36
- To take a photo 46
- To-do list 51
- Tone settings 42
- Tuning a radio channel 45

U

- Using the radio 45

W

Wallet 57

wallet

 signing documents via WAP 70

Wallpaper 2

WAP services 63

 security module in SIM 69

 signing documents 70

wrist strap 4

Writing and sending a multimedia
message 22

Writing and sending e-mail 18

Writing and sending messages 17