

User's Guide for Nokia 7373

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this RM-209 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC

A copy of the Declaration of Conformity can be found from http://www.nokia.com/phones/declaration_of_conformity/.

CE 0434

Copyright © 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on, XpressPrint, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright © 1997–2006. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with

MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses may be obtained from MPEG LA, LLC. See <<http://www.mpegla.com>>.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

This device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Issue 1

Nokia Care Online

INTERACTIVE DEMONSTRATIONS



The Nokia Care web support provides you with more information on our online services.

INTERACTIVE DEMONSTRATIONS

Learn how to set up your phone for the first time, and find out more about its features. Interactive Demonstrations give step-by-step instructions on using your phone.

SOFTWARE



USER'S GUIDE



SETTINGS

USER'S GUIDE

The online User's Guide contains detailed information on your phone. Remember to check regularly for updates.

SOFTWARE

Make the most of your phone with software for your phone and PC. Nokia PC Suite connects your phone and PC so you can manage your calendar, contacts, music and images, while other applications complement its use.

SETTINGS

Certain phone functions, such as multimedia messaging, mobile browsing and email*, may require settings before you can use them. Have them sent to your phone free of charge.

*Not available on all phones.

HOW DO I USE MY PHONE?

The Set Up section, at www.nokia-asia.com/setup, helps you prepare your phone for use. Familiarise yourself with phone functions and features by referring to the Guides and Demos section at www.nokia-asia.com/guides.

HOW DO I SYNCHRONISE MY PHONE AND PC?

Connecting your phone to a compatible PC with the requisite Nokia PC Suite version from www.nokia-asia.com/pcsuite lets you synchronise your calendar and contacts.

WHERE CAN I GET SOFTWARE FOR MY PHONE?

Get more out of your phone with downloads from the Software section at www.nokia-asia.com/software.

WHERE CAN I FIND ANSWERS TO COMMON QUESTIONS?

Look up the FAQ section at www.nokia-asia.com/faq for answers to your questions on your phone and other Nokia products and services.

HOW DO I KEEP UP WITH NOKIA NEWS?

Subscribe online to Nokia Connections at www.nokia-asia.com/signup, and be the first to know about the latest products, promotions and upcoming events.

Should you still require further assistance, please refer to www.nokia-asia.com/contactus.

For additional information on repair services, please visit www.nokia-asia.com/repair.

Please visit www.nokia-asia.com/support for details.



Content

| | | | |
|--------------------------------------|-----------|------------------------------------|-----------|
| For your safety..... | 10 | 3. Call functions..... | 23 |
| About your device..... | 11 | Make a call | 23 |
| Network services..... | 11 | Speed dialing | 23 |
| Shared memory..... | 12 | Enhanced voice dialing..... | 23 |
| Enhancements..... | 12 | Answer or reject a call..... | 24 |
| General information | 13 | Call waiting..... | 24 |
| Access codes..... | 13 | Options during a call..... | 24 |
| Security code | 13 | 4. Write text | 25 |
| PIN codes | 13 | Traditional text input..... | 25 |
| PUK codes..... | 13 | Predictive text input | 25 |
| Barring password..... | 13 | 5. Navigate the menus | 26 |
| Configuration settings service | 13 | 6. Messaging | 27 |
| Download content | 14 | Text message..... | 27 |
| Nokia support..... | 14 | Write and send a message..... | 27 |
| 1. Get started..... | 15 | Read and reply to a message | 28 |
| Install SIM card and battery..... | 15 | Multimedia message..... | 28 |
| Insert a microSD card | 15 | Write and send a multimedia | |
| Charge the battery..... | 16 | message..... | 28 |
| Open and close the phone..... | 17 | Write and send a multimedia | |
| Switch the phone on and off..... | 17 | plus message..... | 29 |
| Set the time and date | 17 | Message sending | 29 |
| Plug and play service..... | 17 | Read and reply to a message | 30 |
| Antenna | 18 | Flash messages | 30 |
| Phone strap..... | 18 | Write a message | 30 |
| 2. Your phone | 19 | Receive a message | 30 |
| Keys and parts..... | 19 | Nokia Xpress audio messaging..... | 31 |
| Standby mode..... | 19 | Create a message | 31 |
| Display | 19 | Listen to a message | 31 |
| Power saving..... | 20 | Memory full | 31 |
| Active standby..... | 20 | Folders..... | 31 |
| Shortcuts in the standby mode ... | 20 | E-mail application | 32 |
| Indicators..... | 21 | Setting wizard | 32 |
| Flight mode..... | 22 | Write and send an e-mail | 32 |
| Keypad lock (keyguard) | 22 | Download e-mail | 33 |
| Functions without a SIM card..... | 22 | Read and reply to e-mail..... | 33 |

| | | | |
|------------------------------------|-----------|------------------------------------|-----------|
| E-mail folders..... | 33 | Display..... | 45 |
| Spam filter..... | 34 | Time and date..... | 46 |
| Instant messaging..... | 34 | My shortcuts..... | 47 |
| Access..... | 34 | Left selection key..... | 47 |
| Connect..... | 35 | Right selection key..... | 47 |
| Sessions..... | 35 | Navigation key..... | 47 |
| Add IM contacts..... | 36 | Voice commands..... | 47 |
| Block or unblock messages..... | 37 | Connectivity..... | 48 |
| Groups..... | 37 | Bluetooth wireless technology..... | 48 |
| Voice messages..... | 37 | Packet data..... | 49 |
| Info messages..... | 38 | Data transfer..... | 50 |
| Service commands..... | 38 | USB data cable..... | 51 |
| Delete messages..... | 38 | Call..... | 51 |
| SIM messages..... | 38 | Phone..... | 52 |
| Message settings..... | 38 | Enhancements..... | 53 |
| General settings..... | 38 | Configuration..... | 54 |
| Text messages..... | 38 | Security..... | 54 |
| Multimedia messages..... | 39 | Restore factory settings..... | 55 |
| E-mail messages..... | 40 | Phone software updates..... | 55 |
| 7. Contacts..... | 41 | Settings..... | 56 |
| Search for a contact..... | 41 | Request a software update..... | 56 |
| Save names and phone numbers..... | 41 | Install a software update..... | 56 |
| Save details..... | 41 | 10. Operator menu..... | 57 |
| Copy or move contacts..... | 41 | 11. Gallery..... | 58 |
| Edit contact details..... | 42 | Print images..... | 58 |
| Synchronize all..... | 42 | Memory card..... | 58 |
| Delete contacts..... | 42 | Format the memory card..... | 59 |
| Business cards..... | 42 | Lock the memory card..... | 59 |
| Settings..... | 43 | Check memory consumption..... | 59 |
| Groups..... | 43 | 12. Media..... | 60 |
| Speed dials..... | 43 | Camera and video..... | 60 |
| Info, service, and my numbers..... | 43 | Take an image..... | 60 |
| 8. Call log..... | 44 | Record a video clip..... | 60 |
| Location information..... | 44 | Camera and video options..... | 61 |
| 9. Settings..... | 45 | Media player..... | 61 |
| Profiles..... | 45 | Configuration for a streaming | |
| Themes..... | 45 | service..... | 61 |
| Tones..... | 45 | Music player..... | 61 |
| | | Playing the music tracks..... | 62 |

| | | | |
|-----------------------------------|-----------|--------------------------------------|-----------|
| Music player options | 62 | Service inbox settings | 74 |
| Radio | 63 | Cache memory | 74 |
| Save radio frequencies | 63 | Browser security | 75 |
| Listen to the radio | 63 | Security module | 75 |
| Voice recorder | 64 | Certificates | 75 |
| Record sound | 64 | Digital signature | 76 |
| Equalizer | 65 | | |
| Stereo widening | 65 | 16. SIM services | 77 |
| 13. Organizer | 66 | 17. PC connectivity | 78 |
| Alarm clock | 66 | Nokia PC Suite | 78 |
| Stop the alarm | 66 | Packet data, HSCSD, and CSD | 78 |
| Calendar | 66 | Bluetooth | 78 |
| Make a calendar note | 67 | Data communication applications .. | 78 |
| Note alarm | 67 | | |
| To-do list | 67 | 18. Battery information | 80 |
| Notes | 67 | Charging and discharging | 80 |
| Calculator | 67 | Nokia battery authentication | |
| Countdown timer | 68 | guidelines | 81 |
| Stopwatch | 68 | | |
| 14. Applications | 69 | 19. Genuine Enhancements.. | 83 |
| Launch a game | 69 | Power | 83 |
| Launch an application | 69 | Wireless Headset | 83 |
| Application options | 69 | Nokia Bluetooth Headset | |
| Download an application | 69 | BH-700 | 83 |
| | | Car Solutions - Plug-in solutions.. | 84 |
| | | Nokia Plug-in Car Handsfree | |
| | | HF-3 | 84 |
| | | Headsets - Wired Headset | 84 |
| 15. Web | 71 | Nokia Fashion Stereo Headset | |
| Set up browsing | 71 | HS-31 | 84 |
| Connect to a service | 71 | Memory card | 84 |
| Browse pages | 72 | Nokia 512 MB microSD Card | |
| Browse with phone keys | 72 | MU-28 | 84 |
| Direct calling | 72 | | |
| Bookmarks | 72 | Care and maintenance | 85 |
| Receive a bookmark | 72 | Additional safety | |
| Appearance settings | 73 | information | 86 |
| Security settings | 73 | Operating environment | 86 |
| Cookies | 73 | Medical devices | 86 |
| Scripts over secure connection... | 73 | Pacemakers | 86 |
| Download settings | 74 | Hearing aids | 87 |
| Service inbox | 74 | Vehicles | 87 |

| | |
|--|-----------|
| Potentially explosive environments | 87 |
| Emergency calls | 88 |
| To make an emergency call: | 88 |
| Certification information (SAR) | 89 |
| Index | 90 |

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Do not use the phone at a refuelling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the EGSM 900 and GSM 1800 and 1900 networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect the privacy and legitimate rights of others.

When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others including copyrights.



Warning: To use any features in this device, other than the alarm clock, the device must

be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured for your network provider. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging service

(MMS), browsing, e-mail application, instant messaging, presence enhanced contacts, remote synchronization, and content downloading using the browser or MMS, require network support for these technologies.

■ Shared memory

The following features in this device may share memory: gallery, contacts, text messages, multimedia messages, and instant messages, e-mail, calendar, to-do notes, Java™ games and applications, and notes application. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java applications may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text messages, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

■ Enhancements

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

General information

■ Access codes

Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. The preset code is 12345. To change the code, and to set the phone to request the code, see "[Security](#)" p. 54.

PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SIM card against unauthorized use. See "[Security](#)" p. 54.

The PIN2 code (4 to 8 digits) may be supplied with the SIM card and is required for some functions.

The module PIN is required to access the information in the security module. See "[Security module](#)" p. 75.

The signing PIN is required for the digital signature. See "[Digital signature](#)" p. 76.

PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) is required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact your local service provider for the codes.

Barring password

The barring password (4 digits) is required when using the [Call barring service](#). See "[Security](#)" p. 54.

■ Configuration settings service

To use some of the network services, such as mobile Internet services, MMS, Nokia Xpress audio messaging, or remote Internet server synchronization, your phone needs the correct configuration settings. For more information on availability, contact your network operator, service provider, nearest authorized Nokia dealer, or visit

the support area on the Nokia Web site, www.nokia-asia.com/support.

When you have received the settings as a configuration message, and the settings are not automatically saved and activated, *Configuration settings received* is displayed.

To save the settings, select **Show > Save**. If required, enter the PIN code supplied by the service provider.

To discard the received settings, select **Exit** or **Show > Discard**.

■ Download content

You may be able to download new content (for example, themes) to the phone (network service). You may also be able to download updates of phone software (network service). See *"Phone"* p. 52, *Phone updates*.

For the availability of different services, pricing, and tariffs, contact your service provider.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

■ Nokia support

For the latest version of this guide, downloads, services and additional information related to your Nokia product, please visit www.nokia-asia.com/7373/support or your local Nokia web site. You may also download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at www.nokia-asia.com/phonesettings.

Should you still require assistance, please refer to www.nokia-asia.com/contactus.

To check for the nearest Nokia care center location for maintenance services, you may like to visit www.nokia-asia.com/repair.

1. Get started

■ Install SIM card and battery

Always switch the device off and disconnect the charger before removing the battery.

 
Keep all SIM cards and memory cards out of the reach of small children.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.


This device is intended for use with BL-4B battery. Always use original Nokia batteries. See "[Nokia battery authentication guidelines](#)" p. 81.

The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


To remove the back cover of the phone, press and slide the cover (1).

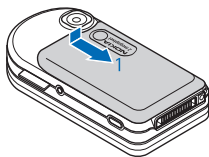

 
Remove the battery as shown (2). Open (3) the SIM card holder.



 Insert the SIM card properly into the holder (4). Close the SIM card holder (5), and slightly press the holder to lock it (6).



 Replace the battery (7). Observe the battery contacts. Slide the back cover into its place (8, 9).

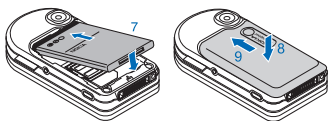

■ Insert a microSD card

Keep all microSD memory cards out of the reach of small children.

 


Switch the phone off, and remove the back cover and the battery of the phone.

Slide the memory card holder to unlock (1) and open the card holder (2).

Insert the memory card into the card holder with the contact surface facing backwards (3), and close the card holder (4).

Slide the card holder to lock it (5).

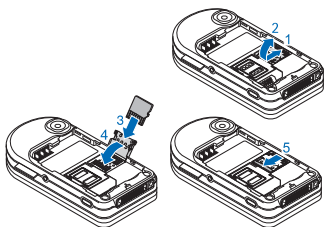

Replace the battery and close the back cover of the phone.

Use only compatible microSD cards with this device. Other memory cards, such as Reduced Size MultiMedia cards, do not fit in the microSD card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.

Use only microSD cards approved by Nokia for use with this device. Nokia utilizes the approved industry standards for memory cards but not all other brands may

function correctly or be fully compatible with this device.

■ Charge the battery

 
Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-3 charger.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Connect the charger to a wall socket.



2. Connect the lead from the charger to the socket on the bottom of your phone.

If the battery is completely discharged, it may take a few

 
minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger used. Charging a BL-4B battery with the AC-3 charger takes approximately 2 hours and 20 minutes while the phone is in the standby mode.

■ Open and close the phone

To open the phone rotate the upper part to the right (1) or to the left until it snaps into place.

To close the phone, rotate the upper part down in the opposite direction (2).

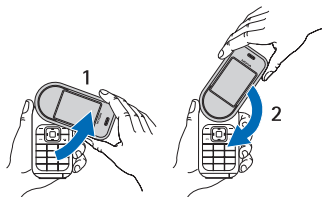

Important: When you open the phone, rotate the upper part 180 degrees to the left or right. Do not rotate the upper part more than 180 degrees. If you force the upper part more than 180 degrees in either direction, the phone will be damaged.

To switch off a tone that sounds when you open and close the phone, see ["Tones"](#) p. 45.

■ Switch the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key. See ["Keys and parts"](#) p. 19. If the phone asks for a PIN or a UPIN code, enter the code (displayed as ****), and select **OK**.

Set the time and date

Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date. See ["Time and date"](#) p. 46.

Plug and play service

When you switch on your phone for the first time, and the phone is in the standby mode, you are asked to get the configuration settings from your service provider (network service). Confirm or decline the query. See ["Connect to"](#)

 
support," p. 54, and
"Configuration settings service"
p. 13.

■ Antenna

Your device has an internal antenna.




Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.

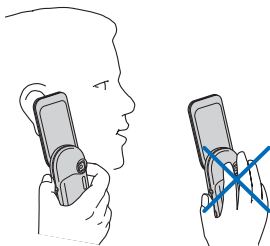


■ Phone strap

 Thread a strap through the eyelet of the phone as shown in the picture and tighten it.



2. Your phone

 ■ Keys and parts

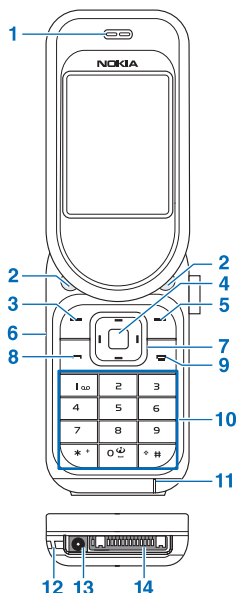

Earpiece (1)

Twin stereo speakers (2)

Left selection key (3)

Middle selection key (4)

Right selection key (5)

Volume key and zoom key (6)

4-way scroll key (7)

Call key (8)

End key (9)

 
Keypad (10)

Microphone (11)

Phone strap eyelet (12)

Charger connector (13)

Pop-Port™ connector (14)

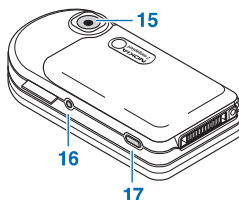

Camera lens (15)

Power key (16)

Camera key (17)

■ Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

 
Display

Signal strength of the cellular network (1)

Battery charge status (2)

Indicators (3)

Name of the network or the operator logo (4)

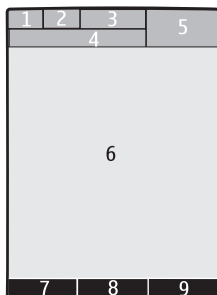

Clock (5)

Main screen (6)

Function of left selection key (7) is **Go to** or a shortcut to another function. See "[Left selection key](#)" p. 47.

Function of middle selection key (8) is **Menu**

Function of right selection key (9) is **Music** or a shortcut to another function. See "[Right selection key](#)" p. 47. Operator variants may have an operator-specific name to access an operator-specific Web site.

Power saving

Your phone has some features in order to save battery power in standby mode if the phone is not active. These features may be activated or not. See [Power saver](#) and [Sleep mode](#) in "[Display](#)" p. 45.

Active standby

In the active standby mode there is a list of selected phone features and information on the screen that you can directly access. To switch it on or off, select **Menu** > [Settings](#) > [Display](#) > [Active standby](#) > [Active standby mode](#) > [On](#) or [Off](#).

In the standby mode, scroll up or down to activate the navigation in the list, and select **Select** or **View**. Left and right arrows at the beginning and end of a line indicate that further information is available by scrolling left or right. To end the active standby navigation mode, select **Exit**.


To organize and change the active standby mode, activate the navigation mode, and select **Options** and from the available options.


Shortcuts in the standby mode


- To access the list of dialed numbers, press the call key once. Scroll to the number or name that you want; and to call the number, press the call key.
- To open the web browser, press and hold 0.

 

- To call your voice mailbox, press and hold 1.
- Use the scroll key as a shortcut. See "[My shortcuts](#)" p. 47.


Indicators

 You have unread messages in the *Inbox* folder.


 You have unsent, canceled or failed messages in the *Outbox* folder.


 The phone registered a missed call.


 /  Your phone is connected to the instant messaging service, and the availability status is online or offline.


 You received one or several instant messages.



 The keypad is locked.



 The phone does not ring for an incoming call or text message.



 The alarm clock is activated


 The countdown timer is running.


 The stopwatch is running in the background.


 /  The phone is registered to the GPRS or EGPRS network.


 /  A GPRS or EGPRS connection is established.


 /  The GPRS or EGPRS connection is suspended (on hold).


 A Bluetooth connection is active.




 
 If you have two phone lines, the second phone line is selected.

 All incoming calls are diverted to another number.


 The loudspeakers are activated, or the music stand is connected to the phone.

 Calls are limited to a closed user group.

 The timed profile is selected.

 ,  ,  , or  A headset, hands-free, loopset, or music stand enhancement is connected to the phone.

■ Flight mode

You can deactivate all radio frequency functionality and still have access to offline games, calendar, and phone numbers. Use the flight mode in radio sensitive environments—on board aircraft or in hospitals. When the flight mode is active,  is shown.

Select **Menu** > **Settings** > **Profiles** > **Flight** > **Activate** or **Personalise**.

To deactivate the flight mode, select any other profile.

In the flight mode you can make an emergency call. Enter the emergency number, press the call key, and select **Yes** when asked **Exit flight profile?** The phone attempts to make an emergency call.

■ Keypad lock (keyguard)

To prevent accidental keypresses, select **Menu**, and press * within 3.5 seconds to lock the keypad.

To unlock the keypad, select **Unlock**, and press * within 1.5 seconds. If the **Security keyguard** is set **On**, enter the security code if requested.

To answer a call when the keyguard is on, press the call key.

When you end or reject the call, the keypad automatically locks.

For **Automatic keyguard** and **Security keyguard**, see "Phone" p. 52.

When the keyguard is on, calls may be possible to the official emergency number programmed into your device.

■ Functions without a SIM card

Several functions of your phone may be used without installing a SIM card (for example, the data transfer with a compatible PC or another compatible device). Some functions appear dimmed in the menus and cannot be used.

For an emergency call, some networks may require that a valid SIM card is properly inserted in the device.

3. Call functions

■ Make a call

1. Enter the phone number, including the area code.
For international calls, press * twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.

2. To call the number, press the call key.

To adjust the volume in a call, press the volume up or down key.

3. To end the call or to cancel the call attempt, press the end key, or close the phone.

To search for a name or phone number that you have saved in *Contacts*, see "Search for a contact" p. 41. Press the call key to call the number.

To access the list of dialed numbers, press the call key once in the standby mode. To call the number, select a number or name, and press the call key.

Speed dialing

Assign a phone number to one of the speed-dialing keys, 2 to 9. See "Speed dials" p. 43. Call the number in either of the following ways:

- Press a speed-dialing key, then the call key.
- If *Speed dialling* is set to *On*, press and hold a speed-dialing key until the call begins. See *Speed dialling* in "Call" p. 51.

Enhanced voice dialing

You can make a phone call by saying the name that is saved in the contact list of the phone. Voice commands are language-dependent. To set the language, see *Recognition lang.* in "Phone" p. 52.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

1. In the standby mode, press and hold the right selection key, or press and hold the volume

down key. A short tone is played, and *Speak now* is displayed.

2. Say the voice command clearly. If the voice recognition is successful, a list with matches is shown. The phone plays the voice command of the match on the top of the list. If the result is not the correct one, scroll to another entry.

Using voice commands to carry out a selected phone function is similar to voice dialing. See *Voice commands* in "My shortcuts" p. 47.

■ Answer or reject a call

To answer an incoming call, press the call key, or open the phone. To end the call, press the end key, or close the phone.

To reject an incoming call, press the end key. To mute the ringing tone, select **Silence**.

Call waiting

To answer the waiting call during an active call (network service), press the call key. The first call is put on hold. To end the active call, press the end key.

To activate the *Call waiting* function, see "Call" p. 51.

■ Options during a call

Many of the options that you can use during a call are network services. For availability, contact your service provider.

During a call, select **Options** and from the following options:

Call options are *Mute* or *Unmute*, *Contacts*, *Menu*, *Lock keypad*, *Record*, *Voice clarity*, *Loudspeaker* or *Handset*.

Network services options are *Answer* or *Reject*, *Hold* or *Unhold*, *New call*, *Add to conference*, *End call*, *End all calls*, and the following:

Send DTMF — to send tone strings

Swap — to switch between the active call and the call on hold

Transfer — to connect a call on hold to an active call and disconnect yourself



Conference — to make a conference call

Private call — to discuss privately in a conference call



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

4. Write text

To enter text (for example, when writing messages), use traditional or predictive text input. When you write text, press and hold **Options** to toggle between traditional text input, indicated by , and predictive text input, indicated by . Not all languages are supported by predictive text input.

The character cases are indicated by **Abc**, **abc**, and **ABC**. To change the character case, press **#**. To change from the letter to number mode, indicated by **123**, press and hold **#**, and select **Number mode**. To change from the number to the letter mode, press and hold **#**.

To set the writing language, select **Options > Writing language**.

■ Traditional text input

Press a number key, 1 to 9, repeatedly until the desired character appears. The characters available depend on the selected writing language. If the next letter you want is located on the same key as the present one, wait until the cursor appears and enter the letter. The most common punctuation marks and special

characters are available under the number key 1.

■ Predictive text input

Predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word, using the keys 2 to 9. Press each key only once for one letter.
2. When you finish writing the word and it is correct, to confirm it by adding a space, press 0.

If the word is not correct, press ***** repeatedly, and select the word from the list.

If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**.

Enter the word using traditional text input, and select **Save**.

To write compound words, enter the first part of the word, and press the scroll key right to confirm it. Write the last part of the word, and confirm the word.

3. Start writing the next word.

5. Navigate the menus

The phone offers you an extensive range of functions, which are grouped into menus.

1. To access the menu, select **Menu**.

To change the menu view, select **Options** > *Main menu view* > *List*, *Grid*, *Grid with labels*, or *Tab*.

To rearrange the menu, scroll to the menu you want to move, and select **Options** > *Organise* > **Move**. Scroll to where you want to move the menu, and select **OK**. To save the change, select **Done** > **Yes**.

2. Scroll through the menu, and select an option (for example, *Settings*).
3. If the selected menu contains further submenus, select the one that you want (for example, *Call*).
4. If the selected menu contains further submenus, repeat step 3.
5. Select the setting of your choice.
6. To return to the previous menu level, select **Back**. To exit the menu, select **Exit**.

6. Messaging



You can read, write, send, and save text, multimedia, e-mail, audio, and flash messages. All messages are organized into folders.

■ Text message

With the short message service (SMS) you can send and receive text messages, and receive messages that can contain pictures (network service).

Before you can send any text or SMS e-mail message, you must save your message center number. See "[Message settings](#)" p. 38.

To check SMS e-mail service availability and to subscribe to the service, contact your service provider. To save an e-mail address in [Contacts](#), see "[Save details](#)" p. 41.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages will be sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like


Chinese, take up more space limiting the number of characters that can be sent in a single message.

An indicator at the top of the display shows the total number of characters left and the number of messages needed for sending. For example, 673/2 means that there are 673 characters left and that the message will be sent as a series of 2 messages.

Write and send a message

1. Select **Menu** > [Messaging](#) > [Create message](#) > [Text message](#).
2. Enter one or more phone numbers or e-mail addresses in the **To:** field. To retrieve a phone number or e-mail address from a memory, select **Add**.
3. For a SMS e-mail, enter a subject in the **Subject:** field.
4. Write your message in the **Message:** field.
5. To send the message, select **Send**. See "[Message sending](#)" p. 29.

Read and reply to a message

1. To view a received message, select **Show**. To view it later, select **Exit**.
To read the message later, select **Menu** > *Messaging* > *Inbox*.  is shown if you have unread messages in *Inbox*.
2. To reply to a message, select **Reply** and the message type.
3. Create the reply message.
4. To send the message, select **Send**. See "Message sending" p. 29.

■ Multimedia message



Note: Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

A multimedia message can contain some attachments.

To check availability and to subscribe to the multimedia messaging service (MMS), contact your service provider. See "Message settings" p. 38.

Write and send a multimedia message

The wireless network may limit the size of MMS messages. If the inserted image exceeds this limit, the device may make it smaller so that it can be sent by MMS.

1. Select **Menu** > *Messaging* > *Create message* > *Multimedia*.
2. Write your message.
Your phone supports multimedia messages that contain several pages (slides). A message can contain a calendar note and a business card as attachments. A slide can contain text, one image, and one sound clip; or text and a video clip. To insert a slide in the message, select **New**; or select **Options** > *Insert* > *Slide*.
To insert a file in the message, select **Insert**; or select **Options** > *Insert*.
3. To view the message before sending it, select **Options** > *Preview*.
4. To send the message, select **Send**. See "Message sending" p. 29.
5. Enter one or more phone numbers or e-mail addresses in the *To:* field. To retrieve a phone number or e-mail

- address from a memory, select **Add**.
- To send the message, select **Send**. See "Message sending" p. 29.
 - To view the message before sending it, select **Options** > **Preview**.
 - To send the message, select **Send**. See "Message sending" p. 29.

Write and send a multimedia plus message

The wireless network may limit the size of MMS messages. If the inserted image exceeds this limit, the device may make it smaller so that it can be sent by MMS.

Any content can be added to the multimedia plus message. Such content might be images, video clips, sound clips, business cards, calendar notes, themes, streaming links, or even unsupported files (for example, files received with an e-mail).


- Select **Menu** > **Messaging** > **Create message** > **Multimedia plus**.
- Enter one or more phone numbers or e-mail addresses in the **To:** field. To retrieve a phone number or e-mail address from a memory, select **Add**.
- Enter a subject and write your message.
- To add a file, select **Insert** and from the options.

Message sending

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

To send the message, select **Send**. The phone saves the message in the **Outbox** folder, and the sending starts.



Note: When the phone is sending the message, the animated  is shown. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

If an interruption occurs while the message is being sent, the phone

tries to resend the message a few times. If these attempts fail, the message remains in the *Outbox* folder. To cancel the sending of the messages in the *Outbox* folder, scroll to the desired message, and select **Options** > *Cancel sending*.

Read and reply to a message



Important: Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

1. To view the received message, select **Show**. To view it later, select **Exit**.
2. To view the whole message if the received message contains a presentation, select **Play**.
To view the files in the presentation or the attachments, select **Options** > *Objects* or *Attachments*.
3. To reply to the message, select **Options** > *Reply* and the message type.
4. Create the reply message.

5. To send the message, select **Send**. See "*Message sending*" p. 29.

Flash messages

Flash messages are text messages that are instantly displayed upon reception. Flash messages are not automatically saved.

Write a message

Select **Menu** > *Messaging* > *Create message* > *Flash message*. Enter the recipient's phone number and write your message. The maximum length of a flash message is 70 characters. To insert a blinking text into the message, select **Options** > *Insert blink charact.* to set a marker. The text behind the marker blinks. To end the blinking text range insert a second marker.

Receive a message

A received flash message is indicated with *Message:* and a few words from the beginning of the message. To read the message, select **Read**. To extract numbers and addresses from the current message, select **Options** > *Use detail*. To save the message, select **Save** and the folder in which you want to save it.

■ Nokia Xpress audio messaging

You can use the MMS to create and send a audio message in a convenient way. MMS must be activated before you can use audio messages.

Create a message

1. Select **Menu** > *Messaging* > *Create message* > *Audio message*. The recorder opens. To use the recorder, see "*Voice recorder*" p. 64.
2. Record your message.
3. Enter one or more phone numbers in the *To:* field, or select **Add** to retrieve a number.
4. To send the message, select **Send**.

Listen to a message

To open a received audio message, select **Play**; or if more than one message is received, select **Show** > **Play**. To listen to the message later, select **Exit**.

■ Memory full

When you receive a message, and the memory for the messages is full, *Memory full. Unable to*

receive messages. is shown. To first delete old messages, select **OK** > **Yes** and the folder. Scroll to the desired message, and select **Delete**. If more messages are to be deleted, select **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

■ Folders

The phone saves received messages in the *Inbox* folder.

Messages that have not yet been sent are saved in the *Outbox* folder.

To set the phone to save the sent messages in the *Sent items* folder, see *Save sent messages* in "*General settings*" p. 38.

To edit and send messages that you have written and saved in the *Drafts* folder, select **Menu** > *Messaging* > *Drafts*.

You can move your messages to the *Saved items* folder. To organize your *Saved items* subfolders, select **Menu** > *Messaging* > *Saved items*. To add a folder, select **Options** > *Add folder*. To delete or rename a folder, scroll to the desired folder, and select **Options** > *Delete folder* or *Rename folder*.

Your phone has templates. To create a new template, save a message as a template. To access the template list, select **Menu** > *Messaging* > *Saved items* > *Templates*.

■ E-mail application

The e-mail application uses a packet data connection (network service) to allow you to access your e-mail account. This e-mail application is different from the SMS e-mail function. To use the e-mail function on your phone, you need a compatible e-mail system.

You can write, send, and read e-mail with your phone. Your phone supports POP3 and IMAP4 e-mail servers.

Before you can send and retrieve any e-mail messages, you must obtain a new e-mail account or use your current account. To check the availability of your e-mail account, contact your e-mail service provider.

Check your e-mail settings with your e-mail service provider. You may receive the e-mail configuration settings as a configuration message. See ["Configuration settings service"](#) p. 13.

To activate the e-mail settings, select **Menu** > *Messaging* > *Message settings* > *E-mail messages*. See ["E-mail messages"](#) p. 40.

This application does not support keypad tones.

Setting wizard

The setting wizard will start automatically if no e-mail settings are defined in the phone. To enter the settings manually, select **Menu** > *Messaging* > *E-mail* > **Options** > *Manage accounts* > **Options** > *New*.

The *Manage accounts* options allow you to add, delete, and change the e-mail settings.

Write and send an e-mail

You can write your e-mail message before connecting to the e-mail service; or connect to the service first, then write and send your e-mail.

1. Select **Menu** > *Messaging* > *E-mail* > *Write new e-mail*.
2. If more than one e-mail account is defined, select the account from which you want to send the e-mail.
3. Enter the recipient's e-mail address, write the subject, and

enter the e-mail message. To attach a file from *Gallery*, select **Options** > *Attach file*.

4. To send the e-mail message, select **Send** > *Send now*.

To save the e-mail in the *Outbox* folder to be sent later, select **Send** > *Send later*.

To edit or continue writing your e-mail later, select **Options** > *Save as draft*. The e-mail is saved in *Outboxes* > *Drafts*.

To send the e-mail later, select **Menu** > *Messaging* > *E-mail* > **Options** > *Send e-mail* or *Send/check e-mail*.

Download e-mail

1. To download e-mail messages that have been sent to your e-mail account, select **Menu** > *Messaging* > *E-mail* > *Check new e-mail*.

If more than one e-mail account is defined, select the account from which you want to download the e-mail.

The e-mail application only downloads e-mail headers at first.

2. Select **Back** > *Inboxes*, the account name, and the new message, and select **Retrieve**

to download the complete e-mail message.

To download new e-mail messages and to send e-mail that has been saved in the *Outbox* folder, select **Options** > *Send/check e-mail*.

Read and reply to e-mail



Important: Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device or PC.

1. Select **Menu** > *Messaging* > *E-mail* > *Inboxes*, the account name, and the desired message.
2. To reply to an e-mail, select **Reply** > *Original text* or *Empty message*. To reply to many, select **Options** > *Reply to all*. Confirm or edit the e-mail address and subject; then write your reply.
3. To send the message, select **Send** > *Send now*.

E-mail folders

Your phone saves e-mail that you have downloaded from your e-mail account in the *Inboxes* folder. The *Inboxes* folder contains

the following folders: "Account name" for incoming e-mail, *Archive* for archiving e-mail, *Custom 1–Custom 3* for sorting e-mail, and *Junk* where all spam e-mail is stored. The *Outboxes* folder contains the following folders: *Drafts* for saving unfinished e-mail, *Outbox* for saving e-mail that has not been sent, and *Sent items* for saving e-mail that has been sent.

To manage the folders and their e-mail content, select **Options** to view the available options of each folder.

Spam filter

To activate and define a spam filter, select **Options** > *Spam filter* > *Settings* in the main e-mail idle screen. The spam filter allows you to put specific senders on a black or white list. Black list sender messages are filtered to the *Junk* folder. Unknown and white list sender messages are downloaded into the account inbox. To blacklist a sender, select the e-mail message in the *Inboxes* folder and **Options** > *Blacklist sender*.

■ Instant messaging

With instant messaging (IM) (network service) you can send

short, simple text messages to online users. You have to subscribe to a service and register with the IM service you want to use. For more information about signing up for IM services, contact your service provider.

To set the required settings for the IM service, see *Connection settings* in "Access" p. 34. The icons and texts on the display may vary, depending on the IM service.



Note: Depending on your IM service, you may not have access to all of the features described in this guide.

Access

Select **Menu** > *Messaging* > *IMs*. *IMs* may be replaced by another term depending on the service provider. If more than one set of connection settings for IM service is available, select the one you want. Select from the following options:

Login – to connect to the IM service. To set the phone to automatically connect to the IM service when you switch on the phone; in the login session, select *Automatic login*: > *On*, or select **Menu** > *Messaging* > *IMs*, connect to the IM service, and

select **Options** > *Settings* > *Automatic login* > *On*.

Saved conversations — to view, erase, or rename the conversations that you saved during an IM session

Connection settings — to edit the settings needed for messaging and presence connection

Connect

To connect to the service, access the instant messages menu, select the IM service, if needed, and select *Login*.


To disconnect from the IM service, select **Options** > *Logout*.


Sessions


When connected to the service, your status, as seen by others, is shown in a status line: *My status: Online, My status: Busy* or *Status: Appear off..* To change your own status, select **Change**.


Below the status line there are three folders that contain your contacts and showing their status: *Conversations*, *Online* and *Offline*. To expand the folder, highlight it, and select **Expand** (or scroll right); to collapse the folder, select **Collapse** (or scroll left).


Conversations — shows the list of new and read instant messages or invitations to IM during the active IM session.

 indicates a new group message.

 indicates a read group message.

 indicates a new instant message.

 indicates a read instant message.

 indicates an invitation.

The icons and texts on the display depends on the IM service.

Online — shows the number of contacts that are online

Offline — shows the number of contacts that are offline

To start a conversation, expand the *Online* or the *Offline* folder, scroll to the contact with whom you would like to chat, and select **Chat**. To answer an invitation, or to reply to a message, expand the *Conversations* folder, scroll to the contact to whom you would like to chat, and select **Open**. To add contacts, see "[Add IM contacts](#)" p. 36.

Groups > *Public groups* (not visible if groups are not supported by the network) — The list of bookmarks to public groups

provided by the service provider is displayed. To start a IM session with a group, scroll to a group, and select **Join**. Enter the screen name that you want to use as your nickname in the conversation. When you have successfully joined the group conversation, you can start a group conversation. You can create a private group. See "Groups" p. 37.

Search > Users or Groups — to search for other IM users or public groups on the network by phone number, screen name, e-mail address, or name. If you select **Groups**, you can search for a group by a member in the group, or by group name, topic, or ID.

Options > Chat or Join group — to start the conversation when you have found the user or the group that you want

Accept or reject an invitation

If you receive a new invitation, to read it, select **Read**. If more than one invitation is received, select an invitation and **Open**. To join the private group conversation, select **Accept**, and enter the screen name you want to use as your nickname. To reject or delete the invitation, select **Options > Reject** or **Delete**.


Read an instant message

If you receive a new message that is not a message associated with an active conversation, **New instant message** is displayed. To read it, select **Read**. If more than one message is received, select a message and **Open**.

New messages received during an active conversation are held in **IMs > Conversations**. If you receive a message from someone who is not in **IM contacts**, the sender ID is displayed. To save a new contact that is not in the phone memory, select **Options > Save contact**.

Participate in a conversation

To join or start an IM session, write your message, and select **Send**.

If you receive a new message during a conversation from a person who is not taking part in the current conversation,  is displayed, and the phone sounds an alert tone.

Write your message, and select **Send**. Your message is displayed, and the reply message is displayed below your message.

Add IM contacts

When connected to the IM service, in the IM main menu, select **Options > Add contact > By**

mobile number, Enter ID manually, Search from server, or Copy from server (depending on service provider).

Scroll to a contact. To start a conversation, select **Chat**.

Block or unblock messages

When you are in a conversation and want to block messages, select **Options** > *Block contact*.

To block messages from a specific contact in your contacts list, scroll to the contact in *Conversations*, *Online*, or *Offline*, and select **Options** > *Block contact* > **OK**.

To unblock a contact, in the IM main menu, select **Options** > *Blocked list*. Scroll to the contact you want to unblock, and select **Unblock** > **OK**.

Groups

You can use the public groups provided by the service provider, or create your own private groups for an IM conversation.

Public

You can bookmark public groups that your service provider may maintain. Connect to the IM service, and select *Groups* > *Public groups*. Select a group and **Join**. If you are not in the group, enter

your screen name as your nickname for the group. To delete a group from your list, select **Options** > *Delete group*.

To search for a group, select *Groups* > *Public groups* > *Search groups*.


Private

Connect to the IM service, and from the main menu, select **Options** > *Create group*. Enter the name for the group and the screen name that you want to use as your nickname. Mark the private group members in the contacts list, and write an invitation.

Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information contact your service provider.

To call your voice mailbox, select **Menu** > *Messaging* > *Voice messages* > *Listen to voice msgs..*. To enter, search for, or edit your voice mailbox number, select *Voice mailbox no..*

If supported by the network,  indicates new voice messages. To call your voice mailbox number, select **Listen**.

■ Info messages

You can receive messages on various topics from your service provider (network service). For more information, contact your service provider. Select **Menu** > *Messaging* > *Info messages* and from the available options.

■ Service commands

Write and send service requests (USSD commands) to your service provider, such as activation commands for network services. Select **Menu** > *Messaging* > *Serv. commands*.

■ Delete messages

To delete messages, select **Menu** > *Messaging* > *Delete messages* > *By message* to delete single messages, *By folder* to delete all messages from a folder, or *All messages*.

■ SIM messages

SIM messages are specific text messages that are saved to your SIM card. You can copy or move those messages from the SIM to the phone memory, but not vice versa. To read SIM messages, select **Menu** > *Messaging* > **Options** > *SIM messages*.

■ Message settings

General settings

General settings are common for text and multimedia messages.

Select **Menu** > *Messaging* > *Message settings* > *General settings* and from the following options:

Save sent messages > *Yes* — to set the phone to save the sent messages in the *Sent items* folder
Overwriting in Sent > *Allowed* — to set the phone to overwrite the old sent messages with the new ones when the message memory is full. This setting is shown only if you set *Save sent messages* > *Yes*.

Font size — to select the font size used in messages

Graphical smileys > *Yes* — to set the phone to replace character-based smileys with graphical ones

Text messages

The text message settings affect the sending, receiving, and viewing of text and SMS e-mail messages.

Select **Menu** > *Messaging* > *Message settings* > *Text messages* and from the following options:

Delivery reports > Yes — to ask the network to send delivery reports about your messages (network service)

Message centres > Add centre — to set the phone number and name of the message center that is required for sending text messages. You receive this number from your service provider.

Msg. centre in use — to select the message center in use

E-mail msg. centres > Add centre — to set the phone numbers and name of the e-mail center for sending SMS e-mails.

E-mail centre in use — to select the SMS e-mail message center in use

Message validity — to select the length of time for which the network attempts to deliver your message

Messages sent via — to select the format of the messages to be sent: *Text*, *Paging*, or *Fax* (network service)

Use packet data > Yes — to set GPRS as the preferred SMS bearer

Character support > Full — to select all characters in the messages to be sent as viewed. If you select *Reduced*, characters

with accents and other marks may be converted to other characters.

Rep. via same centre > Yes — to allow the recipient of your message to send you a reply using your message center (network service)

Multimedia messages

The message settings affect the sending, receiving, and viewing of multimedia messages. You may receive the configuration settings for multimedia messaging as a configuration message. See ["Configuration settings service"](#) p. 13. You can also enter the settings manually. See ["Configuration"](#) p. 54.

Select **Menu > Messaging > Message settings > Multimedia messages** and from the following options:

Delivery reports > Yes — to ask the network to send delivery reports about your messages (network service)

Img. size (MMS plus) — to set the image size in multimedia plus messages

Image size (MMS) — to set the image size in multimedia messages

Default slide timing — to define the default time between slides in multimedia messages

Allow MMS receptrn. > *Yes* or *No* — to receive or block the multimedia message. If you select *In home network*, you cannot receive multimedia messages when outside your home network. The default setting of the multimedia message service is generally *In home network*. The availability of this menu depends on your phone.

Incoming MMS msgs. — to allow the reception of multimedia messages automatically, manually after being prompted, or to reject the reception. This setting is not shown if *Allow MMS receptrn.* is set to *No*.

Allow adverts — to receive or reject advertisements. This setting is not shown if *Allow MMS receptrn.* is set to *No*, or *Incoming MMS msgs.* is set to *Reject*.

Configuration sett. >

Configuration — Only the configurations that support multimedia messaging are shown. Select a service provider, *Default*, or *Personal config.* for multimedia messaging. Select *Account* and a MMS account contained in the active configuration settings.

E-mail messages

The settings affect the sending, receiving, and viewing of e-mail. You may receive the settings as a configuration message. See ["Configuration settings service"](#) p. 13. You can also enter the settings manually. See ["Configuration"](#) p. 54.

Select **Menu** > *Messaging* > *Message settings* > *E-mail messages* and from the following options:

Configuration — to select the set that you want to activate

Account — to select an account provided by the service provider

My name — to enter your name or nickname

E-mail address — to enter your e-mail address

Login information — to enter information according to the server type

Incoming mail sett. — to select the maximum number of e-mails to be retrieved

Outgoing sett. (SMTP) — to enter SMTP (simple mail transfer protocol) settings


Displ. term. window > *Yes* — to perform manual user authentication for intranet connections

7. Contacts



You can save names and phone numbers (contacts) in the phone memory and in the SIM card memory.

The phone memory may save contacts with additional details, such as various phone numbers and text items. You can also save an image for a limited number of contacts.

The SIM card memory can save names with one phone number attached to them. The contacts saved in the SIM card memory are indicated by .

■ Search for a contact


Select **Menu** > **Contacts** > **Names**. Scroll through the list of contacts, or enter the first characters of the name you are searching for.

■ Save names and phone numbers

Names and numbers are saved in the used memory. To save a name and phone number, select **Menu** > **Contacts** > **Names** > **Options** > **Add new contact**.

■ Save details

In the phone memory, you can save different types of phone numbers, a tone or a video clip, and short text items for a contact.

The first number you save is automatically set as the default number and is indicated with a frame around the number type indicator (for example, .

When you select a name from contacts (for example, to make a call), the default number is used unless you select another number.

Make sure that the memory in use is *Phone* or *Phone and SIM*. See "Settings" p. 43.

Search for the contact to which you want to add a detail, and select **Details** > **Options** > **Add detail**. Select from the options available.

■ Copy or move contacts

To copy or move a contact from the phone contact memory to the SIM card memory, or vice versa, select **Menu** > **Contacts** > **Names**. Select the contact to copy or move

and **Options** > *Copy contact* or *Move contact*.

To copy or move several contacts, select the first contact to copy or move and **Options** > *Mark*. Mark the other contacts, and select **Options** > *Copy marked* or *Move marked*.

To copy or move all contacts from the phone contact memory to the SIM card memory, or vice versa, select **Menu** > *Contacts* > *Copy contacts* or *Move contacts*.

The SIM card memory can save names with one phone number attached to them.

■ Edit contact details

Search for the contact, and select **Details**. To edit a name, number, or text item or to change the image, select **Options** > *Edit*. To change the number type, scroll to the desired number, and select **Options** > *Change type*. To set the selected number as the default number, select *Set as default*.

■ Synchronize all

Synchronize your calendar, contacts data, and notes with a remote Internet server (network service). For details see "[Synchronize from a server](#)" p. 51.

■ Delete contacts

To delete all the contacts and the details attached to them from the phone or SIM card memory, select **Menu** > *Contacts* > *Del. all contacts* > *From phone memory* or *From SIM card*.

To delete a contact, search for the desired contact, and select **Options** > *Delete contact*.

To delete a number, text item, or an image attached to the contact, search for the contact, and select **Details**. Scroll to the desired detail, and select **Options** > *Delete* and from the options available.

■ Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact whose information you want to send, and select **Details** > **Options** > *Send business card*.

When you have received a business card, select **Show** > **Save** to save the business card in the phone memory. To discard the business card, select **Exit** > **Yes**.

■ Settings

Select **Menu** > *Contacts* > *Settings* and from the following options:

Memory in use — to select the SIM card or phone memory for your contacts. Select *Phone and SIM* to recall names and number from both memories. In that case, when you save names and numbers, they are saved in the phone memory.

Contacts view — to select how the names and numbers in *Contacts* are displayed

Name display — to select whether the contact's first or last name is displayed first

Font size — to set the font size for the list of contacts

Memory status — to view the free and used memory capacity

■ Groups

Select **Menu** > *Contacts* > *Groups* to arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images.

■ Speed dials

To assign a number to a speed-dialing key, select **Menu** > *Contacts* > *Speed dials*, and scroll

to the speed-dialing number that you want.

Select **Assign**, or if a number has already been assigned to the key, select **Options** > *Change*. Select **Search** and the contact you want to assign. If the *Speed dialling* function is off, the phone asks whether you want to activate it. See also *Speed dialling* in "Call" p. 51.

To make a call using the speed-dialing keys, see "Speed dialing" p. 23.

■ Info, service, and my numbers

Select **Menu** > *Contacts* and from one of these submenus:

Info numbers — to call the information numbers of your service provider if the numbers are included on your SIM card (network service)

Service numbers — to call the service numbers of your service provider if the numbers are included on your SIM card (network service)

My numbers — to view the phone numbers assigned to your SIM card, if the numbers are included on your SIM card

8. Call log



The phone registers your missed, received, and dialed calls if the network supports it and the phone is switched on and within the network service area.

To view the information on your calls, select **Menu > Log > Missed calls, Received calls, or Dialed numbers**. To view your recent missed and received calls and the dialed numbers chronologically, select **Call log**. To view the contacts to whom you most recently sent messages, select **Msg. recipients**.

To view the approximate information on your recent communications, select **Menu > Log > Call duration, Data counter, or Pack. data timer**.

To view how many text and multimedia messages you have sent and received, select **Menu > Log > Message log**.



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

Some timers may be reset during service or software upgrades.

■ Location information

The network may send you a location request (network service). Contact your service provider to subscribe and to agree upon the delivery of location information.

To accept or reject the location request, select **Accept** or **Reject**. If you miss the request, the phone automatically accepts or rejects it according to what you have agreed with your network operator or service provider. The phone displays **1 missed position request**. To view the missed location request, select **Show**.

To view the information on the 10 most recent privacy notifications and requests or to delete them, select **Menu > Log > Positioning > Position log > Open folder** or **Delete all**.

9. Settings



■ Profiles

Your phone has various setting groups called profiles, for which you can customize the phone tones for different events and environments.

Select **Menu** > **Settings** > **Profiles**, the desired profile and from the following options:

Activate — to activate the selected profile

Personalise — to personalize the profile. Select the setting you want to change, and make the changes.

Timed — to set the profile to be active until a certain time (up to 24 hours) and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active.

■ Themes

A theme contains elements for personalizing your phone.

Select **Menu** > **Settings** > **Themes** and from the following options:

Select theme — to set a theme. A list of folders in **Gallery** opens.

Open the **Themes** folder, and select a theme.

Theme downloads — to open a list of links to download more themes

■ Tones

You can change the tone settings of the selected active profile.

Select **Menu** > **Settings** > **Tones**. You can find the same settings in the **Profiles** menu. See **Personalise** in "Profiles" p. 45.

To set the phone to ring only for calls from phone numbers that belong to a selected caller group, select **Alert for**. Scroll to the caller group you want or **All calls**, and select **Mark**.

Select **Options** > **Save** to save the settings or **Cancel** to leave the settings unchanged.

If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

■ Display

Select **Menu** > **Settings** > **Display** and from the available options:

Wallpaper — to add the background image in the standby mode

Active standby — to switch the active standby mode on or off and to organize and personalize the active standby mode

Standby font colour — to select the color for the texts in the standby mode

Navigation key icons — to display the icons of the current scroll key shortcuts in the standby mode when active standby is off

Swivel animation — to set your phone to display an animation and sound a tone when you open and close the phone depending on the theme

Screen saver > On — to set your phone to display a screen saver. To download more screen savers, select **Graphic downloads**. To set the time after which the screen saver is activated, select **Time-out**.

Power saver — to save some battery power. The date and a digital clock are displayed when no function of the phone is used for a certain time.

Sleep mode — to save some battery power. The display turns completely black when no

function of the phone is used for a certain time.

Font size — to set the font size for messaging, contacts, and web pages

Operator logo — to set your phone to display or hide the operator logo

Cell info display > On — to display the cell identity, if available from the network

■ Time and date

To change the clock type, time, time zone, and date settings, select **Menu > Settings > Time and date > Time, Date, or Auto-update of time** (network service).

When traveling to a different time zone, select **Menu > Settings > Time and date > Time > Time zone** and the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

Use for India (New Delhi) GMT +5.5, for Thailand/Indonesia/Vietnam GMT +7, for Singapore/Malaysia/Philippines GMT +8, for Australia (Sydney) GMT +10, and for New Zealand GMT +12.

■ My shortcuts

With personal shortcuts you get quick access to often used functions of the phone.

Left selection key

To select a function from the list, select **Menu** > **Settings** > **My shortcuts** > **Left selection key**.

If the left selection key is **Go to** to activate a function, in the standby mode, select **Go to** > **Options** and from the following options:

Select options — to add a function to the shortcut list or to remove one

Organise — to rearrange the functions on your personal shortcut list

Right selection key


To select a function from the list, select **Menu** > **Settings** > **My shortcuts** > **Right selection key**.

Navigation key

To assign other phone functions from a predefined list to the navigation key (scroll key), select **Menu** > **Settings** > **My shortcuts** > **Navigation key**.

Voice commands

To call contacts and carry out phone functions, say the voice commands. Voice commands are language-dependent. To set the language, see **Recognition lang.** in **"Phone"** p. 52.

To select the phone functions to activate with a voice commands, select **Menu** > **Settings** > **My shortcuts** > **Voice commands** and a folder. Scroll to a function.  indicates that the voice tag is activated. To activate the voice tag, select **Add**. To play the activated voice command, select **Play**. To use voice commands, see **"Enhanced voice dialing"** p. 23.

To manage the voice commands, scroll to a phone function, and select from the following options:

Edit or **Remove** — to change or deactivate the voice command of the selected function

Add all or **Remove all** — to activate or deactivate voice

commands to all functions in the voice commands list

■ Connectivity

You can connect the phone to a compatible device using a Bluetooth wireless technology or a USB data cable connection. You can also define the settings for EGPRS dial-up connections.

Bluetooth wireless technology

This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: generic access, network access, generic object exchange, hands-free, headset, object push, file transfer, dial-up networking, SIM access, and serial port. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.


Features using Bluetooth technology or allowing such features to run in the background

while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters (32 feet). Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of-sight, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

Set up a Bluetooth connection

Select **Menu** > *Settings* > *Connectivity* > *Bluetooth* and from the following options:

Bluetooth > *On* or *Off* — to activate or deactivate the Bluetooth function.  indicates that Bluetooth is activated.

Search audio enhanc. — to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.

Paired devices — to search for any Bluetooth device in range. Select **New** to list any Bluetooth device in range. Select a device and **Pair**. Enter an agreed Bluetooth passcode of the device (up to 16

characters) to pair the device to your phone. You must only give this passcode when you connect to the device for the first time. Your phone connects to the device, and you can start data transfer.

Bluetooth wireless connection

Select **Menu** > *Settings* > *Connectivity* > *Bluetooth*. To check which Bluetooth connection is currently active, select *Active devices*. To view a list of Bluetooth devices that are currently paired with the phone, select *Paired devices*.

Bluetooth settings

To define how your phone is shown to other Bluetooth devices, select **Menu** > *Settings* > *Connectivity* > *Bluetooth* > *My phone's visibility* or *My phone's name*.

If you are concerned about security, turn off the Bluetooth function, or set **My phone's visibility** to **Hidden**. Always accept only Bluetooth communication from others with whom you agree.

Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and

receive data over an Internet protocol (IP)based network.

To define how to use the service, select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data conn.* and from the following options:

When needed — to set the packet data connection to established when an application needs it. The connection will be closed when the application is terminated.

Always online — to set the phone to automatically connect to a packet data network when you switch the phone on

Modem settings

You can connect the phone using Bluetooth wireless technology or USB data cable connection to a compatible PC and use the phone as a modem to enable GPRS connectivity from the PC.

To define the settings for connections from your PC, select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data settings* > *Active access point*, and activate the access point you want to use. Select *Edit active access pt.* > *Alias for access point*, enter a name to change the access point settings, and select **OK**. Select *Packet data acc. pt.*, enter the access point name (APN)

to establish a connection to a network, and select **OK**.

You can also set the EGPRS dial-up service settings (access point name) on your PC using Nokia PC Suite. See "[Nokia PC Suite](#)" p. 78. If you have set the settings both on your PC and on your phone, the PC settings are used.

Data transfer

Synchronize your calendar, contacts data, and notes with another compatible device (for example, a mobile phone), a compatible PC, or a remote Internet server (network service).

Your phone allows data transfer with a compatible PC or another compatible device when using the phone without a SIM card.

Transfer contact list

To copy or synchronize data from your phone, the name of the device and the settings must be in the list of transfer contacts. If you receive data from another device (for example, a compatible mobile phone), the corresponding transfer contact is automatically added to the list, using the contact data from the other device. *Server sync* and *PC synchronisation* are the original items in the list.

To add a new transfer contact to the list (for example, a mobile phone), select **Menu** > *Settings* > *Connectivity* > *Data transfer* > **Options** > *Add transfer contact* > *Phone synchronisation* or *Phone copy*, and enter the settings according to the transfer type.

To edit the copy and synchronize settings, select a contact from the transfer contact list and **Options** > *Edit*.

To delete a transfer contact, select it from the transfer contact list and **Options** > *Delete*.

Data transfer with a compatible device

For synchronization, use Bluetooth wireless technology or a cable connection. The other device must be activated for receiving data.

To start data transfer, select **Menu** > *Settings* > *Connectivity* > *Data transfer* and the transfer contact from the list other than *Server sync* or *PC synchronisation*.

According to the settings, the selected data is copied or synchronized.

Synchronize from a compatible PC

To synchronize data from calendar, notes, and contacts, install the Nokia PC Suite software of your

phone on the PC. Use Bluetooth wireless technology or a USB data cable for the synchronization, and start the synchronization from the PC.

Synchronize from a server

To use a remote Internet server, subscribe to a synchronization service. For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message. See "[Configuration settings service](#)" p. 13 and "[Configuration](#)" p. 54.

To start the synchronization from your phone, select **Menu** > *Settings* > *Connectivity* > *Data transfer* > *Server sync*. Depending on the settings, select *Initialising synchronisation* or *Initialising copy*.

Synchronizing for the first time or after an interrupted synchronization may take up to 30 minutes to complete.

USB data cable

You can use the USB data cable to transfer data between the phone and a compatible PC or a printer supporting PictBridge. You can also use the USB data cable with Nokia PC Suite.

To activate the phone for data transfer or image printing, connect the data cable. Confirm *USB data cable connected. Select mode.* and select from the following options:

Nokia mode — to use the cable for PC Suite

Printing & media — to use the phone with a PictBridge compatible printer or with your compatible PC

Data storage — to connect to a PC that does not have Nokia software and use the phone as a data storage device

To change the USB mode, select **Menu** > *Settings* > *Connectivity* > *USB data cable* > *Nokia mode*, *Printing & media*, or *Data storage*.

■ Call

Select **Menu** > *Settings* > *Call* and from the following options:

Call divert — to divert your incoming calls (network service). You may not be able to divert your calls if some call barring functions are active. See *Call barring service* in "[Security](#)" p. 54.

Voice clarity > *Active* — to enhance speech intelligibility especially in noisy environments

Anykey answer > *On* — to answer an incoming call by briefly pressing any key, except the power key, the camera key, the left and right selection keys, or the end key

Automatic redial > *On* — to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt

Speed dialling > *On* — to dial the names and phone numbers assigned to the speed-dialing keys 2 to 9 by pressing and holding the corresponding number key

Call waiting > *Activate* — to have the network notify you of an incoming call while you have a call in progress (network service). See "Call waiting" p. 24.

Summary after call > *On* — to briefly display the approximate duration and cost (network service) of the call after each call

Send my caller ID > *Yes* — to show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select *Set by network*.

Outgoing call line — to select the phone line 1 or 2 for making calls if supported by your SIM card (network service).

Swivel call handling — to set the phone to answer calls when you open the phone and to end calls when you close the phone

■ Phone

Select **Menu** > *Settings* > *Phone* and from the following options:

Language settings — To set the display language of your phone, select *Phone language*.

Automatic selects the language according to the information on the SIM card. To select the USIM card language, select *SIM language*. To set a language for voice commands, select

Recognition lang.

Security keyguard — to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select *On*.

Automatic keyguard — to lock the keypad automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used. Select *On*, and set the time.

Welcome note — to write the note that is shown when the phone is switched on

Flight query > *On* — The phone asks every time when it is switched

on whether the flight profile shall be used. With flight profile all radio connections are switched off. The flight profile should be used in areas sensitive to radio emissions.

Phone updates — to receive phone software updates from your service provider (network service). This option may not be available, depending on your phone. See "Phone software updates" p. 55.

Operator selection > Automatic — to set the phone to automatically select one of the cellular networks available in your area. With *Manual* you can select a network that has a roaming agreement with your service provider.

Confirm SIM actions — See "SIM services" p. 77.

Help text activation — to select whether the phone shows help texts.

Start-up tone > On — The phone plays a tone when it is switched on.

■ Enhancements

This menu or the following options are shown only if the phone is or has been connected to a compatible mobile enhancement.


Select **Menu > Settings > Enhancements**. Select an enhancement, and depending on the enhancement, from the following options:

Default profile — to select the profile that you want to be automatically activated when you connect to the selected enhancement

Automatic answer — to set the phone to answer an incoming call automatically after 5 seconds. If *Incoming call alert* is set to *Beep once* or *Off*, automatic answer is off.

Lights — to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a key press.

Text phone > Use text phone > Yes — to use the text phone settings instead of headset or loopset settings

If your phone is provided with a hearing aid coil, select *Hearing aid > T-coil hrng. aid mode > On* to optimize the sound quality when using a t-coil hearing aid. The  icon is shown when the *T-coil hrng. aid mode* is active.

■ Configuration

You can configure your phone with settings that are required for certain services to function correctly. Your service provider may also send you these settings. See "[Configuration settings service](#)" p. 13.

Select **Menu** > *Settings* > *Configuration* and from the following options:

Default config. sett. — to view the service providers saved in the phone. To set the configuration settings of the service provider as default settings, select **Options** > *Set as default*.

Activ. def. in all apps. — to activate the default configuration settings for supported applications

Preferred access pt. — to view the saved access points. Scroll to an access point, and select **Options** > *Details* to view the name of the service provider, data bearer, and packet data access point or GSM dial-up number.

Connect to support — to download the configuration settings from your service provider

Device manager sett. — to allow or prevent the phone from receiving phone software updates. This option may not be available,

depending on your phone. See "[Phone software updates](#)" p. 55.

Personal config. sett. — to add new personal accounts for various services manually and to activate or delete them. To add a new personal account if you have not added any, select **Add**; otherwise, select **Options** > *Add new*. Select the service type, and select and enter each of the required parameters. The parameters differ according to the selected service type. To delete or activate a personal account, scroll to it, and select **Options** > *Delete* or *Activate*.

■ Security

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialing) calls still may be possible to the official emergency number programmed into your device.

Select **Menu** > *Settings* > *Security* and from the following options:

PIN code request and *UPIN code request* — to set the phone to ask for your PIN or UPIN code every time the phone is switched on. Some SIM cards do not allow the code request to be turned off.

PIN2 code request — to select whether the PIN2 code is required when using a specific phone feature which is protected by the PIN2 code. Some SIM cards do not allow the code request to be turned off.

Call barring service — to restrict incoming calls to and outgoing calls from your phone (network service). A barring password is required.

Fixed dialling — to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card. When the fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message center number must be included in the fixed dialling list.

Closed user group — to specify a group of people whom you can call and who can call you (network service)

Security level > Phone — to set the phone to ask for the security code whenever a new SIM card is inserted into the phone. If you select **Memory**, the phone asks for the security code when the SIM card memory is selected, and you

want to change the memory in use.

Access codes — to change the security code, PIN code, UPIN code, PIN2 code, or barring password

Code in use — to select whether the PIN code or UPIN code should be active

Authority certificates or **User certificates** — to view the list of the authority or user certificates downloaded into your phone. See "**Certificates**" p. 75.

Security module sett. — to view **Secur. module details**, activate **Module PIN request**, or change the module PIN and signing PIN. See also "**Access codes**" p. 13.

■ Restore factory settings

To reset some of the menu settings to their original values, select **Menu > Settings > Rest. factory sett.** Enter the security code. The names and phone numbers saved in **Contacts** are not deleted.

■ Phone software updates

Your service provider may send phone software updates over the air directly to your device (network

service). This option may not be available, depending on your phone.



Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the update is completed and the device is restarted. Be sure to backup data before accepting a software update.

Settings

To allow or disallow phone software updates, select **Menu** > *Settings* > *Configuration* > *Device manager sett.* > *Serv. softw. updates* and following options:

Always allow — to perform all software downloads and updates automatically

Always reject — to reject all software updates

Confirm first — to perform software downloads and updates only after your confirmation (default setting)

Request a software update

Select **Menu** > *Settings* > *Phone* > *Phone updates* to request available phone software updates

from your service provider. Select *Current softw. details* to display the current software version and check whether an update is needed. Select *Downl. phone softw.* to download and install a phone software update. Follow the instructions on the display.

Install a software update

Select *Install softw. update* to start the installation, when the installation was cancelled after the download.

The software update may take several minutes. If there are problems with the installation, contact your service provider.

10. Operator menu

This menu lets you access a portal to services provided by your network operator. The name and the icon depend on the operator. For more information contact your network operator. The operator can update this menu with a service message. For more information, see "[Service inbox](#)" p. 74.

11. Gallery



In this menu you can manage images, video clips, music files, themes, graphics, tones, recordings, and received files. These files are stored in the phone memory or an attached microSD memory card and may be arranged in folders.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

To see the list of folders, select **Menu** > **Gallery**.

To see the available options of a folder, select a folder and **Options**.

To view the list of files in a folder, select a folder and **Open**.

To see the available options of a file, select a file and **Options**.

To view the folders of the memory card when moving a file, scroll to

the memory card, and press the scroll key right.

■ Print images

XpressPrint

Your device supports Nokia XpressPrint. To connect it to a compatible printer use a data cable or send the image using Bluetooth to a printer supporting Bluetooth technology. See "**Connectivity**" p. 48.

You can print images that are in the JPEG format. The images taken with the camera are automatically saved in the JPEG format.

Select the image you want to print and **Options** > **Print**.

■ Memory card

Keep all memory cards out of the reach of small children.

You can use the microSD memory card to store your multimedia files such as video clips, music tracks, and sound files, images, and messaging data.


Some of the folders in **Gallery** with content that the phone uses (for

example, Themes) may be stored on the memory card.

To insert and remove the microSD memory card, see "[Insert a microSD card](#)" p. 15.

Format the memory card

When a memory card is formatted, all data on the card is permanently lost. Some memory cards are supplied preformatted and others require formatting. Consult your retailer to find out if you must format the memory card before you can use it.

To format a memory card, select **Menu** > *Gallery* or *Applications*, the memory card folder , and **Options** > *Format memory card* > **Yes**.

When formatting is complete, enter a name for the memory card.

Lock the memory card

To set a password to lock your memory card to help prevent unauthorized use, select **Options** > *Set password*. The password can be up to eight characters long.

The password is stored in your phone, and you do not have to enter it again while you are using the memory card on the same phone. If you want to use the

memory card on another phone, you are asked for the password. To delete the password, select **Options** > *Delete password*.

Check memory consumption

To check the memory consumption of different data groups and the available memory for installing new applications or software on your memory card, select **Options** > *Details*.

12. Media



When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others including copyrights.

 
■ Camera and video

You can take images or record video clips with the built-in camera.

Take an image

To have the still image function, press the camera key in the standby mode, select **Menu** > **Media** > **Camera**, or if the video function is on, scroll left or right.

To take an image in landscape format, hold the phone in a horizontal position. To zoom in and out in the camera mode, press the scroll key up and down or the volume keys.



To take an image, select **Capture**, or press the camera key. The phone

saves the images on the memory card.

Select **Options** to set **Night mode on** if the lighting is dim, **Self-timer on** to activate the self-timer, or **Img. sequence on** to take images in a fast sequence. With the highest image size setting, three images are taken in a sequence; with other size settings, five images are taken.

Select **Options** > **Settings** > **Image preview time** and a preview time to display captured. During the preview time, select **Back** to take another image or **Send** to send the image as a multimedia message.

Your device supports an image capture resolution of 1200 x 1600 pixels. The image resolution in these materials may appear different.

Record a video clip

To have the video function, press and hold the camera key in the standby mode, and select **Menu** > **Media** > **Video** or if the camera function is on, scroll left or right. To start the video recording, select

Record. To pause the recording, select **Pause**; to resume the recording, select **Continue**; to stop the recording, select **Stop**. The phone saves the video clips on the memory card or the phone memory.

Camera and video options

To use a filter, select **Options** > *Effects* > *False colours*, *Greyscale*, *Sepia*, *Negative*, or *Solarise*.

To adopt the camera to the light conditions, select **Options** > *White balance* > *Auto*, *Daylight*, *Tungsten* or *Fluorescent*.

To change other camera and video settings and to select the image and video storage select **Options** > *Settings*.

Media player

With the media player you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service).

Select **Menu** > *Media* > *Media player* > *Open gallery*, *Bookmarks*, *Go to address*, or *Media downloads* to select or download media.

Select **Menu** > *Media* > *Media player* > *FF/Rew interval* to set the step width for fast forward or rewind.

Configuration for a streaming service

You may receive the configuration settings required for streaming as a configuration message from the service provider. See

"[Configuration settings service](#)"

p. 13. You can also enter the settings manually. See "[Configuration](#)" p. 54. To activate the settings, do the following:

1. Select **Menu** > *Media* > *Media player* > *Streaming settings* > *Configuration*.
2. Select a service provider, *Default*, or *Personal config.* for streaming.
3. Select *Account* and a streaming service account contained in the active configuration settings.

Music player

Your phone includes a music player for listening to music tracks or other MP3 or AAC sound files that you have downloaded from the Web or transferred to the

phone with Nokia PC Suite. See "[Nokia PC Suite](#)" p. 78.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

Music files stored in the music folder in the phone memory or on the memory card will automatically be detected and added to the music library during the startup of the phone.

To open the music player, select **Menu** > **Media** > **Music player**.

Playing the music tracks



Warning! Listen to music at a moderate level.

Continuous exposure to high volume may damage your hearing.

Operate the music player with the virtual keys on the display.

When you open the Music player menu, the details of the first track on the default track list are shown.

To start playing, select **▶**.

To adjust the volume level, use the volume keys on the side of the phone.

To pause the playing, select **⏸**.

To skip to the next track, select **⏭**. To skip to the beginning of the previous track, select **⏮**.

To rewind the current track, select and hold **⏮**. To fast forward the current track, select and hold **⏭**. Release the key at the position you want.

To stop the music player, select **Back**.

Music player options

In the **Music player** menu, select from the following options:

Show tracks – View all available tracks of the active track list and play the desired track. To play a track, scroll to the desired track, and select **Play**.

Music library – View all available tracks ordered according to **Artists**, **Albums**, **Genres**, **Composers**, or **Track lists**. Select **Update library** to refresh the lists. Track lists generated with the Nokia Music Manager you will find under **Track lists** > **My track lists**.

Play options – Select **Random** to play the tracks on the track list in random order. Select **Repeat** to play the current track or the entire track list repeatedly.

Media equaliser – to select or define an equalizer setting

Add to Favourites — to add the current track to the favorite track list

Play via Bluetooth — to connect and play the tracks on an audio accessory using Bluetooth technology

Use tone — Set the currently played music track, for example, as a ringing tone.

Send — to send the current track by a multimedia message or using Bluetooth technology

Web page — to access a Web page associated with the currently played track

Music downloads — to connect to a Web service

Memory status — to view the free and used memory capacity

■ Radio

The FM radio depends on an antenna other than the wireless device's antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear

when the loudspeaker is in use, because the volume may be extremely loud.

Select **Menu** > **Media** > **Radio**.

To use the graphical keys ▲, ▼, ◀, or ▶ on the display, scroll left or right to the desired key, and select it.

Save radio frequencies

1. To start the search, select and hold ◀ or ▶. To change the radio frequency in 0.05 MHz steps, briefly press ◀ or ▶.
2. To save a frequency to a memory location, 1 to 9, press and hold the corresponding number key. To save a frequency to a memory location from 10 to 20, press briefly 1 or 2, and press and hold the desired number key, 0 to 9.
3. Enter the name of the radio station.

Listen to the radio

Select **Menu** > **Media** > **Radio**. To scroll to the desired frequency, select ▲ or ▼, or press the headset key. To select a radio station, briefly press the corresponding number keys. To

adjust the volume, press the volume keys.

Select from the following options:

Switch off – to turn off the radio

Loudspeaker or *Headset* – to listen to the radio using the loudspeaker or headset. Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

Mono output or *Stereo output* – to listen to the radio in monophonic sound or in stereo

Stations – to select the list of saved stations. To delete or rename a station, scroll to the desired station, and select

Options > *Delete station* or *Rename*.

Search all stations – to search automatically the available stations at your location

Set frequency – to enter the frequency of the desired radio station

Station directory – to access a Web site with a list of radio stations

When an application using a packet data or HSCSD connection is sending or receiving data, it may interfere with the radio.




Voice recorder




You can record pieces of speech, sound, or an active call, and save them in *Gallery*. This is useful when recording a name and phone number to write down later.

The recorder cannot be used when a data call or GPRS connection is active.

Record sound

1. Select **Menu** > *Media* > *Voice recorder*.

To use the graphical keys , , or  on the display, scroll left or right to the desired key, and select it.

2. To start the recording, select . To start the recording during a call, select **Options** > *Record*. While recording a call, all parties to the call hear a faint beeping. When recording a call, hold the phone in the normal position near to your ear. To pause the recording, select .
3. To end the recording, select . The recording is saved in *Gallery* > *Recordings*.
To listen to the latest recording, select **Options** > *Play last recorded*.

To send the last recording, select **Options** > *Send last recorded*.

To see the list of recordings in *Gallery*, select **Options** > *Recordings list* > *Recordings*.

■ Equalizer

You can control the sound quality when using the music player by amplifying or diminishing frequency bands.

Select **Menu** > *Media* > *Equaliser*.

To activate a set, scroll to one of the equalizer sets, and select **Activate**.

To view, edit, or rename a selected set, select **Options** > *View*, *Edit*, or *Rename*. Not all sets can be edited or renamed.

■ Stereo widening

Stereo widening enhances the audio output of the phone by enabling a wider stereo sound effect. To change the setting, select **Menu** > *Media* > *Stereo widening*.

13. Organizer



■ Alarm clock

You can set the phone to alarm at a desired time. Select **Menu** > *Organiser* > *Alarm clock*.

To set the alarm, select *Alarm time*, and enter the alarm time. To change the alarm time when the alarm time is set, select *On*.

To set the phone to alert you on selected days of the week, select *Repeat alarm*.

To select the alarm tone or set the radio as the alarm tone, select *Alarm tone*. If you select the radio as an alarm tone, connect the headset to the phone.

To set a snooze time-out, select *Snooze time-out* and the time.

Stop the alarm

The phone sounds an alert tone, and flashes *Alarm!* and the current time on the display, even if the phone was switched off. To stop the alarm, select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the time you set in *Snooze time-out*, then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.

■ Calendar





Select **Menu** > *Organiser* > *Calendar*.

The current day is indicated by a frame. If there are any notes set for the day, the day is in bold type, and the beginning of the note is shown below the calendar. To view the day notes, select **View**. To view a week, select **Options** > *Week view*. To delete all notes in the calendar, select the month or week view, and select **Options** > *Delete all notes*.


In *Settings* you can set the date, time, time zone, date or time format, date separator, default view, or the first day of the week.

In *Auto-delete notes* you can set the phone to delete old notes automatically after a specified time.

Make a calendar note

Select **Menu** > *Organiser* > *Calendar*. Scroll to the date, and select **Options** > *Make a note* and one of the following note types: *Meeting*,  *Call*,  *Birthday*,  *Memo*, or  *Reminder*. Fill in the fields.

Note alarm

The phone displays the note and if set, sounds a tone. With a call note  on the display, to call the displayed number, press the call key. To stop the alarm and to view the note, select **View**. To stop the alarm for 10 minutes, select **Snooze**.

To stop the alarm without viewing the note, select **Exit**.

■ To-do list

To save a note for a task that you must do, select **Menu** > *Organiser* > *To-do list*.

To make a note if no note is added, select **Add**; otherwise, select **Options** > *Add*. Fill in the fields, and select **Save**.

To view a note, scroll to it, and select **View**. While viewing a note, you can also select an option to edit the attributes. You can also select an option to delete the selected note and delete all the notes that you have marked as done.

■ Notes

To write and send notes, select **Menu** > *Organiser* > *Notes*.

To make a note if no note is added, select **Add**; otherwise, select **Options** > *Make a note*. Write the note, and select **Save**.

■ Calculator

The calculator in your phone provides basic arithmetic and trigonometric functions, calculates the square and the square root, the inverse of a number, and converts currency values.



Note: This calculator has limited accuracy and is designed for simple calculations.

Select **Menu** > *Organiser* > *Calculator*. Press # for a decimal point. Scroll to the desired operation or function, or select it from the **Options**.

To save the exchange rate, select **Options** > *Exchange rate*.

■ Countdown timer

To start the countdown timer, select **Menu** > *Organiser* > *Countd. timer* > *Normal timer*, enter the alarm time, and write a note that will be displayed when the time expires. To start the countdown timer, select **Start**. To change the countdown time, select *Change time*. To stop the timer, select *Stop timer*.

To have an interval timer with up to 10 intervals started, enter the intervals. Select **Menu** > *Organiser* > *Countd. timer* > *Interval timer*. To start the timer, select *Start timer* > **Start**.

■ Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press the end key.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Select **Menu** > *Organiser* > *Stopwatch* and from the following options:

Split timing – to take intermediate times. To start the time observation, select **Start**. Select **Split** every time that you want to take an intermediate time. To stop the time observation, select **Stop**.

To save the measured time, select **Save**.

To start the time observation again, select **Options** > *Start*. The new time is added to the previous time. To reset the time without saving it, select *Reset*.

Lap timing – to take lap times
Continue – to view the timing that you have set in the background

Show last – to view the most recently measured time if the stopwatch is not reset

View times or *Delete times* – to view or delete the saved times

14. Applications



In this menu you can manage applications and games. These files are stored in the phone memory or an attached microSD memory card and may be arranged in folders.

For options to format or lock and unlock the memory card see "[Memory card](#)" p. 58.

■ Launch a game

Your phone software includes some games.

Select **Menu** > *Applications* > *Games*. Scroll to the desired game, and select **Open**.

To set sounds, lights, and shakes for the game, select **Menu** > *Applications* > **Options** > *Application settings*. For more options, see "[Application options](#)" p. 69.

■ Launch an application

Your phone software includes some Java applications.

Select **Menu** > *Applications* > *Collection*. Scroll to an application, and select **Open**.

■ Application options

Update version — to check if a new version of the application is available for download from *Web* (network service)

Application access — to restrict the application from accessing the network

Web page — to provide further information or additional data for the application from an Internet page (network service), if available

■ Download an application

Your phone supports J2ME Java applications. Make sure that the application is compatible with your phone before downloading it.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications and games in different ways.

Use the Nokia Application Installer from PC Suite to download the applications to your phone, or select **Menu** > *Applications* > **Options** > *Downloads* > *App. downloads*; the list of available bookmarks is shown. See ["Bookmarks"](#) p. 72.

For the availability of different services, pricing, and tariffs, contact your service provider.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

15. Web



You can access various mobile Internet services with your phone browser.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, tariffs, and instructions with your service provider.

With the phone browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size. You may not be able to view all details of the Internet pages.

■ Set up browsing

You may receive the configuration settings required for browsing as a configuration message from the service provider that offers the service that you want to use. See "[Configuration settings service](#)" p. 13. You can also enter all the

configuration settings manually. See "[Configuration](#)" p. 54.

■ Connect to a service

Ensure that the correct configuration settings of the service are activated.

1. To select the settings for connecting to the service, select **Menu** > **Web** > **Settings** > **Configuration sett.**
2. Select **Configuration**. Only the configurations that support browsing service are shown. Select a service provider, **Default**, or **Personal config.** for browsing. See "[Set up browsing](#)" p. 71.
3. Select **Account** and a browsing service account contained in the active configuration settings.
4. Select **Displ. term. window** > **Yes** to perform manual user authentication for intranet connections.

Make a connection to the service in one of the following ways:

- Select **Menu** > **Web** > **Home**.

- To select a bookmark of the service, select **Menu** > *Web* > *Bookmarks*.
- To select the last URL, select **Menu** > *Web* > *Last web addr.*
- To enter the address of the service, select **Menu** > *Web* > *Go to address*. Enter the address of the service, and select **OK**.

■ Browse pages

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Browse with phone keys

To browse through the page, scroll in any direction.

To select an item, press the call key, or select **Select**.

To enter letters and numbers, press the 0 to 9 keys. To enter special characters, press *****.

Direct calling

While browsing, you can make a phone call, and save a name and a phone number from a page.

■ Bookmarks

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select **Options** > *Bookmarks*; or in the standby mode, select **Menu** > *Web* > *Bookmarks*.
2. Scroll to a bookmark, and select it; or press the call key to make a connection to the page associated with the bookmark.
3. Select **Options** to view, edit, delete, or send the bookmark; to create a new bookmark; or to save the bookmark to a folder.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receive a bookmark

When you have received a bookmark that is sent as a bookmark, *1 bookmark received* is displayed. To view the bookmark, select **Show**.

■ Appearance settings

While browsing, select **Options** > *Other options* > *Appearance settings*; or in the standby mode, select **Menu** > *Web* > *Settings* > *Appearance settings* and from the following options:

Text wrapping — to select how the text shall appear on the display

Font size — to set the font size

Show images > *No* — to hide images on the page

Alerts > *Alert for unsec. conn.* > *Yes* — to set the phone to alert when a secure connection changes to an unsecure one during browsing

Alerts > *Alert for unsec. items* > *Yes* — to set the phone to alert when a secure page contains an unsecure item. These alerts do not guarantee a secure connection. For more information, see "[Browser security](#)" p. 75.

Character encoding > *Content encoding* — to select the encoding for the browser page content

Character encoding > *Unicode (UTF-8) addr.* > *On* — to set the phone to send a URL as a UTF-8 encoding

Screen size > *Full* or *Small* — to set the screen layout

JavaScript > *Enable* — to enable the Java scripts

■ Security settings

Cookies

A cookie is data that a site saves in the cache memory of your phone. Cookies are saved until you clear the cache memory. See "[Cache memory](#)" p. 74.

While browsing, select **Options** > *Other options* > *Security* > *Cookie settings*; or in the standby mode, select **Menu** > *Web* > *Settings* > *Security settings* > *Cookies*. To allow or prevent the phone from receiving cookies, select *Allow* or *Reject*.

Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.

While browsing, to allow the scripts, select **Options** > *Other options* > *Security* > *WMLScript settings*; or in the standby mode, select **Menu** > *Web* > *Settings* > *Security settings* > *WMLScripts in conn.* > *Allow*.

■ Download settings

To automatically save all downloaded files in *Gallery*, select **Menu** > *Web* > *Settings* > *Downloading sett.* > *Automatic saving* > *On*.

■ Service inbox

The phone is able to receive service messages sent by your service provider (network service). Service messages are notifications (for example, news headlines), and they may contain a text message or an address of a service.

To access the *Service inbox* in the standby mode, when you have received a service message, select **Show**. If you select **Exit**, the message is moved to the *Service inbox*. To access the *Service inbox* later, select **Menu** > *Web* > *Service inbox*.

To access the *Service inbox* while browsing, select **Options** > *Other options* > *Service inbox*. Scroll to the message you want, and to activate the browser and download the marked content, select **Retrieve**. To display detailed information on the service notification or delete the message, select **Options** > *Details* or *Delete*.

Service inbox settings

Select **Menu** > *Web* > *Settings* > *Service inbox sett.*

To set whether you want to receive service messages, select *Service messages* > *On* or *Off*.

To set the phone to receive service messages only from content authors approved by the service provider, select *Message filter* > *On*. To view the list of the approved content authors, select *Trusted channels*.

To set the phone to automatically activate the browser from the standby mode when the phone has received a service message, select *Autom. connection* > *On*. If you select *Off*, the phone activates the browser only after you select **Retrieve** when the phone has received a service message.

■ Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache while browsing, select **Options** > *Other*

options > *Clear the cache*; in the standby mode, select **Menu** > *Web* > *Clear the cache*.

■ Browser security

Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider.

To view or change the security module settings, select **Menu** > *Settings* > *Security* > *Security module sett..*

Certificates




Important: Even if the use of certificates makes the risks involved in remote

connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct. Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are three kinds of certificates: server certificates, authority certificates, and user certificates. You may receive these certificates from your service provider. Authority certificates and

user certificates may also be saved in the security module by the service provider.

To view the list of the authority or user certificates downloaded into your phone, select **Menu > Settings > Security > Authority certificates** or **User certificates**.

 is displayed during a connection, if the data transmission between the phone and the content server is encrypted.


The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Digital signature

You can make digital signatures with your phone if your SIM card has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page (for example, the title of the book you want to buy and its price). The text to sign is

shown, which may include the amount and date.

Check that the header text is **Read** and that the digital signature icon  is shown.

If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first, and select **Sign**.

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Enter the signing PIN. The digital signature icon disappears, and the service may display a confirmation of your purchase.

16. SIM services



Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

To set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services, select **Menu** > *Settings* > *Phone* > *Confirm SIM actions* > *Yes*.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

17. PC connectivity

You can send and receive e-mail, and access the Internet when your phone is connected to a compatible PC through a Bluetooth or a data cable connection. You can use your phone with a variety of PC connectivity and data communications applications.

■ Nokia PC Suite

With Nokia PC Suite you can synchronize contacts, calendar, notes, and to-do notes between your phone and the compatible PC or a remote Internet server (network service). You may find more information and PC Suite on the Nokia Web site at www.nokia-asia.com/support or your local Nokia Web site.

■ Packet data, HSCSD, and CSD

With your phone you can use the packet data, high-speed circuit switched data (HSCSD), and circuit switched data (CSD, *GSM data*) data services. For availability and subscription to data services, contact your network operator or

service provider. See "[Modem settings](#)" p. 49.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls.

■ Bluetooth

Use the Bluetooth technology to connect your compatible Laptop to the Internet. Your phone must have activated a service provider that supports Internet access and your PC has to support Bluetooth PAN (Personal Area Network). After connecting to the network access point (NAP) service of the phone and pairing with your PC your phone automatically opens a packet data connection to the Internet. PC Suite software installation is not necessary when using the NAP service of the phone.

See "[Bluetooth wireless technology](#)" p. 48.

■ Data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Making or answering phone calls during a computer connection is not recommended, as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

18. Battery information

■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to start the charging. Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery

performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging, and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it, and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for

authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram

1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.

 


2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.



3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads

starting from the number at the top row followed by the bottom row.

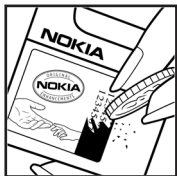

4. Confirm that the 20-digit code is valid by following the instructions at www.nokiaoriginals.com/check.



To create a text message enter the 20-digit code, for example, 12345678919876543210, and send to +44 7786 200276.

To create a text message,

- For countries in Asia Pacific, excluding India: Enter the 20-digit code, for example, 12345678919876543210, and send to +61 427151515.
- For India only: Enter Battery followed by the 20-digit battery code, for example, Battery

12345678919876543210, and send to 5555.

National and international operator charges will apply.

You should receive a message indicating whether the code can be authenticated.

If you need assistance confirming the battery code, contact your local Nokia Care Centres listed at www.nokia-asia.com/carecentrelocator.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokiaoriginals.com/battery.

19. Genuine Enhancements

A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs.



Some of the enhancements are described in detail below.

For availability of the enhancements, please check with your local dealer. A few practical rules for enhancements operation:

- Keep the enhancements out of small children's reach.
- When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.
- Check regularly that all mobile phone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

■ Power

| Type | Tech | Talk-time* | Standby* |
|-------|--------|-----------------|-------------|
| BL-4B | Li-Ion | Up to 2 - 2.5 h | Up to 250 h |

* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

■ Wireless Headset

Nokia Bluetooth Headset BH-700

Enjoy handsfree elegance with the lightweight Nokia Bluetooth Headset BH-700. Features easily accessible answer/end and volume buttons, an optional ear loop, and a convenient strap to hold the headset when not in use.

■ Car Solutions – Plug-in solutions

Nokia Plug-in Car Handsfree HF-3

Includes a built-in speaker, integrated microphone, and phone charging. Plug it in to your car's cigarette lighter socket and you're ready for handsfree calls through your compatible mobile phone.

■ Headsets – Wired Headset

Nokia Fashion Stereo Headset HS-31

The Nokia Fashion Stereo Headset provides a convenient handsfree facility and the pleasure of listening to your compatible Nokia phone's FM radio or MP3 player in stereo.

■ Memory card

Nokia 512 MB microSD Card MU-28

This microSD Card provides 512 MB of removable storage and increases the available memory for data, music and software applications.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Do not touch the main display with hard or angular materials. Objects like earrings or jewellery may scratch the display.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Operating environment

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inch) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body. To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the device in a breast pocket

- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects,

including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or

particles such as grain, dust, or metal powders.

■ Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. If the device is in the offline or flight mode, you must change the profile to activate the phone function before you can make an emergency

■ Certification information (SAR)

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 watts/kilogram (W/kg)*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only

the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

The highest SAR value for this device when tested for use at the ear is 0.73 W/kg.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values. Additional SAR information may be provided under product information at www.nokia-asia.com.

* The SAR limit for mobile devices used by the public is 2.0 W/kg averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions, please look under product information at www.nokia.com.

Index

A

- access codes 13
- accessories. See enhancements.
- active standby 20, 46
- alarm clock 66
- antenna 18
- applications
- applications collection 69
- audio messages 31

B

- barring password 13
- Battery 83
- battery
 - charging 16
 - charging, discharging 80
- Battery information
 - type 83
- blacklist 34
- Bluetooth 48, 78
- bookmarks 72
- browser
 - appearance settings 73
 - bookmarks 72
 - security 73
 - set up 71
- business cards 42

C

- cache memory 74
- calculator 67
- calendar 66
- calendar notes 67
- call
 - functions 23
 - log 44
 - options 24
 - settings 51
 - waiting 24
- call key 19
- call register. See call log.
- calls
 - answer 24

- international 23
- making of 23
- reject 24
- speed dialing 23
- voice dialing 23

- camera
 - effects 61
 - filter 61
 - key 19
 - record a video clip 60
 - settings 61
 - take an image 60
- certificates 75
- Certification information (SAR) 89
- character case 25
- charge the battery 16
- clock settings 46
- codes 13
- configuration 54
 - setting service 13
 - settings 17
- contact information 14
- contacts
 - copy 41
 - delete 42
 - edit 42
 - groups 43
 - my numbers 43
 - save 41
 - search 41
 - service numbers 43
 - settings 43
 - speed dialing 43
- cookies 73
- countdown timer 68
- customer service 14

D

- data
 - communication 78
 - transfer 50
- data cable 51
- date settings 46
- delete
 - messages 38

delete messages 38
digital signature 76
display 19
downloads 14, 74

E

earpiece 19
EGPRS 49
e-mail application 32
emergency calls 88
end
 call 23
end key 19
enhancements 12, 53
equalizer 65
explosive environments 87

F

factory settings 55
flash messages 30
FM radio 63
font size 46

G

gallery 58
games 69
Genuine Enhancements 83
GPRS 49

H

handsfree. See loudspeaker.
hearing aid 53, 87

I

image 60
IMAP4 32
indicators 21
info messages 38
installation 15
instant messaging 34
Internet 71–76

J

junk folder 34

K

keyguard 22
keypad 19
keypad lock 22
keys 19
 call key 19
 end key 19
 keyguard 22
 keypad 19
 keypad lock 22
 power on/off 19
 scroll key 19
 selection keys 19

L

language settings 52
location information 44
log 44
loudspeaker 19, 24

M

main display 45
maintenance 85
media player 61
memory card 58
memory full 31
menu 26
messages
 audio message 31
 center number 27
 flash message 30
 folder 31
 info messages 38
 length indicator 27
 service commands 38
 settings for 38–40
 text 27
 voice message 37
microphone 19
MMS. See multimedia messages.
multimedia messages 28
music player 61

N

navigation 26
navigation key 47
navigation key. See scroll key.

- network
 - name on display 19
 - services 11
- Nokia 512 MB microSD Card
- MU-28 84
- Nokia battery authentication guidelines 81
- Nokia Bluetooth Headset BH-700 83
- Nokia contact information 14
- Nokia Fashion Stereo Headset HS-31 84
- Nokia Plug-in Car Handsfree HF-3 84
- notes 67
- numbers 43

O

- offline mode 22
- operator menu 57
- organizer 66

P

- pacemakers 86
- packet data 49
- packet data. See general packet radio service.
- parts 19
- PC connectivity 78
- PC Suite 78
- phone
 - configuration 54
 - keys 19
 - open 17
 - parts 19
 - settings 52
 - updates 53, 56
- phone lock. See keypad lock.
- PictBridge 51
- PIN codes 13, 17
- plug and play service 17
- POP3 32
- Pop-Port 19
- positioning. See location information.
- power key 19
- power saver 46
- predictive text input 25
 - compound words 25
- profiles 45
- PUK codes 13

- pushed messages 74

R

- radio 63
- recorder 64
- ringing tones 45

S

- safety information 10, 86
- screen saver 46
- scroll key 19
- scrolling 26
- security
 - codes 13
 - module 75
 - settings 54
- selection keys 19
- service
 - commands 38
 - inbox 74
 - messages 74
 - numbers 43
- services 71–76
- settings
 - call 51
 - camera 61
 - clock 46
 - configuration 54
 - connectivity 48
 - data transfer 50
 - date 46
 - downloads 74
 - enhancements 53
 - GPRS, EGPRS 49
 - main display 45
 - messages 38
 - my shortcuts 47
 - phone 52
 - profiles 45
 - restore factory settings 55
 - security 54
 - service inbox 74
 - themes 45
 - time 46
 - tones 45
 - USB data cable 51
 - wallpaper 46
- shared memory 12

- shortcuts 20, 47
- signal strength 19
- SIM
 - card 22
 - card installation 15
 - messages 38
 - services 77
- SMS. See text messages
- software updates 53, 56
- spam filter 34
- speed dialing 23, 43
- standby mode 19, 47
- status indicators 19
- stereo widening 65
- stopwatch 68
- strap 18
- streaming service 61
- switch on and off 17
- swivel 46
- synchronization 50

T

- take an image 60
- text 25
- text message 27
- text phone 53
- themes 45
- time settings 46
- to-do list 67
- tones 45
- traditional text input 25

U

- unlock keypad 22
- UPIN 17

V

- vehicles 87
- video clip 60
- voice
 - commands 47
 - dialing 23
 - messages 37
 - recorder 64
- volume key 19

W

- wallpaper 46
- web 71–76
- wireless markup language 71
- wrist strap 18
- write text 25

X

- XHTML 71

Z

- zoom key 19