

Nokia C2-00 User Guide

Contents		Write using traditional text input	18
		Use predictive text input	18
Safety	4	Messaging	19
Your phone in brief	5	Send a message	19
Your dual SIM phone	5	Save an attachment	20
Keys and parts	5	Retrieve a multimedia message	20
Get started	6	Listen to voice messages	21
Insert a SIM card and battery	6	Send an audio message	21
Insert a second SIM card	7	Connectivity	22
Insert a memory card	9	Bluetooth	22
Charge the battery	9	USB data cable	24
Switch the phone on or off	10	Clock	24
GSM antenna	11	Change the time and date	24
Connect a headset	11	Alarm clock	24
Attach a strap	12	Pictures and videos	25
Basic use	12	Take a picture	25
Support	12	Record a video	25
Access codes	12	Send a picture or video	26
Set which SIM card to use	13	Organise files	26
Lock the keys	14	Music and audio	26
Copy contacts or pictures from your old phone	14	Media player	26
Use your phone without a SIM card	15	FM radio	28
Calls	15	Web	29
Make a call	15	About the web browser	29
View your missed calls	15	Browse the web	30
Call the last dialled number	15	Clear browsing history	30
Divert calls to your voice mailbox or another phone number	16	Phone management	30
Contacts	16	Update phone software using your phone	30
Save a name and phone number	16	Update phone software using your PC	31
Use speed dial	17	Restore original settings	32
Send your contact information	17	Back up your pictures and other content to a memory card	32
Write text	17	Protect the environment	32
Switch between text input modes	17		

Save energy	32
Recycle	32

Product and safety information 33

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. For further information, read the complete user guide.

SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

BATTERIES, CHARGERS, AND OTHER ACCESSORIES



Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY



Your device is not water-resistant. Keep it dry.

PROTECT YOUR HEARING



Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Your phone in brief

Your dual SIM phone

You can insert two SIM cards.

Some benefits of a dual SIM phone


- You can make savings when you use services from different service providers.
- Use one phone number for personal calls and another for work, but carry only one phone.
- Avoid network coverage variation between service providers.

Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other is unavailable.


If you only have one SIM card, insert the card into the SIM1 card holder. Some features and services may only be available when using the SIM card in the SIM1 card holder. If there is a SIM card only in the SIM2 card holder, you can only make emergency calls.

A GPRS connection cannot be open in the background. If an application is using a GPRS connection, and you return to the home screen or switch to another application, menu, or other view, the connection is automatically closed.

Keys and parts

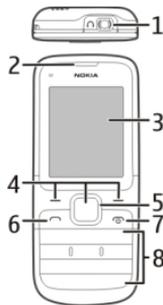

- 1 Headset connector/Nokia AV connector (3.5 mm)
- 2 Earpiece
- 3 Screen
- 4 Selection keys
- 5 Navi™ key (scroll key)
- 6 Call key
- 7 End/Power key
- 8 Keypad

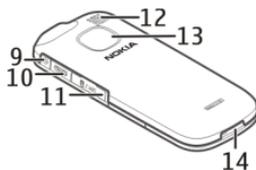

- 9 Charger connector
- 10 Micro-USB connector
- 11 SIM card slot (SIM 2)
- 12 Loudspeaker
- 13 Camera lens
- 14 Microphone

Get started

Insert a SIM card and battery


 **Important:** Do not use a mini-UICC SIM card, also known as a micro-SIM card, a micro-SIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.




This phone is intended for use with a BL-5C battery. Always use original Nokia batteries.

If you only have one SIM card, insert the card into the internal SIM card holder.


- 1 Place your finger in the recess at the bottom of the phone, and carefully lift and remove the back cover (1).
- 2 If the battery is inserted, lift it out (2).

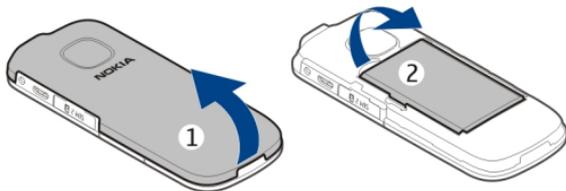

- 3 Open the SIM card holder (3), and insert or remove the SIM card (4 or 5). Make sure the contact area of the card is facing down.

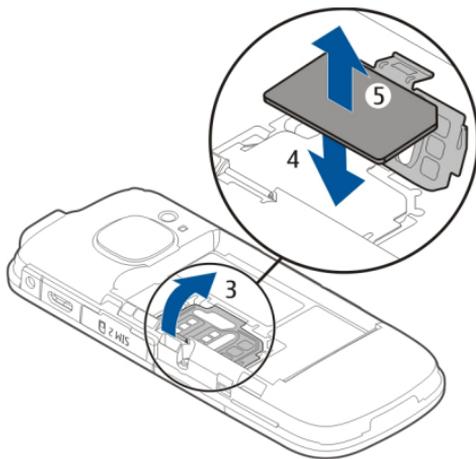


- 4 Line up the contacts of the battery and the battery compartment, and insert the battery (6). To replace the back cover, direct the top locking catches toward their slots (7), and press down until the cover locks into place (8).

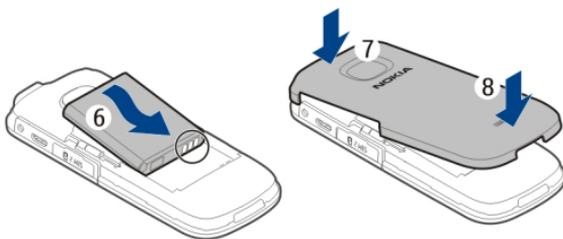


Insert a second SIM card

Have a second SIM card, but want to keep using your main SIM card? You can insert or remove a second SIM card without switching the phone off.


- 1 Open the cover of the external SIM card slot (1, 2), marked with **SIM 2**.

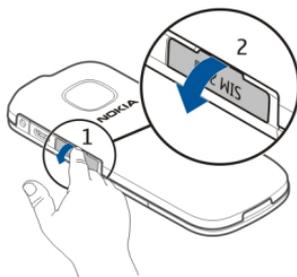

- 2 Make sure the contact area of the SIM card is facing down, and insert the card (3). Push the card in, until it locks into place. Close the cover (4).

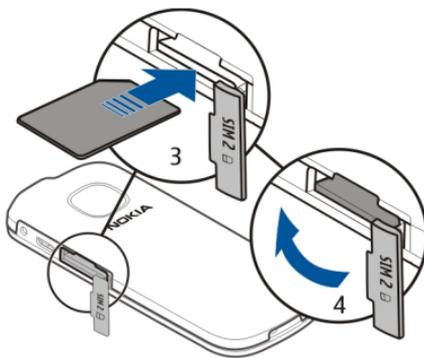


Remove the second SIM card

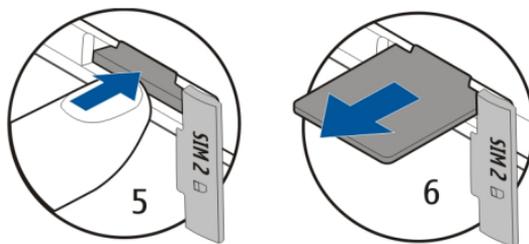

Insert a memory card

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your phone supports memory cards with a capacity of up to 32 GB.

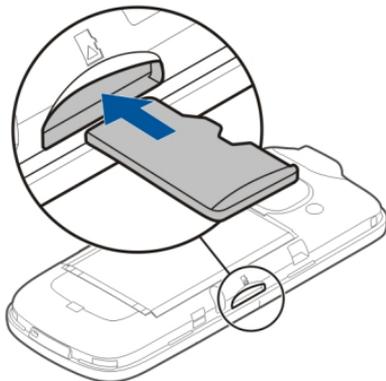

- 1 Remove the back cover.
- 2 Make sure the contact area of the card is facing down. Push the card in, until it locks into place.
- 3 Replace the back cover.

Remove the memory card


 **Important:** Do not remove the memory card when an application is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

You can remove or replace the memory card without switching the phone off.

- 1 Remove the back cover.
- 2 Push the card in, until it is released, and pull the card out.
- 3 Replace the back cover.

Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your phone for the first time. If the phone indicates a low charge, do the following:

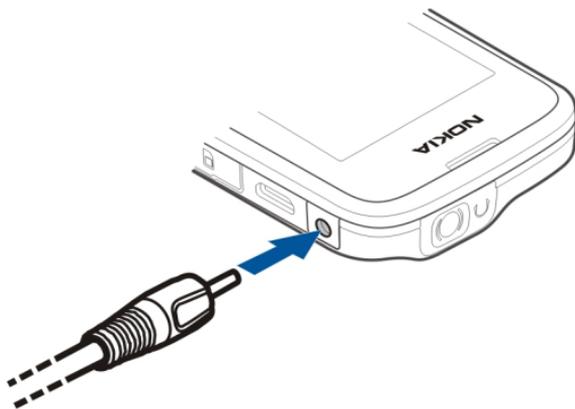

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the phone.
- 3 When the phone indicates a full charge, disconnect the charger from the phone, then from the wall outlet.

You do not need to charge the battery for a specific length of time, and you can use the phone while it is charging.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

Switch the phone on or off

Press and hold the power key .



You may be prompted to get the configuration settings from your network service provider. For more information on this network service, contact your network service provider.

GSM antenna



The figure shows the GSM antenna area marked in grey.


Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Connect a headset



Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the Nokia AV connector. If you connect an external device or headset, other than those approved by Nokia for use with this device, to the Nokia AV connector, pay special attention to volume levels.

Attach a strap

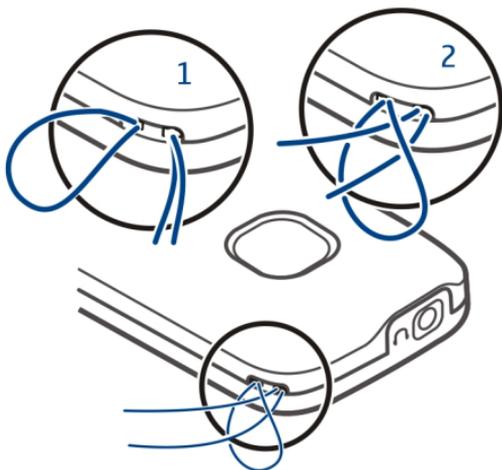

Straps may be available separately.

Basic use

Support

When you want to learn more about how to use your product or you are unsure how your phone should function, read the user guide thoroughly.

If this does not resolve your issue, do one of the following:

- Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone.
- Update your phone software
- Restore the original factory settings

If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair. Before sending your phone for repair, always back up your data.

Access codes

Select **Menu > Settings > Security > Access codes**.

PIN or PIN2 code (4-8 digits)	These protect your SIM card against unauthorised use or are required to access some features.
----------------------------------	---

	<p>If not supplied with the card or you forget the codes, contact your service provider.</p> <p>You can set your phone to ask for the PIN code when you switch it on.</p> <p>If you enter the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.</p> <p>The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature.</p>
<p>Security code (5–10 digits)</p>	<p>This protects your phone against unauthorised use.</p> <p>You can set your phone to ask for the security code that you define. The default security code is 12345.</p> <p>Keep the code secret and in a safe place, separate from your phone.</p> <p>If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted.</p> <p>For more information, contact a Nokia Care Point or your phone dealer.</p>
<p>Barring password (4 digits)</p>	<p>This is required for call barring services.</p> <p>For more information, contact your service provider.</p>

Set which SIM card to use

You can set which SIM card to use for outgoing calls or messages. If you name your SIM cards, you can see at a glance which is, for example, for work and which is for personal use.

Select **Menu > Settings > SIM manager**.

Select **SIM1** or **SIM2**. The preferred SIM card is used by default for all outgoing communication, for example, calls and messages.

To be prompted to select a SIM card before, for example, making a call or sending a text message, select **Ask every time**.

Rename a SIM card

Select **Options** > **Rename**.

Tip: To open the SIM manager from the home screen, press and hold *.

Lock the keys

To avoid accidentally making a call when your phone is in your pocket or bag, lock the keys.

Select **Menu**, and then press *.

Unlock the keys

Select **Unlock**, and press *.

Set the keys to lock automatically

- 1 Select **Menu** > **Settings and Device** > **Automatic keyguard** > **On**.
- 2 Define the length of time after which the keys are locked automatically.

Copy contacts or pictures from your old phone

Want to copy your content from your previous compatible Nokia phone and start using your new phone quickly? You can copy, for example, contacts, calendar entries, and pictures to your new phone, free of charge.



- 1 Activate Bluetooth in both phones.
Select **Menu** > **Settings** > **Connectivity** > **Bluetooth** and **On**.
- 2 Select **Menu** > **Settings** > **Sync and backup**.
- 3 Select **Phone switch** > **Copy to this**.
- 4 Select the content to copy and **Done**.
- 5 Select your previous phone from the list.

- 6 If the other phone requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both phones. The passcode in some phones is fixed. For details, see the user guide of the other phone.
The passcode is valid only for the current connection.
- 7 If prompted, allow connection and copying requests.

Use your phone without a SIM card

Do your children want to play with your phone, but you don't want them to accidentally make a call? Some features of your phone, such as games and the calendar, may be used without inserting a SIM card. Features that are dimmed in the menus cannot be used.

Calls

Make a call

- 1 On the home screen, enter the phone number.
To delete a number, select **Clear**.
For international calls, select * twice for the + character (which replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number.
- 2 Press the call key.
- 3 If prompted, select the SIM card to use.
- 4 To end the call, press the end key.

When you receive a call, the SIM card in use is indicated.

View your missed calls

Want to see who made the call you missed?

On the home screen, select **View**. The caller's name is displayed, if stored in the contacts list.

Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area.

Call back the contact or number

Go to the contact or number, and press the call key.

View the missed calls later

Select **Menu > Log and Missed calls**.

Call the last dialled number

Trying to call someone, but they are not answering? It is easy to call them again.

16 Contacts

- 1 On the home screen, press the call key.
- 2 Go to the number, and press the call key.
If prompted, select the SIM card to use.

Divert calls to your voice mailbox or another phone number

When you cannot answer, you can divert your calls.

Call divert is a network service.

- 1 Select **Menu** > **Settings** > **Call** > **Call divert**.
- 2 Select the SIM card to use.
- 3 Select when to divert the incoming calls:

All voice calls — Divert all incoming voice calls.

If busy — Divert voice calls when busy.

If not answered — Divert voice calls only when not answered.

If out of reach — Divert voice calls when the phone is switched off or out of network coverage for a certain period.

If not available — Divert voice calls when not answered, or the phone is busy, or switched off, or out of network coverage.

- 4 Select **Activate** > **To voice mailbox** or **To other number**.
- 5 If **If not answered** or **If not available** is selected, set the length of time after which a call is forwarded.

Contacts

Save a name and phone number

Select **Menu** > **Contacts**.

Select **Add new**, and enter the number and name.

If prompted, select where to save the contact.

Add or edit the details of a contact

- 1 Select **Names** and a contact.
- 2 Select **Options** > **Add detail**.

Tip: To add a ringtone or picture for a contact, select the contact and **Options** > **Add detail** > **Multimedia**.

Use speed dial

You can quickly call your friends and family when you assign your most-used phone numbers to the number keys of your phone.

You can only use speed dials for the contacts stored on your phone or on the SIM card in the internal SIM card holder.

Select **Menu** > **Contacts** > **More** > **Speed dials**.

Assign a phone number to a number key

- 1 Go to a number key, and select **Assign**. 1 is reserved for the voice mailbox.
- 2 Enter a number or search for a contact.

Remove or change a phone number assigned to a number key

Go to a number key, and select **Options** > **Delete** or **Change**.

Make a call

On the home screen, press and hold a number key.

Deactivate speed dialling

Select **Menu** > **Settings and Call** > **Speed dialling** > **Off**.

Send your contact information

Want to send your phone number or mail address to a person you just met? Add your own contact information to your contacts list, and send a business card to the person.

Select **Menu** > **Contacts and Names**.

- 1 Go to the contacts list entry that contains your information.
- 2 Select **Options** > **More** > **Business card** and the sending type.

Save a received business card

Select **Show** > **Save**.

Write text

Switch between text input modes

When writing text, you can use traditional  or predictive  text input.

AbC abC and ABC indicate the character cases. 123 indicates that number mode is activated.

Activate or deactivate predictive text input mode

Select **Options** > **Prediction** > **Prediction on** or **Prediction off**. Not all languages are supported by predictive text input.

Switch between character cases

Press **#**.

Activate number mode

Press and hold **#**, and select **Number mode**. To return to letter mode, press and hold **#**.

Tip: To quickly enter an individual number, press and hold the number key.

Set the writing language

Select **Options** > **Writing language**.

Tip: To activate number mode, activate or deactivate predictive text input mode, or set the writing language, you can also press and hold **#**, and select the appropriate option.

Write using traditional text input

- 1 Press a number key (2-9) repeatedly, until the desired character is displayed.
- 2 Insert the next character. If it is located on the same key, wait until the cursor is displayed, or move the cursor.

The available characters depend on the selected writing language.

Move the cursor

Scroll left or right.

Insert a common punctuation mark

Press **1** repeatedly.

Insert a special character

Press *****, and select the desired character.

Insert a space

Press **0**.

Use predictive text input

Write using predictive text input

The built-in dictionary suggests words as you press the number keys.

- 1 Press each number key (2–9) once for each character.
- 2 Press * repeatedly, and select the desired word from the list.
- 3 To confirm the word, move the cursor forward.

Add a missing word to the dictionary

If ? is displayed when you enter a word using predictive text input, the word is not in the dictionary. You can add it to the built-in dictionary.

- 1 Select **Spell**.
- 2 Write the word using traditional text input.
- 3 Select **Save**.

Write a compound word

- 1 Write the first part of the word. To confirm the word, move the cursor forward.
- 2 Write the next part of the word, and confirm again.

Messaging

Send a message

Keep in touch with your family and friends with text and multimedia messages. You can attach your pictures, videos, and business cards to your message.

Select **Menu > Messaging**.

- 1 Select **Create message**.
- 2 Write your message.
- 3 To add an attachment, select **Options > Insert object**.
- 4 Select **Send to**.
- 5 To enter a phone number or mail address manually, select **Number or mail**. Enter a phone number, or select **Mail**, and enter a mail address. To select a recipient or a contact group, select **Contacts** or **Contact groups**.
- 6 Select **Send**.
If prompted, select the SIM card to use.

Tip: To insert a special character or smiley, select **Options > Insert symbol**.

Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message.

If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

Only compatible devices can receive and display multimedia messages. Messages may look different in different devices.

Save an attachment

You can save attachments from multimedia and mail messages to your phone.

Select **Menu > Messaging**.

Save an attachment

- 1 Open the message.
- 2 Select **Options > Show contents**.
- 3 Select the desired file and **Options > Save**.

Save a mail attachment

- 1 Open the mail.
- 2 Select the attachment.
- 3 Select **Save**.

Pictures and videos are saved in Gallery.

Retrieve a multimedia message

By default, your phone retrieves multimedia messages automatically when you are in your home network.

Tip: Outside your home network, sending and receiving multimedia messages may cost you more. To save costs, you can stop your phone from retrieving multimedia messages automatically. For more information on the costs, contact your network service provider.

Modify settings for multimedia message retrieval

- 1 Select **Menu > Messaging > More > Message settings > Multimedia msgs..**
- 2 Select **SIM1** or **SIM2**.
- 3 Select **MMS reception** and from the following:

Automatic — Multimedia messages are always retrieved automatically.

Autom. in home — Multimedia messages are retrieved automatically when you are in your home network. This option is activated by default.

Manual — You receive notifications about multimedia messages that you have received in your messaging centre, and you can retrieve the multimedia messages manually.

Off — Multimedia message retrieval is deactivated. You do not get notifications about multimedia messages.

If you select **MMS reception** > **Manual**, you can retrieve multimedia messages manually.

Retrieve a multimedia message manually

- 1 Select **Menu** > **Messaging** > **Inbox**.
- 2 Open the multimedia message notification, and select **Retrieve**. The multimedia message is downloaded to your phone.

Listen to voice messages

When you can't answer, you can divert calls to your voice mailbox and listen to your messages later.

You may need a voice mailbox subscription. For more information on this network service, contact your service provider.

You can only use the voice mailbox with the SIM card in the internal SIM card holder.

- 1 Select **Menu** > **Messaging** > **More** > **Voice messages** and **Voice mailbox number**.
- 2 Enter your voice mailbox number, and select **OK**.
- 3 To call your voice mailbox, on the home screen, press and hold **1**. If prompted, select the desired SIM card.

Send an audio message

Don't have time to write a text message? Record and send an audio message instead.

Select **Menu** > **Messaging**.

- 1 Select **More** > **Other messages** > **Audio message**.
- 2 To record your message, select .
- 3 To stop recording, select .
- 4 Select **Send to** and a contact.

Connectivity

Bluetooth


About Bluetooth connectivity

Select Menu > Settings > Connectivity > Bluetooth.

You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits.

You can use the connection to send items from your phone, copy files from your compatible PC, and print files with a compatible printer.

Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. However, they must be within 10 metres (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

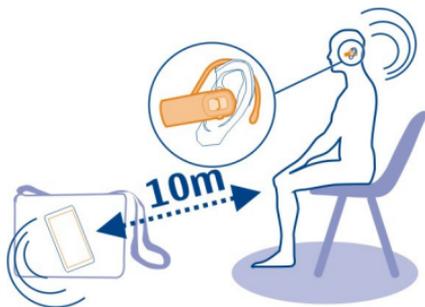

When your phone is locked, it is only possible to connect to a paired device that has been set to **Auto-conn. with- out confirmation**.

Connect to a wireless headset

Want to keep working at your computer during a call? Use a wireless headset. You can also answer a call, even if your phone is not directly at hand.

- 1 Select **Menu > Settings > Connectivity > Bluetooth and Bluetooth > On**.
- 2 Switch the headset on.
- 3 To pair your phone and the headset, select **Connect to audio accessories**.
- 4 Select the headset.
- 5 You may need to enter a passcode. For details, see the user guide of the headset.

Send a picture or other content to another device using Bluetooth

Use Bluetooth to send pictures, videos, business cards, and other content created by you to your computer or a friend's compatible phone or device.

- 1 Select the item to send.
- 2 Select **Options > Send > Via Bluetooth**.
- 3 Select the device to connect to. If the desired device is not displayed, to search for it, select **New search**. Bluetooth devices within range are displayed.
- 4 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.

The passcode is valid only for the current connection.

The available options may vary.

Connect automatically to a paired device

Do you regularly connect your phone to another Bluetooth device, such as a car kit, headset, or your PC? You can set your phone to connect automatically.

Select **Menu > Settings > Connectivity > Bluetooth and Paired devices**.

- 1 Select the phone to connect to automatically.
- 2 Select **Options > Settings > Auto-conn. with- out confirmation > Yes**.

Protect your phone

Do you want to secure who can see your phone when using Bluetooth? You can control who can find and connect to your phone.

Select **Menu > Settings > Connectivity > Bluetooth**.

Prevent others from detecting your phone

Select **My device's visibility > Hidden**.

When your phone is hidden, others can't detect it. However, paired devices can still connect to your phone.

Deactivate Bluetooth

Select **Bluetooth > Off**.

Do not pair with or accept connection requests from an unknown device. This helps to protect your phone from harmful content.

USB data cable

Copy content between your phone and a computer

You can use a USB data cable to copy your pictures and other content between your phone and a compatible computer.

- 1 Use a compatible USB cable to connect your phone to a computer.
- 2 Select from the following modes:

Nokia Ovi Suite — Nokia Ovi Suite is installed on your computer.

Mass storage — Nokia Ovi Suite is not installed on your computer. The phone is displayed as a portable device on your computer. If you want to connect your phone to other devices, such as a home or car stereo, use this mode.

- 3 To copy the content, use the file manager of the computer.
To copy your contacts, music files, videos, or pictures, use Nokia Ovi Suite.

You can only use Nokia Ovi Suite with the SIM card in the internal SIM card holder.

Clock

Change the time and date

Select **Menu** > **Settings and Date and time**.

Change the time zone when travelling

- 1 Select **Date and time settings** > **Time zone**.
- 2 To select the time zone of your location, scroll left or right.
- 3 Select **Save**.

The time and date are set according to the time zone. This makes sure that your phone displays the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

Alarm clock

You can set an alarm to sound at a desired time.

Set the alarm

- 1 Select **Menu** > **Applications** > **Alarm clock**.
- 2 To activate the alarm, scroll left or right.
- 3 To enter the alarm time, scroll up.
- 4 To repeat an alarm on selected days of the week, go to **Repeat days**, and mark the desired days of the week.

- 5 To select the alarm tone, go to **Alarm tone**, and scroll left or right. If you select the radio as the alarm tone, connect a headset to the phone.
- 6 To set the length of the snooze time-out period, go to **Snooze time-out**, and enter the desired time.
- 7 Select **Save**.

Stop the alarm

Select **Stop**. If you let the alarm sound for a minute or select **Snooze**, the alarm stops for the length of the snooze time-out period, then resumes.

Pictures and videos

Take a picture

- 1 Select **Menu > Photos > Camera**.
- 2 To zoom in or out, scroll up or down.
- 3 Select **Capture**.
The pictures are saved in **Menu > Photos > My photos**.

Close the camera

Press the end key.

Record a video

Besides taking pictures with your phone, you can also capture your special moments as videos.

Select **Menu > Photos > Video camera**.

- 1 To switch from image mode to video mode, if necessary, select **Options > Video camera**.
- 2 To start recording, select **Record**.
To zoom in or out, scroll up or down.
- 3 To stop the recording, select **Stop**.

Videos are saved in **Menu > Photos > My videos**.

Close the camera

Press the end key.

Send a picture or video

Want to share your pictures and videos with friends and family? Send a multimedia message or send a picture using Bluetooth.

Select Menu > Photos.

Send a picture

- 1 Select the folder containing the picture.
- 2 Select the picture to send.
To send more than one picture, select **Options** > **Mark**, and mark the desired pictures.
- 3 Select **Options** > **Send** or **Send marked** and the desired sending method.

Send a video

- 1 Select the folder containing the video.
- 2 Select **Options** > **Mark**, and mark the video. You can mark several videos to send.
- 3 Select **Options** > **Send marked** and the desired sending method.

Organise files

You can move, copy, and delete files and folders, or create new folders in your phone memory or on the memory card. If you organise your files into their own folders, it might help you find the files in future.

Select Menu > Applications > Gallery.

Create a new folder

In the folder where you want to create a sub-folder, select **Options** > **Add folder**.

Copy or move a file to a folder

Scroll to the file, select **Options** > **Copy** or **Move**, and select the target folder.

Tip: You can also play music or videos, or view pictures in Gallery.

Music and audio

Media player

Play a song

Play music stored in the phone memory or on the memory card.

Select Menu > Music > My music and All songs.

- 1 Select a song.

- 2 Select **Play**.
- 3 To pause or resume playing, press the scroll key.

Skip to the beginning of the current song

Scroll left.

Skip to the previous song

Scroll left twice.

Skip to the next song

Scroll right.

Fast-forward or rewind

Press and hold the scroll key to the right or left.

Mute or unmute the music player

Press #.

Close the music player

Press the end key.

Set the music player to play in the background

Select **Options** > **Play in backgr..**

Close the music player when it is playing in the background

Press and hold the end key.

Play a video

Play videos stored in the phone memory or on the memory card.

Select **Menu** > **Music** > **My music and Videos**.

- 1 Select a video.
- 2 Select **Play**.
- 3 To pause or resume playing, press the scroll key.

Fast-forward or rewind

Press and hold the scroll key to the right or left.

Close the media player

Press the end key.

FM radio


About the FM radio

Select **Menu > Music > Radio**.

You can listen to FM radio stations using your phone - just connect a headset, and select a station.

To listen to the radio, you need to connect a compatible headset to the device. The headset acts as an antenna.

It is not possible to listen to the radio through a Bluetooth headset.

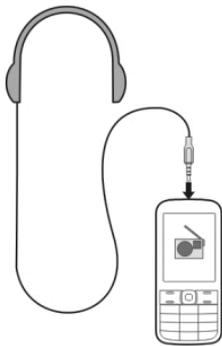

Listen to the radio

Connect a compatible headset to your phone. The headset acts as an antenna.

Select **Menu > Music > Radio**.

Change the volume

Scroll up or down.

Close the radio

Press and hold the end key.

Set the radio to play in the background

Select **Options > Play in backgr..**

Close the radio when it is playing in the background

Press and hold the end key.

Find and save radio stations

Search for your favourite radio stations, and save them, so you can easily listen to them later.

Select **Menu** > **Music** > **Radio**.

Search for the next available station

Press and hold the scroll key left or right.

Save a station

Select **Options** > **Save station**.

Automatically search for radio stations

Select **Options** > **Search stations**. For best results, search when outdoors or near a window.

Switch to a saved station

Scroll left or right.

Rename a station

- 1 Select **Options** > **Stations**.
- 2 Select the station and **Options** > **Rename**.

Automatically switch to a frequency with better reception

- 1 Select **Options** > **Settings** > **RDS** > **On**.
- 2 Select **Options** > **Settings** > **Auto-frequency** > **On**.

Tip: To access a station directly from the saved station list, press the number key that corresponds to the number of the station.

Web

About the web browser

Select **Menu** > **Internet**.

You can view web pages on the internet with the web browser on your phone.

To browse the web, you must be connected to the internet.

If prompted, select the SIM card to use.

For the availability of these services, pricing, and instructions, contact your network service provider.

You may receive the configuration settings required for browsing as a configuration message from your network service provider.

Browse the web

Select **Menu** > **Internet**.

Go to a website

Select **Go to address**, and enter the address.

Clear browsing history

Select **Menu** > **Internet**.

A cache is a memory location that is used to store data temporarily. If you have, or have tried to, access confidential information or a secure service, requiring passwords, clear the cache after each use.

Clear the cache or cookies

While browsing a website, select **Options** > **Tools** > **Clear the cache** or **Clear cookies**.

Prevent cookies from being stored

Select **Options** > **Settings** > **Security** > **Cookies** > **Reject**.

Phone management

Update phone software using your phone

Want to improve the performance of your phone and get application updates and great new features? Update the software regularly to get the most out of your phone. You can also set your phone to automatically check for updates.



Warning:

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

You can only update your software when using the SIM card in the internal SIM card holder.

Before starting the update, connect a charger or make sure the device battery has enough power.

Select **Menu** > **Settings**.



- 1 Select **Device** > **Device updates**.
- 2 To display the current software version and check whether an update is available, select **Current software details**.
- 3 To download and install a software update, select **Download device software**. Follow the displayed instructions.
- 4 If the installation was cancelled after the download, select **Install software update**.

The software update may take several minutes. If there are problems with the installation, contact your network service provider.

Check for software updates automatically

Select **Automatic SW update check**, and define how often to check for new software updates.

Your network service provider may send phone software updates over the air directly to your phone. For more information on this network service, contact your network service provider.

Update phone software using your PC

You can use the Nokia Ovi Suite PC application to update your phone software. You need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your phone to the PC.

To get more information and to download the Nokia Ovi Suite application, go to www.nokia.com/software.

Restore original settings

If your phone is not working properly, you can reset some settings to their original values.

- 1 End all calls and connections.
- 2 Select **Menu > Settings and Restore factory sett. > Restore sett. only**.
- 3 Enter the security code.

This does not affect documents or files stored on your phone.

After restoring the original settings, your phone switches off and then on again. This may take longer than usual.

Back up your pictures and other content to a memory card

Want to make sure you will not lose any important files? You can back up your phone memory to a compatible memory card.

Select **Menu > Settings > Sync and backup**.

Select **Create backup**.

Restore a backup

Select **Restore from backup**.

Protect the environment

Save energy

You do not need to charge your battery so often if you do the following:

- Close applications and data connections, such as your Bluetooth connection, when not in use.
- Deactivate unnecessary sounds, such as key tones.

Recycle



When this phone has reached the end of its working life, all of its materials can be recovered as materials and energy. To guarantee the correct disposal and reuse, Nokia co-operates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to www.nokia.com/werecycle, or call the Nokia Contact Center.

Recycle packaging and user guides at your local recycling scheme.



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your phone, go to www.nokia.com/ecoprofile.

Product and safety information

Network services and costs

Your device is approved for use on the EGSM 900 and 1800 MHz networks.

To use the device, you need a subscription with a service provider.

Using network services and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.
- Keep your device away from magnets or magnetic fields.

34 Product and safety information

- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at www.nokia.com/recycling.

About Digital Rights Management

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring images, music, and other content.

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with OMA DRM 1.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the licences and the content, use the backup feature of Nokia Ovi Suite.

Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licences in case the files on your device get corrupted.

If your device has WMDRM-protected content, both the licences and the content will be lost if the device memory is formatted. You may also lose the licences and the content if the files on your device get corrupted. Losing the licences or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licences may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

Batteries and chargers

Battery and charger information

Your device is intended for use with a BL-5C rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

This device is intended for use when supplied with power from the following chargers: AC-3. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Battery safety

Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

Additional safety information

Make an emergency call

- 1 Make sure the device is switched on.
- 2 Check for adequate signal strength. You may also need to do the following:
 - Insert a SIM card.
 - Deactivate call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group.
 - Make sure the flight profile is not activated.
- 3 Press the end key repeatedly, until the home screen is displayed.
- 4 Enter the official emergency number for your present location. Emergency call numbers vary by location.
- 5 Press the call key.
- 6 Give the necessary information as accurately as possible. Do not end the call until given permission to do so.



Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy.

Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.

36 Product and safety information

- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing



Warning:

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

Operating environment

This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed

to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.63 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Copyright and other notices

DECLARATION OF CONFORMITY

CE 0434

Hereby, NOKIA CORPORATION declares that this RM-704 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose,

are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device. By using an application, you acknowledge that the application is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device.

/Issue 1.1 EN