



NOKIA
Nseries

Get started

Nokia N93i-1

contents

Device Modes	1
Keys and Parts	2
Getting Started	4
• Insert the (U)SIM card and battery	4
• Switch the device on	5
• Charge the battery	6
• Keypad lock (keyguard)	7
Shoot, Edit and Share	8
• MMS and mobile Internet settings	8
• Displays	8
• Record video	9
• View images and videos on TV	10
• Online sharing	11
• Adobe Premier Elements 3.0	12
• Discover more on your Nokia N93i	12
Support	13
• Help	13

device modes



Model number: Nokia N93i-1
Hereinafter referred to as Nokia N93i



Fold Close Mode



View Mode



Imaging Mode



Fold Open Mode



keys and parts

3.2 megapixel (2048x1536)
main camera with Carl Zeiss
Vario-Tessar lens for high
resolution image capture and
video recording

LED flash

 
Infrared port

Pop-Port™ connector

Charger connector

Loudspeaker outlet

Cover indicator (only visible when you have missed
calls, e-mails, unread messages, or when charging)

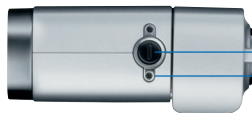

Power key

Stereo microphone

Zoom key

Capture key

4-way scroll and selection key

Camera mode key

Flash key

Memory card slot



Cover display

keys and parts



Secondary CIF camera for video calls (352x288)

Right — and — left landscape selection keys

Light sensor



Right — and — left selection keys

Menu key

Call key

Edit key

 
Microphone for voice calls

4-way scroll and selection key

Multimedia key

End key

Clear key

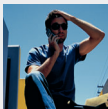

getting started

Insert the (U)SIM card and battery





(U)SIM card is an enhanced version of the SIM card and is supported by UMTS mobile phones.

Keep all SIM cards out of the reach of small children.

Always switch the device off and disconnect the charger before removing the battery.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.


- With the back of the device facing you, press the release button (1), slide the cover (2), and lift it up.
- Insert the (U)SIM card into the slot. Ensure that the bevelled corner on the card is inserted first, and that the contact area on the card is facing down.
- Insert the battery. Ensure that the contacts on the top of the battery are facing the connectors on the device.
- To replace the back cover, position the cover onto the device, and slide the cover until it clicks into place.

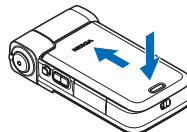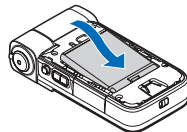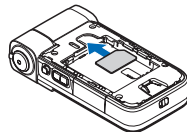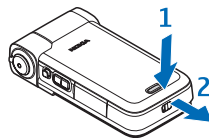



Switch the device on

- Press and hold ⓘ
- If the device asks for a (U)PIN code or lock code, enter the code (displayed as ****), and press the left selection key. The (U)PIN code is usually supplied with the (U)SIM card. The factory setting for the lock code is **12345**. For more information on the access codes, see 'Security' in the user guide.

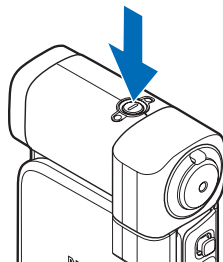


Your device has internal antennas.



Note:

As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.

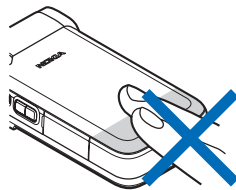




getting started

Charge the battery



- Connect a compatible charger to a wall outlet.
- Connect the power cord to the device. The device can be used while charging. If the battery is completely discharged, it may take a while before the charging indicator starts scrolling.
- When the battery is fully charged, the charging indicator stops scrolling. Disconnect the charger from the device, then from the wall outlet.

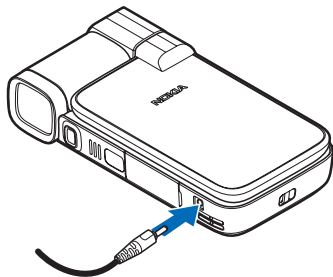
You can also use the Nokia Charger Adapter CA-44 to charge the battery with older compatible Nokia charger models. For enhancements, batteries, and chargers, see 'For your safety' in the user guide.





Keypad lock (keyguard)

- To lock the keypad in the fold open mode, press the left selection key, then *. When the keys are locked,  is displayed.
 - To unlock in the fold open mode, press the left selection key, then *.
 - To lock the keypad in the fold closed mode, press and hold the camera mode key.
 - To unlock in the fold closed mode, press and hold the camera mode key.
 - When the keypad lock is on, calls may be possible to the official emergency number programmed into your device.
 - To turn on the display light when the keypad lock is on, press .
- In the fold closed mode, press any key, except the zoom key.

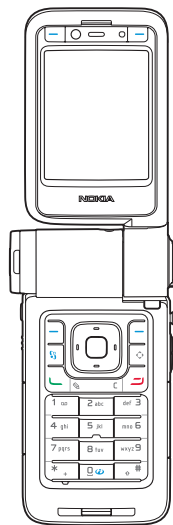



shoot, edit and share

MMS and mobile Internet settings

Your Nokia device normally has MMS, GPRS, streaming, and mobile Internet settings automatically configured in the device, based on your service provider information.

Displays

- Remove any protective plastic films covering the displays.
- A small number of missing, discoloured, or bright dots may appear on the screen. This is a characteristic of this type of display. Some displays may contain pixels or dots that remain on or off. This is normal, not a fault.
- The images in this guide may differ from your device display.






Record video

- To start recording video, open the fold to 90 degrees, hold the device sideways, and turn the fold down so that the main display faces you.
- If the camera is in the still image mode, use the camera mode key to switch to the video mode.
- Press the capture key to start recording. Press it again to stop.
- The video clip is automatically saved to **Images & video** in Gallery.
- To zoom in or out of the subject, rotate the zoom key around the capture key.
- Use the Active Palette to adjust the video setting such as shooting mode, white balance, and colour tone.

For more information, see "Camera" in User Guide.



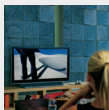


shoot, edit and share


View images and videos on TV

To view the captured video clips and images on a compatible TV, use a compatible Nokia Video-out Cable CA-64U. See 'TV out mode' and 'TV configuration' in the user guide.

To view images and videos on a compatible TV, do the following:

- Connect the compatible video-out cable to the video input of a compatible TV.
- Connect the other end of the video-out cable to the Pop-Port™ connector of your device.
- Press , and select **Gallery > Images & video** and choose the file you want to view.

The images can be played in slideshow mode, and the videos are played in RealPlayer.

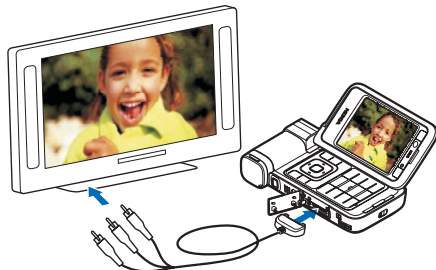



Online sharing

With **Online sharing**, you can share your images and videos on compatible online albums, weblogs, or other online sharing services on the web. You can upload content, save unfinished posts as drafts and continue later, and view the content of the albums. The supported content types may vary depending on the service provider.

To use **Online sharing**, you must subscribe to the service with an online image sharing service provider. You can usually subscribe to the service on the web page of the service provider. Contact your service provider for details on subscribing to the service. For more information on compatible service providers, see **www.nokia-asia.com/N93i/support**.

When you open the service for the first time in **Online sharing**, you are prompted to provide a username and password.


To set up your Flickr account, go to **www.flickr.com/nokia**

To set up your VOX account, go **to www.vox.com/nokia**

After you have gotten your username and password, add them in your gallery application with the following steps:

Options > Open Online Service > Create new Flickr account.

The availability of this service may vary according to your country or sales area.

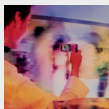

shoot, edit and share

Adobe Premier Elements 3.0

With the Adobe Premier Elements software included inbox, you can add effects and edit videos taken with the Nokia N93i. Then burn them into a DVD and share them with your loved ones.

In order to install this software, you will need the serial number that is printed on the cover of the DVD-ROM supplied with your Nokia N93i.

For more information on Adobe Premier Elements 3.0, please refer to **www.adobe.com/special/nokia**

Discover more on your Nokia N93i

To find out more about what you can do on your Nokia N93i, check out the inbox Nokia N93i Experiences Guide for the full suite of multimedia features available on the Nokia N93i.





Help

- The help function provides instructions when using the device. To access it from an application, select **Options > Help**.

User guide

- Refer to the user guide for other important information about your device.

Online

- Check www.nokia-asia.com/support or your local Nokia web site for the latest version of the Quick Start Guide, additional information, downloads, and services related to your Nokia product.



NOKIA
Nseries

See it at: www.nokia-asia.com/nseries

Copyright © 2007 Nokia. All rights reserved. Nokia, Nokia Connecting People, Nseries, N93i and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or trade names of their respective owners. Java is a registered trademark of Sun Microsystems, Inc.

9254034