



**NOKIA**  
Nseries

# Get started

Nokia N95-3


Issue 1

## Keys and parts (work mode)

Model number: Nokia N95-3.

Hereinafter referred to as Nokia N95.

- 1 Power key (⏻)
- 2 Selection keys (↶ and ↷) to select commands and access **Options**
- 3 Menu key (☰) to access the main menu
- 4 Call key (☎)
- 5 Edit key (✎) to open a list of commands when you edit text
- 6 Scroll key to move around the menus (⬇, ⬆, ⬅, ➡) and to select items (⬇).
- 7 Numeric keypad
- 8 Clear key (⌫)
- 9 End key (⏹)
- 10 Multimedia key (📁) to access the multimedia menu and open the music player
- 11 Light sensor
- 12 Secondary camera with lower resolution

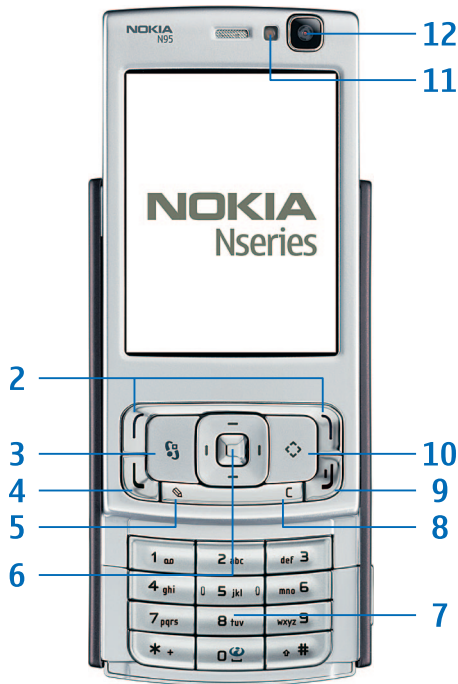

## Keys and parts (back)

- 1 Charger connector
- 2 Mini USB connector to connect to a compatible PC
- 3 Stereo speakers with 3D sound effect
- 4 Main camera for high resolution image capture and video recording
- 5 Camera flash
- 6 Nokia AV connector 3.5 mm for compatible headsets, headphones, and Video Connectivity cable
- 7 Infrared (IR) window
- 8 Memory card slot for a compatible microSD card



## Keys and parts (media mode)



- 1 Media keys under the 2-way slide
  - Next key ►►
  - Play/pause key ►||
  - Stop key ■
  - Previous key ◀◀
- 2 Zoom/volume key
- 3 Review key (◻) to view the last stored image or video clip

- 4 2-stage capture key (◻) for auto-focus, still image capture, and video recording

When you open the media keys under the 2-way slide, the media mode is activated and the display is shown in landscape orientation.

Use the media keys to control music and video players.








To access the multimedia menu, press ◻, or open the media keys under the 2-way slide when the device is in the standby mode.

 
To activate the main camera, press and hold the capture key. To lock the focus on an object, press the capture key halfway down. To take a picture, press the capture key down.

To activate the video mode, select (◻) in the active toolbar. To shoot video, press the capture key down.

To deactivate the main camera, select **Exit**.



## Shortcuts



- To switch between open applications, press and hold .  
Leaving applications running in the background increases the demand on battery power and reduces the battery life.
- To open the music player, press and hold .
- To start the camera press and hold the capture key.
- To open **Gallery**, press  twice.
- To call your voice mailbox (network service), press and hold **1**.
- To open the multimedia menu, press , or in the standby mode, open the media keys under the 2-way slide.
- To change the profile, press , and select a profile.
- To switch between **Normal** and **Silent** profiles, press and hold **#**. If you have two phone lines (network service), this action switches between the two lines.
- To open the last dialed numbers list, press .
- To use voice commands, press and hold .
- To start the **Web** browser (network service), press and hold **0**.




## Keypad lock (keyguard)

When the keys are locked,  is displayed.

To lock the keys, press , then .

To unlock the keys, open the 2-way slide, or press , then .

To have the keypad lock activated automatically after a time-out or when the 2-way slide is closed, press , and select **Tools > Settings > General > Security > Phone and SIM card**.

When the keypad lock is on, calls may be possible to the official emergency number programmed into your device.

## Insert the (U)SIM card and battery


A USIM card is an enhanced version of the SIM card and is supported by UMTS mobile phones.

Keep all SIM cards out of the reach of small children.


Always switch the device off and disconnect the charger before removing the battery.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.

- 1 With the back of the device facing you, press the release button, slide the cover, and lift it up.

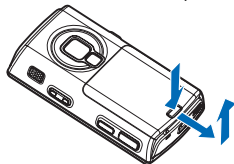


- 2 To release the (U)SIM card holder, lift the holder up from the handle.

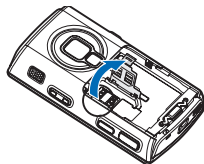


- 3 Insert the (U)SIM card. Make sure that the contact area on the card is facing the connectors on the device and the bevelled corner on the card is facing the base of the device.


- 4 Close the holder, and lock it into place.

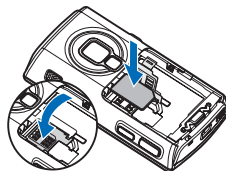

- 5 Insert the battery.

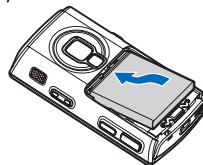


- 6 Replace the cover so that the locking catches are directed towards their slots, and slide the cover into place.

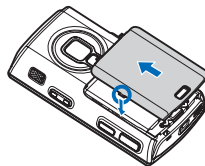

## Switch the device on


- 1 Press and hold **(I)**.
- 2 If the device asks for a (U)PIN code or lock code, enter it, and press **↵**. The factory setting for the lock code is 12345.

Your device has internal antennas.

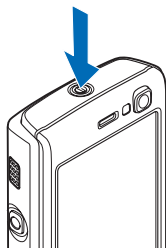


**Note:** As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.

- 1 Cellular antenna
- 2 Bluetooth technology/ wireless LAN antenna
- 3 GPS receiver

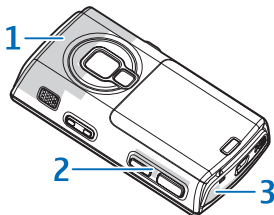

## Charge the battery

- 1 Connect a compatible charger to a wall outlet.
- 2 Connect the power cord to the device. If the battery is completely discharged, it may take a while before the charging indicator starts scrolling.
- 3 When the battery is fully charged, the charging indicator stops scrolling. Disconnect the charger from the device, then from the wall outlet.

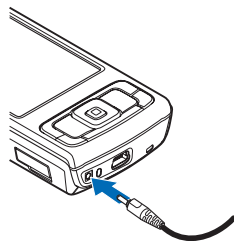

# Support

## Help

The help function provides instructions when using the device. To access it from an application, select **Options > Help**.

## User guide

Refer to the user guide for other important information about your device.

## Online

Check [www.nokia.com.au/N95850/support](http://www.nokia.com.au/N95850/support) or your local Nokia web site for the latest version of the user guide, additional information, downloads, and services related to your Nokia product.

© 2007 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nseries, and N95 are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

