





Use these shortcuts while navigating the Web
🔽 + * Zoom in
🔽 + # Zoom out
🔽 + 1 Back to bookmarks page
Final State of the second s
🔽 + 3 Back to the previous website
Final State of the second s
Final Section 1 and the section of the section o
red what is viewable on screen
🔽 + 9 Opens URL entry field
Particular Antipage Refreshes the webpage
Use these shortcuts in the spreadsheet application or image viewer
v + 0 Zoom out
🔽 + 5 Zoom in
0
0 Key Press and hold to open the default Web browser.
1 Key Press and hold to dial your voicemail box.
2 -9 Number Keys
Program as speed dialing keys.
• Press the Menu key Settings > Speed dial.
• Then scroll to a number, select Options > Assign.
 Select Yes when you see the message "1-touch dialing off.
Activate it now?"
Venile Dieling
Vanity Dialing
Dial a number that contains letters and numbers
(Example: 1-888-NOKIA2U)
From the Home screen, press 1-888
• Hold down the Character key 🖤 while pressing
the letter keys for NOKIA2U
Press the Call key to make the call
NOTE: This will also work with Interactive Voice Response
Systems to look up a number by entering a person's name.
Keyguard 📰 + 🔽
Locks the device keypad.
• To unlock, press 📰 + 💽 again.
•
Bluetooth 🔽 + 🖽
Press to turn Bluetooth on and off.
InfraRed 🔽 + 🖤
Press to turn InfraRed on and off.
E62
LUZ

NI8 033 040 Copyright ©2006 Nokia. All rights reserved. Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. To learn more about other great features, important safety and operating information, please consult the user guide.

Power Key

• Press and hold to switch your device on and off.

• Press once to switch between profiles (Offline, Meeting, etc.).

Call Key 도

- Dials the number indicated on the display.
- Press once to open a call log of the last 20 numbers dialed.

End Key 🗾

- Ends the current call.
- Press at any time to return to the Home (idle) screen.

Menu Key 🛐

- Press once to open the main menu screen for access to all applications.
- Press and hold to bring up a list of all open applications.
- To navigate quickly between open applications, scroll down this list to select an application, then press in on the joystick and you will be taken to that application.
- To quickly close open applications, scroll down this list to select an application, then press the Backspace key .

Quick Navigation

• Press the **Menu** key to open the main menu screen. Each of the folders on this screen corresponds to each of the number keys on the keypad. You can quickly jump to the folder you want without scrolling by pressing the **Function** key and the corresponding number on the keypad. For example, if you want to open the Settings folder, simply press the **Function** key real + the **9** key.





E-mail Key 📗

- Press once to open your default E-mail inbox.
- Press and hold to begin composing a new E-mail.
- Note: Functionality may vary based on your E-mail service provider.

Function Key 🔽

- Press to enter characters printed above the keys (&, !, %, or numbers).
- Press twice to lock in this feature and press again to unlock.
- Press and hold 1 + # to switch the silent profile on and off.



Shift Key 🚺

- Use to capitalize letters.
- Press twice to turn on Caps Lock and press again to turn Caps Lock off.

Control Key 💷

 Use with common keypad shortcuts, such as Ctrl+C to Copy, Ctrl+X to Cut text, Ctrl+Z to Undo, Ctrl+I to Italics, Ctrl+B to Bold, and Ctrl+V to Paste text.

Character Key 🖤

- Use to enter special characters not found on the keypad.
- Press once to view a table of special characters. Use the joystick state to navigate to and select the desired character.
- Press the Character key ^[III] and a letter key to enter letters with accent marks (ex. á, ö, ς)