
User Guide

Nokia Portable Wireless Charging Plate DC-50

NOKIA

User Guide

Nokia Portable Wireless Charging Plate DC-50

Contents

For your safety	3
About your accessory	4
Keys and parts	5
Top up your phone	6
Charge your charging plate	7
Charge your charging plate and phone at the same time	8
Troubleshooting and support	9
Product and safety info	10
Copyrights and other notices	11

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.



SWITCH OFF IN RESTRICTED AREAS

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



BATTERIES, CHARGERS, AND OTHER ACCESSORIES

Use only batteries, chargers, and other accessories approved by Microsoft Mobile for use with this device. Do not connect incompatible products.



KEEP YOUR DEVICE DRY

Your device is not water-resistant. Keep it dry.

About your accessory

With the Nokia Portable Wireless Charging Plate, you can charge the battery of your phone when you're on the move.


Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

This wireless charging plate is compatible with Qi, the global standard for wireless charging. The charging areas on the plate and the other device need to touch, so make sure you align the devices properly. Only use this plate with Qi compatible phones and wireless chargers.

For more info on operation and safety, see the user guides of your wireless charger and your phone.

Keys and parts

Get to know your charging plate.

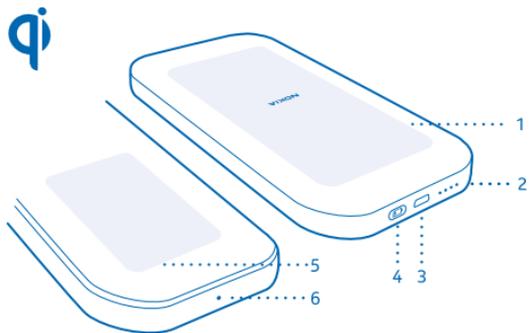

- 1 Charging area for charging the phone
- 2 Battery level and charging indicators
- 3 Charging cable connector
- 4 Power indicator key
- 5 Charging area for charging the plate
- 6 Phone charging indicator


The surface of this product is nickel-free.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

Top up your phone

Phone battery running out, and no wall outlet or charger nearby? Use the charging plate to top up your phone battery on the go.

Place your phone on top of the charging plate so that the charging areas on the two devices touch.

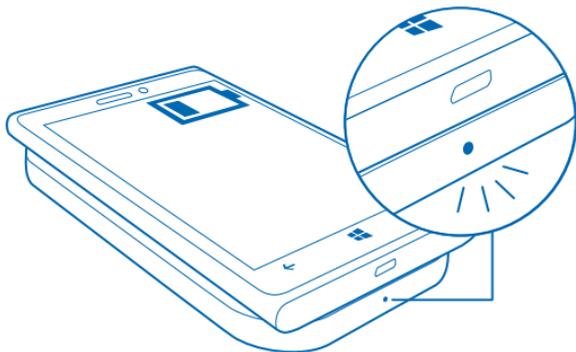

The battery status indicators switch on for 10 seconds, showing you the battery charging level. The phone charging indicator is on when the phone is charging.

If the charging plate becomes too warm, it automatically stops charging for a while.


When you're traveling, or when you don't need the charging plate for a while, you can switch it off. Press and hold the power indicator key for 5 seconds. Switch the plate back on by pressing the power indicator key again, or by connecting to a USB cable.

Charge your charging plate

The built-in battery has been partially charged at the factory, but you may need to recharge it before you can use your charging plate. Charge the plate with a wireless charger, a USB charger, or a computer.

1. To charge wirelessly, place the charging plate on a wireless charger. Make sure the charging areas on the two devices touch.

Alternatively, when using a USB charger or a computer, first put the micro-USB end of the cable in the charger connector of your charging plate. Then put the USB end of the cable into the charger and plug the charger into a wall outlet, or connect the cable to a computer.

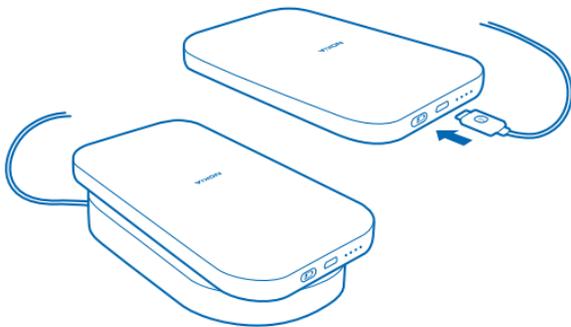

The battery level and charging indicators show the charging progress by blinking steadily while the battery is charging. The charging time may vary depending on the charging method.

If the charging plate becomes too warm, it automatically stops charging for a while.

2. When the battery is full, take your plate off the wireless charger, or disconnect the USB cable from your charging plate and the charger from the wall outlet.

Check the battery level

Press the power indicator key. The indicator lights switch on for 10 seconds, showing you the remaining battery level.

Each indicator light represents 25% of the battery capacity. If there's only one blinking light, you need to charge your charging plate before you can use it.


Charge your charging plate and phone at the same time

Battery running low on both your phone and charging plate? Find a wall outlet or a computer to charge them together, or use a wireless charger.

1. To charge wirelessly, place the charging plate on a wireless charger so that the charging areas touch.

Alternatively, connect your charging plate to a USB charger or a computer.

2. Place your phone on the charging plate so that the charging areas touch.

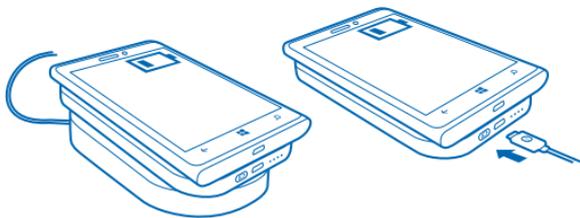

Your phone charges first, if your charging plate is more than 50% full. If not, your charging plate charges first.

When your phone battery is full, your charging plate begins charging automatically, and the indicator lights switch on, showing you the progress.

★ Tip: Leave your wall charger plugged and connected to the charging plate. This way you can use your portable wireless charging plate in the same way that you would use other wireless chargers, for example, at home or at work.

Troubleshooting and support

When you want to learn more about your device, or if you're unsure how your device should work, there are several support channels for you to check.



To help you get the most out of your device, you can explore www.nokia.com/support.

There you can find:

- Troubleshooting info
- Discussions
- News on apps and downloads
- Further details about features and technologies, and the compatibility of devices and accessories

Troubleshooting and discussions may not be available in all languages.

The Federal Communications Commission (FCC) certification requires the following user instruction: This device is intended for desktop use and should not be used next to your body. This device has been tested to comply with RF exposure limits at 10 cm from the body.

Product and safety info

Wet and dusty conditions

- If the device has been exposed to water, wipe it off with a dry cloth. If it has been exposed to any other liquid, immediately splash some clean fresh water onto the device. Carefully wipe the device dry.
- Do not charge the device or connect anything if the connectors are dusty, wet, or damp.
- If the connectors are dusty, splash clean freshwater onto the connectors. Carefully wipe the device and connector area dry, and let the connectors dry.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, let the device dry.
- Use the charger for intended purposes only. Improper use, or use of incompatible chargers may present a risk of fire, explosion, or other hazard. Never use a damaged charger.
- Do not attempt to charge a device having a damaged, cracked or open battery case or a device that is not compatible with Qi.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.

Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled garbage disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your products at www.nokia.com/recycle.

Battery and charger info

Your device has an internal, non-removable, rechargeable battery. Do not attempt to remove the battery, as you may damage the device.

Charge your device with AC-60 charger. Charger plug type may vary.

Microsoft Mobile may make additional battery or charger models available for this device.

Battery and charger safety

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household garbage.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service center before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 6 inches (15.3 centimeters) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 6 inches (15.3 centimeters) from the medical device.
- Not carry the wireless device in a breast pocket.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Copyrights and other notices

DECLARATION OF CONFORMITY



Hereby, Microsoft Mobile Oy declares that this DC-50 product is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.

The availability of products may vary by region. For more info, contact your dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS," EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. MICROSOFT MOBILE RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL MICROSOFT MOBILE OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Microsoft Mobile is prohibited. Microsoft Mobile operates a policy of continuous development. Microsoft Mobile reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Microsoft Mobile does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

FCC/INDUSTRY CANADA/MEXICO NOTICE

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more info, go to transition.fcc.gov/oet/rfsafety/rf-faqs.html. Any changes or modifications not expressly approved by Microsoft Mobile could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TM & © 2014 Microsoft Mobile. All rights reserved. Nokia is a TM of Nokia Corporation. Third party products/names may be TMs of their respective owners.

The 'Qi' symbol is a trademark of the Wireless Power Consortium.