

# NOKIA 9300i



9243069

Issue 1 EN

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation

# Nokia 9300i

## Personalizing your device

### Legal Notice

Copyright © Nokia 2005. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

# Contents

|                                           |          |                                    |          |
|-------------------------------------------|----------|------------------------------------|----------|
| <b>Introduction.....</b>                  | <b>4</b> | Personalizing the My own key.....  | 5        |
| <b>Personalizing covers and keys.....</b> | <b>5</b> | <b>Personalizing profiles.....</b> | <b>7</b> |
| Changing the covers .....                 | 5        | <b>Setting wallpaper.....</b>      | <b>9</b> |
| Personalizing cover phone keys.....       | 5        |                                    |          |

# Introduction

You can personalize your device in different ways. This document gives some examples of how you can make your device more personal.

- Covers — You can change the covers of your device.
- Cover selection keys — You can change the functions that are shown above the left and right selection keys.
- My own key — You can configure My own key to open your favorite application.
- Background images — You can set a background image to your cover display and communicator display. There are several wallpapers ready to use, and you can also use your own pictures as background images.
- Ringing tones — You can set a personal ringing tone. There are several ringing tones ready to use, and you can also use your own tones as ringing tones.

# Personalizing covers and keys

## Changing the covers



**Note:** Before removing the cover, always switch off the power and disconnect the charger and any other device. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

- 1 Press the front cover release button.
- 2 Lift up the bottom part of the front cover.
- 3 Lift up the top part of the front cover.
- 4 Place the front locking catches in place in a low angle.
- 5 Push down the bottom part of the front cover.

## Personalizing cover phone keys

 
In the cover phone, the left selection key in the standby mode is **Go to**. You can use the key as a shortcut to your favorite functions. To activate a function, scroll to it, and press **Select**.

- To add a function to the shortcut list, press **Options**, select **Select options**, scroll to a function, and press **Mark**. To remove a function from the list, select the function, and press **Unmark**.
  - To rearrange the functions in the list, press **Options**, and select **Organise**. Scroll to the function that you
- 2 Select the application you want to launch with the **My**


want to move, press **Move**, and select where you want to move the function.

## Personalizing the My own key


← Select **Desk** → **Tools** → **Control Panel** → **General** → **My own key**.

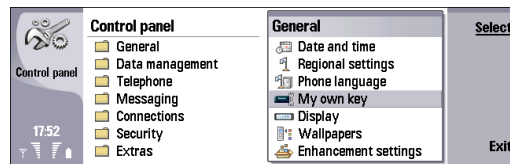

- 1 In the **My own key** window, press **Change**.

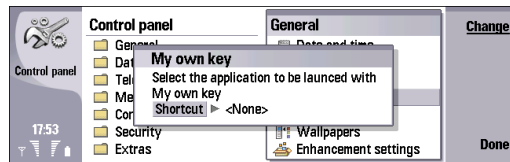


own key, and press **OK**.

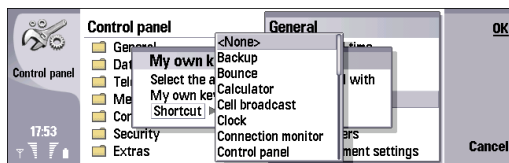 

- 3 Press **Done** to return to the *Control panel*.


# Personalizing profiles

 ➔ Select **Desk** → **Tools** → **Control Panel** → **Telephone** → **Profile settings**.

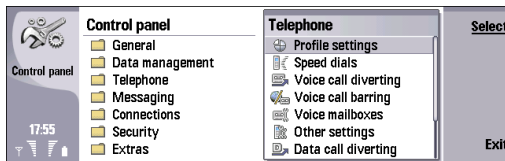


You can adjust and customize the device tones for different events, environments, or caller groups.

 - 1 Select a profile in the list, and press **Edit**. To create a new profile, press **New**. Define the settings on the different pages of the **Profile settings** dialog. Note that not all settings can be changed for all profiles.

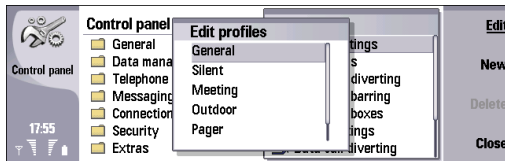

- 2 On the **Generic** page, define the following:
  - **Name** — You can rename a profile, and give it any name you want. The **General** and **Offline** profiles cannot be renamed.

 
- **Ringing type** — If you select **Ascending**, the ringing volume starts from level one and increases level by level to the set volume level.
- **Ringing tone** — Press **Change** to select a ringing tone from the list. If the sound file is located on the memory card or in another folder, press **Browse** to search for the file. To listen to the selected tone, press **Play**. If you have two alternate phone lines in use, you can specify a ringing tone for each line. However, the same volume level is used on both lines. If you change the volume level of one line, the other will change to match it.
- **Personal tones** — Select **On** if you want to use the personal ringing tones of callers that you have set in **Contacts**.

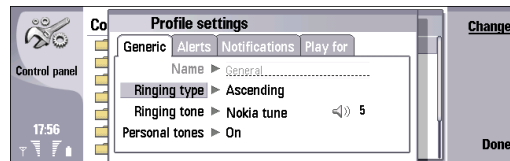

- 3 Press **Menu** to access the **Alerts** page, and define the following:
  - **Clock alarm** — Press **Change**, and select an alarm tone that is used with the alarm clock. If the sound file is located on the memory card or in another


folder, press **Browse** to search for the file. To listen to the selected tone, press **Play**. Similarly, specify an alarm tone for calendar alarms and received text, multimedia, and fax messages.

 - **Calendar alarm** — Select a tone for calendar alarms.
- **Received text message** — Select a tone for received SMS messages.
- **Received multimedia message** — Select a tone for received MMS messages.
- **Received fax** — Select a tone for received fax messages.

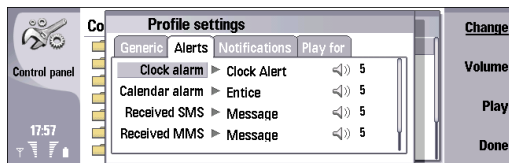


- 4 Press **Menu** to access the **Notifications** page, and define the following:
  - **Keyboard tone** — Set the volume level of the communicator keyboard.
  - **Telephone keypad tone** — Set the volume level of the phone keypad.

 - **Notification tones** — Set the tones made by the device when, for example, the battery is running out of power.

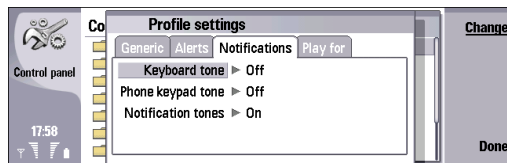

 
- 5 Press **Menu** to access the **Play for** page, and define the following:
  - **Play ringing tone for** — You can set the phone to ring only upon calls from phone numbers that belong to a selected contact group. Phone calls coming from outside that group will have a silent alert.

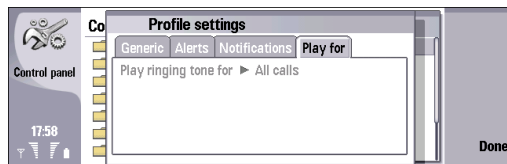




# Setting wallpaper

 ↩ Select **Desk** → **Tools** → **Control Panel** → **General** → **Wallpapers**.

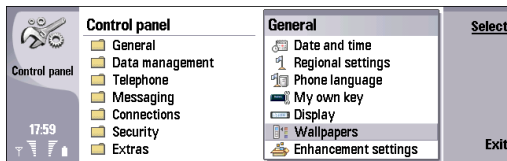

- On the **Desk** page, define the following:
  - Wallpaper** — Select **Yes** to use a wallpaper.
  - Image file** — Press **Change** to browse for an image. Pre-installed wallpapers are shown in the **Select wallpaper** dialog. To search for other files, press **Browse**. Note that by default only image files are shown. To view other types of files, press **Show all files**. To view the selected image, press **Preview**.

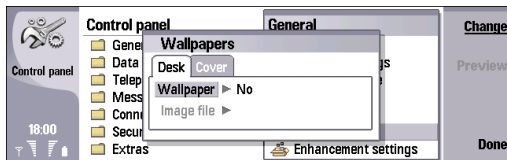 

- Press **Menu** to access the **Cover** page, and change the background image of the cover phone similarly.