

Nokia Battery Charging Stand DT-14

The charging stand allows you to charge a spare battery for your phone. The stand can be supplied with power from the AC-3, AC-4, or DC-4 charger or from the ACP-12 or LCH-12 charger when used with the CA-44 charger adapter.

To use the stand, place it on a stable flat surface, and connect the charger to the stand and to a power source. Check that the green indicator light flashes briefly. Place the battery into the stand so that the connectors of the battery are aligned with the connectors in the stand. The green indicator light starts to flash to show that the battery is being charged. When the battery is fully charged, the indicator light is continuously shown.

When the indicator light is not shown, even if the battery is in place and the stand is connected to the power source using the charger, the battery is not being charged. In this case, the battery is not properly inserted into

the charging stand, or it is damaged, or the battery temperature is too low or too high.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow the device to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

Copyright © 2005 Nokia. All rights reserved.