

## **Nokia Wireless Music Receiver MD-310**

## About your music receiver

With the Nokia Wireless Music Receiver MD-310, you can enjoy your favourite music in high-quality audio without the hassle of changing CDs or trailing long cables across the room. To play music straight from your compatible device, such as a phone or music player, connect the receiver to your audio system, and then connect your device to the receiver using Bluetooth. You can connect another device to the music receiver on the go, without stopping the music playing.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

### **Warning:**

This product may contain small parts. Keep them out of the reach of small children.

The surface of this product is nickel-free.

## About Bluetooth

You can use Bluetooth to wirelessly connect devices and accessories to other compatible devices, such as phones.

Devices do not need to be in direct line-of-sight, but they must be within 100 metres (330 feet) of each other, if both devices are Bluetooth Class 1 devices. If not, the devices must be within 10 metres (33 feet) of each other. The connection may be affected by obstructions such as walls or other electronic devices.


This device is compliant with Bluetooth Specification 3.0 supporting the following profiles: A2DP. Check with the manufacturers of other devices to determine their compatibility with this device.



**Note:** There may be restrictions on the use of Bluetooth technology in some countries. For example, in France, you are only allowed to use the Bluetooth technology of this product indoors. For more information, contact your local authorities.

## Get started

### Keys and parts

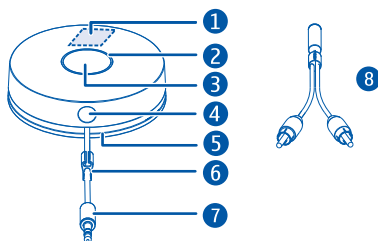

- 1 NFC area
- 2 Bluetooth status indicator light
- 3 Multifunction key
- 4 Power connector
- 5 Streaming indicator
- 6 Cable clip
- 7 Audio cable (3.5 mm)
- 8 RCA adapter cable

### Connect the music receiver to an audio system

Connect your music receiver to an audio system, such as your home stereo system, and enjoy your favourite music with high quality audio.

Unwind the audio cable as much as needed, and connect it to the audio input connector on your audio system.

If your audio system has separate RCA input connectors, you can also use the RCA adapter cable.

### Connect using the RCA adapter cable

Connect the audio cable to the RCA adapter cable, and connect the RCA adapter cable to the respective RCA input connectors on your audio system.

To keep the cables neat, use the cable clip to attach the audio cable to the power cable.

### Switch the music receiver on

Connect the power supply first to the wall outlet, then to the music receiver, and press and hold the multifunction key.

## Switch the music receiver off

Press and hold the multifunction key for 6 seconds.

When you disconnect a cable, hold and pull the plug, not the actual cable.

## Pair your device

### Pair and connect

Before using your music receiver with a compatible Bluetooth device, such as a phone, for the first time, you must pair and connect it to the device.

You can pair your music receiver with up to 8 devices, but you can only connect it to one device at a time.

### Pair the music receiver manually

- 1 Switch the compatible device and the music receiver on.
- 2 Press and hold the multifunction key. The Bluetooth status indicator light starts to blink
- 3 Within 3 minutes, activate Bluetooth on the compatible device, and set it to search for Bluetooth devices.
- 4 Select the music receiver from the list of found devices.
- 5 If required, enter the passcode **0000**.

### Pair the music receiver using NFC

With Near Field Communication (NFC), you can easily pair and connect your music receiver to your compatible device.

If the compatible device supports NFC, activate its NFC feature, and touch the NFC area of the music receiver with the NFC area of your device. The music receiver connects to the device automatically. For details on NFC, see the user guide of the device.



If the device does not support NFC, pair the music receiver manually.

### Connect the music receiver to your device

You can connect the music receiver to one device at a time, but you can change the connected device on the go.

When the music receiver is not connected, the Bluetooth status indicator light is white.

### **Connect to a device**

Press the multifunction key. The Bluetooth indicator light pulsates, and the music receiver connects to the last device it was used with. If the music receiver can't connect to the last used device, it connects to the next device on the paired devices list.

If the music receiver is not connected to a device within 3 minutes, it returns to standby mode.

When the music receiver is paired and connected, the Bluetooth status indicator light is steady blue.

If the connected device leaves Bluetooth range, the music receiver tries to reconnect for 3 minutes. If the device returns within range, the music receiver reconnects automatically.

### **Change the connected device**

Press the multifunction key. The music receiver connects to the next device on the paired devices list.

You can change the connected device any time, even when streaming music.

### **Clear the pairings**

You can clear the pairings on your music receiver.

Switch the music receiver off, and press and hold the multifunction key for 10 seconds. The red and white indicator lights alternate.

After the pairings are cleared, you must pair and connect the music receiver to a compatible device before you can use it again.

## **Stream music to your audio system**

Before you can stream music, you must connect your music receiver to your audio system, and pair and connect it to a compatible Bluetooth device, such as a phone.

### **Play music from your device**

Make sure the music receiver is switched on and connected to your compatible device, and select a song to play on your device.

### **Change the volume**

Use the controls of your audio system.

When you stream music, the streaming indicator light in the music receiver is activated.

If you get a call while streaming music from your phone, the music pauses and you can answer the call normally. The call is heard only through your phone, not through your audio system. When you finish the call, you can continue playing music.

## Product and safety information

### Charger information

This device is intended for use when supplied with power from the following chargers: AC-3, AC-11. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

### Warning:

Use only chargers approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. Use of unapproved chargers may present a risk of fire, explosion, or other hazard.

When you unplug a charger, hold and pull the plug, not the cord.

### Take care of your device

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not store the device in cold temperatures.
- Do not attempt to open the device.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device.
- Only use a soft, clean, dry cloth to clean the surface of the device.

### Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials.

## Copyright and other notices

### DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-20W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

CE 0979 ⓘ

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of particular products may vary by region. Please check with your Nokia dealer for details. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

/Issue 1.0 EN